 


Height adjustment of the driver's seat

By equipment type

- This operation is repeated a driver's seat right next to the lever.
- Pulling the lever will move forward with the entire sheet is increased.
 - When pushing down the lever, will move to the rear along with the entire sheet is lowered.

3

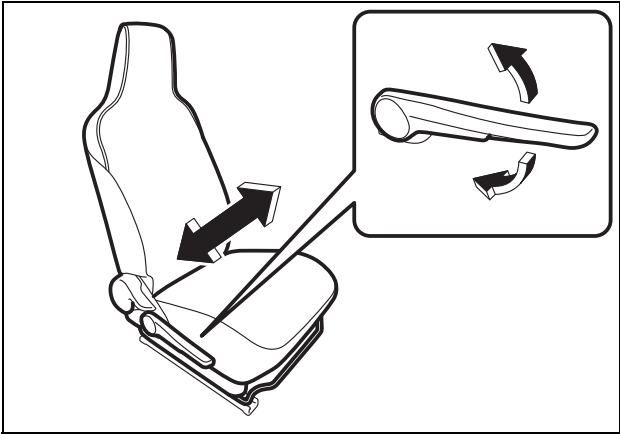


74P30230

- Sheet of the above diagram is a typical example. It depends on the car of the type.

Seat heater switch

By equipment type

- You can Mel that per the seat surface with a heater located in the seat.
- Engine switch ON Scan at the time of the
When you press the switch, the heater is activated, indicator light in the switch (1) lights up. Press it again to stop the heater.
 - Once you become a seat of your favorite temperature, please stop the heater.

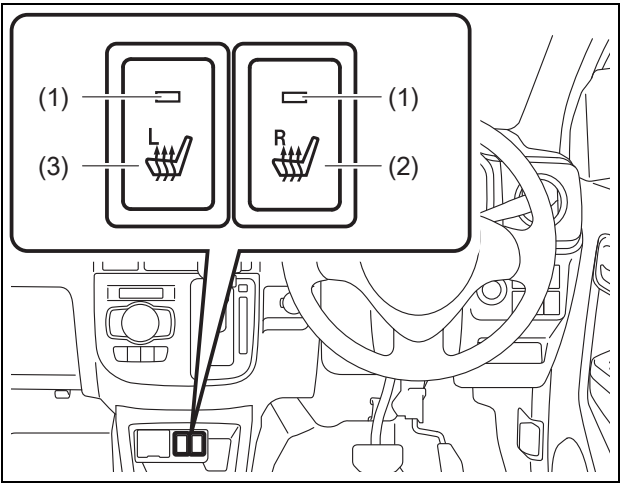

74P30240

(2) driver's seat heater switch (3) the front passenger's seat heater switch

- Illustration of the above diagram is a typical example. The number of switches depending on the type of your car is different from or to.

⚠ 注意

- If you use a long heater and the camera returns to the cause of the low - temperature burns (such as blisters).
- Such as a blanket or cushion, please do not put on a sheet having a high thermal insulation. It will be the cause of overheating.

注記

- Or place heavy luggage on top of the sheet, such as a needle or a nail or stab to the sheet, such as please.
- When you clean the sheet, Ben Jin, please do not use the cleaning liquid containing gasoline and alcohol of any solvent. The sheet surface and the heater will cause damage.
→ 6-4 page (interior of care)
- When spilled, such as water or juice, soft wiping with a cloth or the like, do you use from sufficiently dry.
- Because of the lead battery protection, it should be used when you are suffering from the engine.

⚠ アドバイス

Heater does not automatically stop. It will continue to operate and not turn off the switch.

Rear seat


Disconnect - Mounting preparative and height adjustment of the headrest

By equipment type

■ Position at the time of use

When used, lifting by hand headrest Chiage, and firmly fixed.

while using it

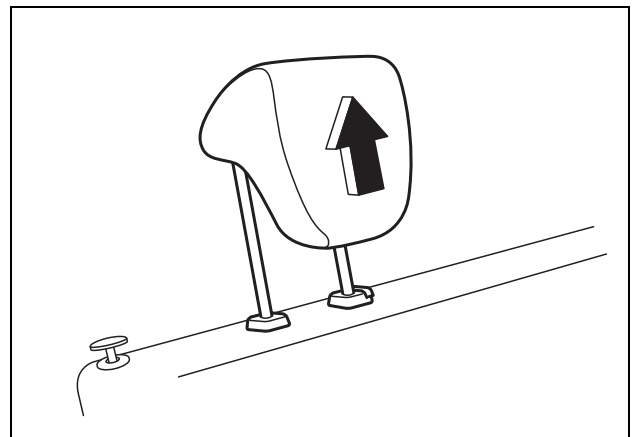


64L3073G

- The rear seat of the above diagram is a typical example. It depends on the car of the type.

■ Position at the time of storage

When storing, lower and press the headrest while holding down the lock button (1) to the bottom.

During storage

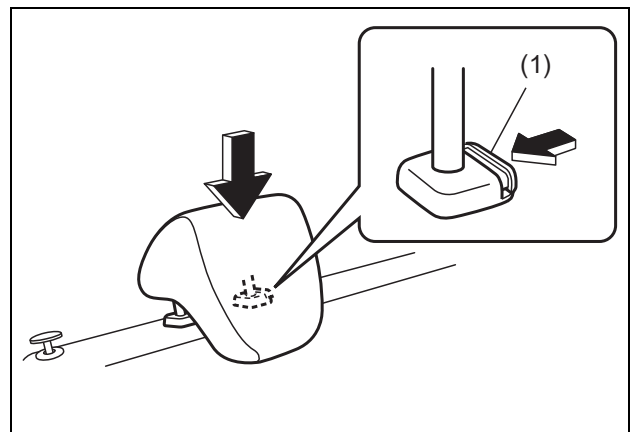

64L3074G

■ Removing

Press and hold the lock button (1) arguments you can unplug.



While removing the headrest, please do not put the person in the rear seat. (Except when the child seat fixed)

3



Headrest you removed in such children for the seat fixed, please do not leave in the room. For example, when multiplied by the sudden braking hit, such as the passenger and things and can cause lead to unexpected accident.

■ Attaching

The longitudinal direction of the headrest do not confuse so, insertion to the position to be fixed, and the adjustment of the height.



• Headrest, please firmly fixed. Also, please do not attached to reverse around the headrest. Header dressed is not the original effect exhibit can.

If you install a headrest to reverse back and forth, it can not be the height adjustment of the headrest.

- When attaching the child seat, since the children seat are prevented from striking the headless bets, please remove or adjust the highest position within the range that can secure the headless strike. In a state in which the headrest hits can cause damage, such is securely fixed your child (s) for the seat, the child, for example, when the collision suffer serious injury.

Backrest defeat of the way

When the defeat of the back to the front, you example luggage compartment is widely used.



Please do not put a person on top of the defeated backrest and luggage compartment. Brake and acceleration, such as when the collision, there is a risk of thrown out is by injuries.




To move the backrest, Dari do Hasa the hands and feet, please be careful not to or against the body.

■ Passenger type vehicles

Defeat the way

- 1 A headrest (equipped by type) to adjust to the number one position lower.
- 2 Lay the seat belt buckle (1) Previous person.
- 3 Back shoulder portion of the locking knob (2) to release the pulling up the lock, tilt the seat back forward.
 - If the rear seat of the headrest (by type instrumentation Bei) hits the front seat, please move the front seat forward.
 - Lock knob must be Ru pulled up to the left and right both.

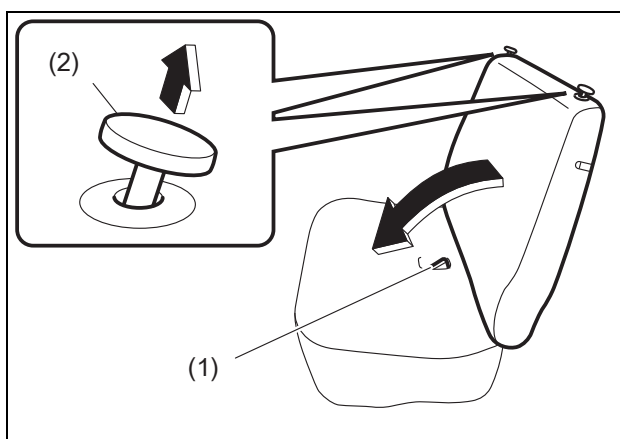


74P30250

- The rear seat of the above diagram is a typical example. It depends on the car of the type.

注意

- When the lock knob is pulled once, it is or will remain unlocked. By, for example, defeated straining cause again the backrest once before, please sure that the backrest is securely fixed.
- Please do not put your fingers on the back the back of the lock parts (3). There is a risk of injury.
- The luggage of a fixed, please do not use the backrest back of the lock parts and backrest locking hook (4). Also, please do not let wear with foreign matter such as sand to lock parts and hooks. Lock parts and bent or damaged or hook, Otherwise, there is the backrest can not be fixed.

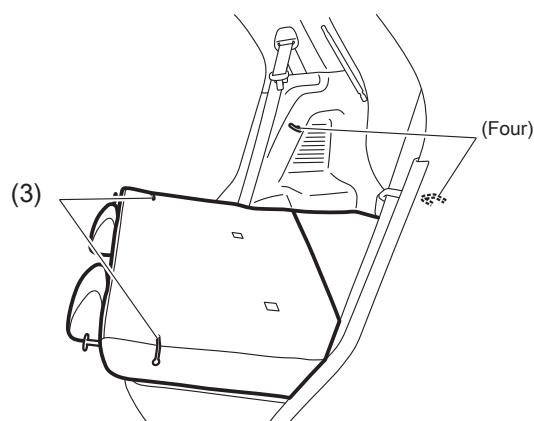

74P30260


- The rear seat of the above diagram is a typical example. It depends on the car of the type.

Cause the way


1 Seat belt, make sure that it is in the next state.

- In front the hands of the backrest fixing hooks (4) (the belt causes the sheet in a state in which the back side of the hook, the seat belt can not be used)
- Not applied to the hooks (4)
- There is no twist in the belt

3

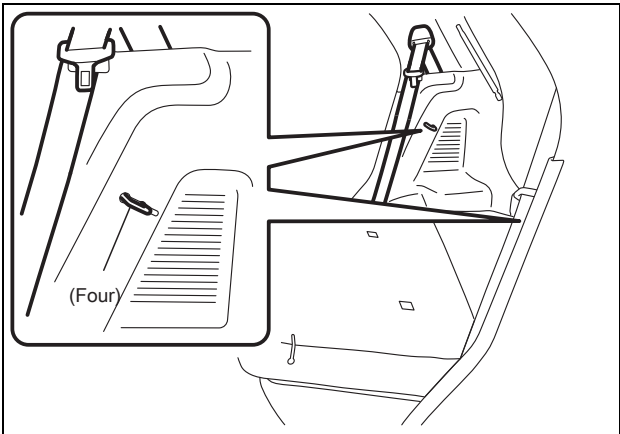

74P30270

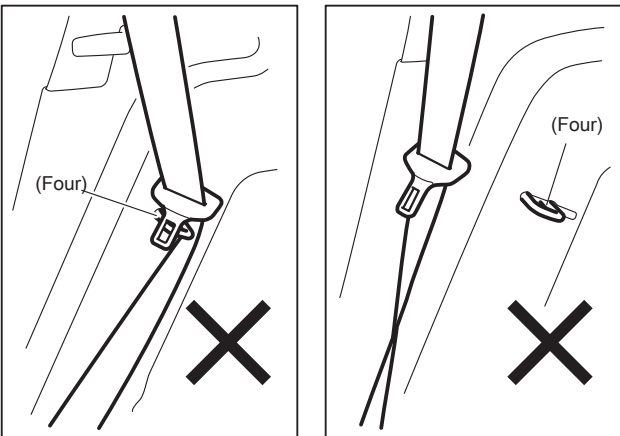

74P30280




警告

As the belt or there is Gillet or, I have hanging on a hook, there is a possibility that the hurt is caught to the hook when you Oko sheet.

2

Causing the seat back, and push back direction of the car to a position that is fixed.

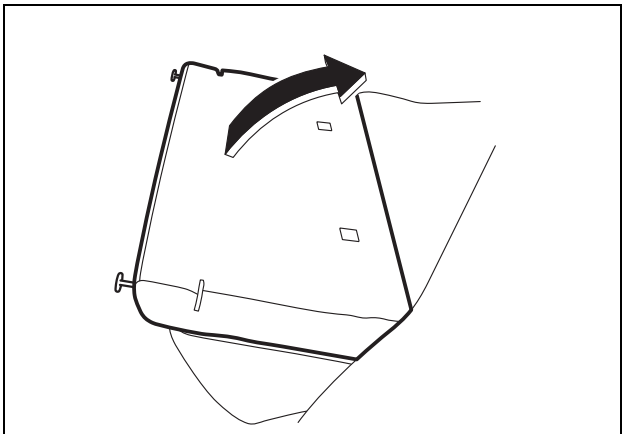

74P30290

- The rear seat of the above diagram is a typical example. It depends on the car of the type.




注意

Shaking the backrest back and forth, please ensure that it is securely fixed. If fixed is uncertain, fell to the sudden backrest is before while driving, there is a Re emesis unexpected injury.

Commercial type vehicles

Defeat the way

Backrest shoulder the left side of the lock knob (5) to release the pulling up the lock, and then push it down to the front of the backrest.

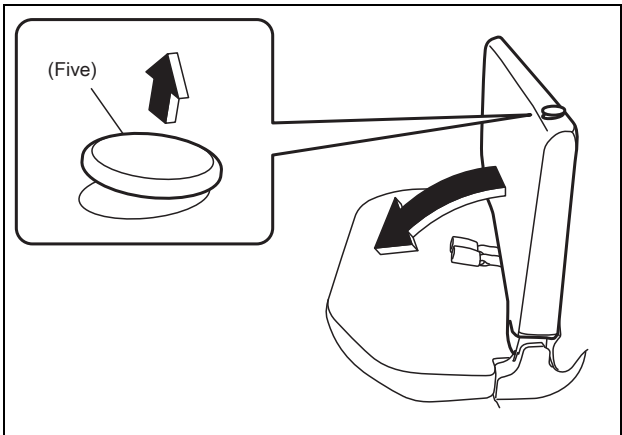


74P30780

⚠ 注意

When the lock knob is pulled once, it will remain lock is released. Back even if such cause again defeated before the sauce once, Please make sure the backrest is securely fixed.

Cause the way

Causing the seat back, and push back direction of the car to a position that is fixed.

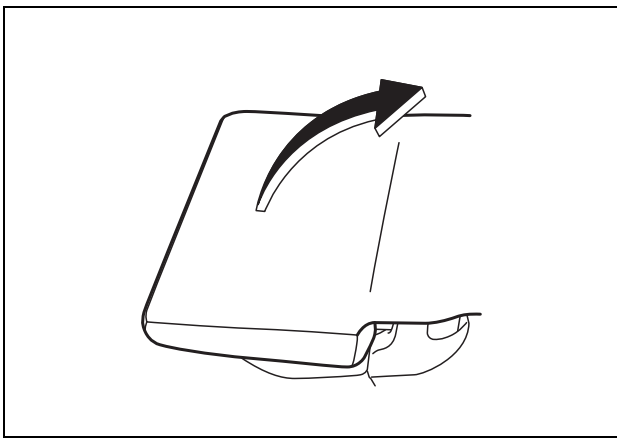

64L30440

⚠ 注意


Shaking the backrest back and forth, please ensure that it is securely fixed. If fixed is uncertain, fell to the sudden backrest is before while driving, there is a Re emesis unexpected injury.

The seat belt

Sit in the seat in the correct position, if you do not wear a properly seat belt, seatbelt can not exert the original effect. When you wear a seat belt, please note the following of this.

- Adjust the seat to the correct position, you sit deep causing the upper body.
- You wear so that the belt is not twisted.
- Waist belt is subjected to as low as possible position of the waist.
- Shoulder belt is put in the center of the neck and shoulder.
- Make sure that the belt is not twisted, remove the slack.

→ 3-28 page (correct driving position)

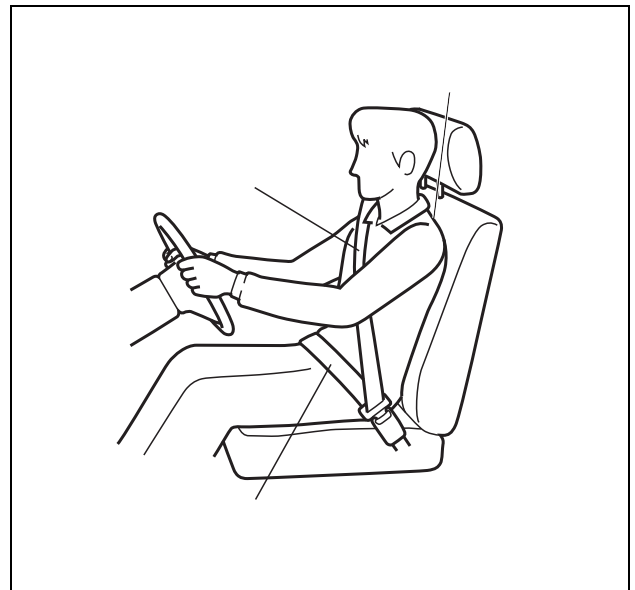

70K216

⚠ 警告

- Please wear a seat belt correctly before traveling. When adjusted or or wear while driving, there the unexpected accident can cause costs fear.
- Do not tilt more than necessary the backrest. In addition, Do not slack the belt, such as clothespins and clips. The seat belt can not be exhibited the original effect.
- Please let me wear a seat belt in the passenger everyone in the front passenger seat and the rear seat.

Also wear a seat belt children

→ 2-6 page (when you put the child)



Please do not Asobase in the seat belt the children.
When you are playing with Runado winding a belt on the body, there is a danger of being choked soil serious injury or be. Please to disconnect the belt with a pair of scissors in the unlikely event of.



80J028

If you are pregnant or disease



- If you are pregnant, please wear a seat belt even those who have the disease. However, because there is Ruosore is locally strong pressure at the time of the collision, please review the notes and consult a physician.
- If you are pregnant, you only do a waist belt abdominal avoided only in the lowest possible position of the lumbar region. Shoulder belt, please by sea urchin wear applied to the chest to avoid the abdomen from the center of the neck and shoulder.



80J075

Seat belt warning buzzer

The passenger side is equipped by type

It is a buzzer in order to prevent the seat belt wear forget the front seat.

- Do you have to start traveling over the engine, and the first to not wearing a seat belt when the vehicle speed is equal to or greater than about 15 km / h, when the seat belt warning lamp in the meter is switched to flashing from the lighting both the seat belt warning buzzer will sound to the cross-sectional-sustaining.

→ 3-73 page (seat belt warning lamp)

⚠️ アドバイス

- If you wear a belt, warning light will go off. In addition, when the warning buzzer is sounding, also it will stop the buzzer.
- Warning buzzer is also not wearing a belt, it Ri Thomas after that continued to sound for about 95 seconds. However, the warning lamp is switched on **lit from blinking** **While Tsu En Jeans switch does** not turn off until you, or (OFF). **LOCK**
- In the case of the passenger side, it does not sound a buzzer when it is not divided be a passenger in the front passenger seat. However, there are times when the sound and have put the luggage in the passenger seat.
- Warning light is the driver's seat side and the passenger's side also used.


Adjusting the length of the seat belt

Seat belt, does not or need to be adjusted in length. Belt is Shin contraction according to the movement of the body, when subjected to a strong shock is automatically belt is locked to secure the body.

How to wear a seat belt

■ How to wear


- Grasp the seat belts with the tongue plate (1), issue-out slowly pull the belt. It takes a twist of the belt.

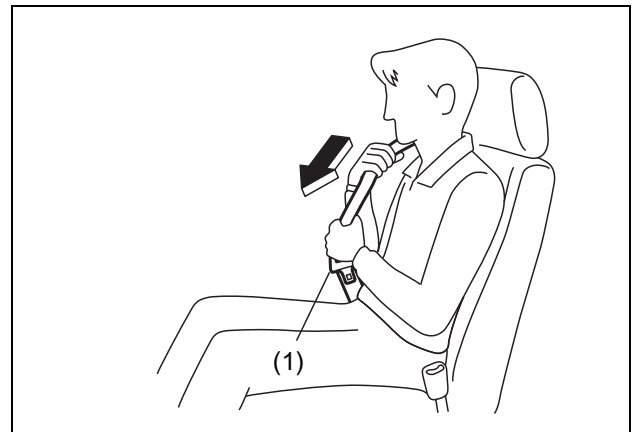

⚠️ アドバイス

Belt Itoki is a drawn out have been locked, pull it out again loosen once. If you do not pull out still, loosen from pulling strongly once belt, sure to pull out slowly again.

- Together in such a way that straight to the tongue plate (1) to the insertion port of the buckle (2), and then insert firmly until it clicks into place.

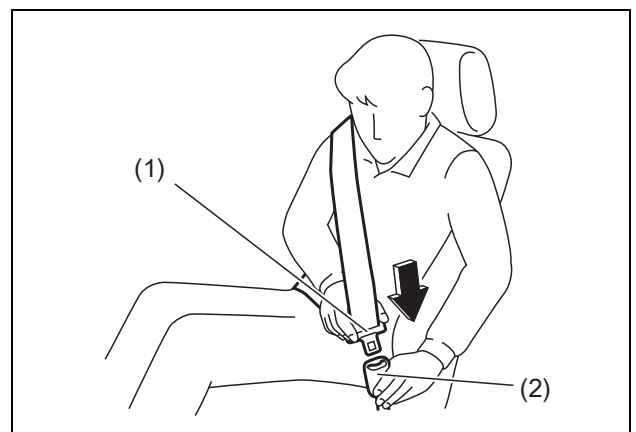

3

The waist belt, and subjected to the lowest possible position of the waist.

Four


The shoulder belt, put in the center of the neck and shoulder.

Five

Make sure that the belt is not twisted, remove the slack.

■ When you disconnect the

Press the buckle of the button (3). Because you Modosarema seat belt is automatically wound, accompanied by a hand on the belt and the tongue plate, please return slowly.

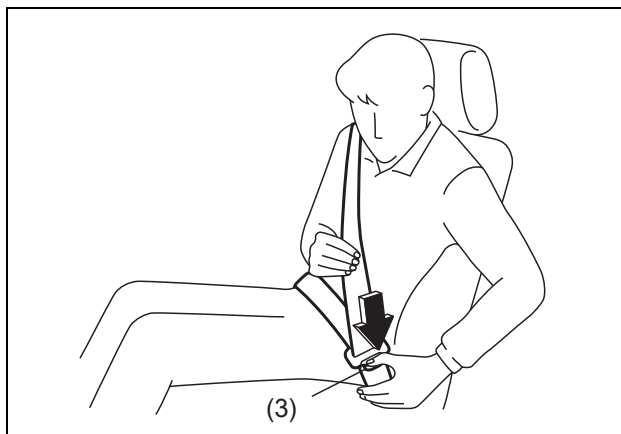

80J1328

アドバイス

When the belt is twisted, it may not be taken up when the outside of the belt. Please make sure that the slack is wound also etc. without the belt.

To wear a seat belt properly




- When Ru twist and Tarumigaa to the seat belt, there is a risk that is locally pressure when subjected to shock.
- When the belt is applied to the abdomen, there you have it you that is strongly compressed when subjected to shock.
- If the belt is not applied firmly to the shoulder, there is a risk of being out-throw up before when subjected to a shock.

Handling and care of the seat belt

Handling

In the case of passenger type vehicles, Itoki is a place the person in the rear seat, please take the seat belt (1) and other packaging plate (2) to the base Rutogaido (3) as shown in the following figure.

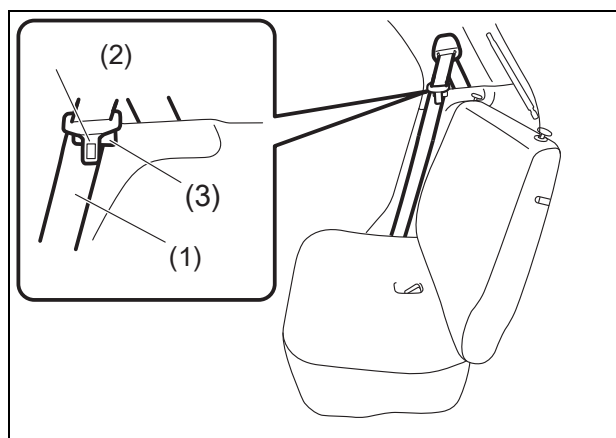

74P30790

- The rear seat of the above diagram is a typical example. It depends on the car of the type.



- Fray and abrasions to the seat belt, when there is a Switching Operation scratch, please replace the belt.
- When the buckle does not work properly, please have it inspected by Suzuki service factory.
- When a strong force in the belt is applied in collision, even if there is no abnormality on the surface, may function is impaired. Please replace the belt.
- Or contains foreign matter to the inside of the buckle, when he or spilled drinks only matter, because there is a possibility that the seat belt does not exert the function correctly, please have it inspected in Suzukisa screw factory.
- Do not pinch the belt to the door. Before closing the door, please make sure if they were unwound without belt backlash Rumi.
- Do not alter the belt, please do not remove.

Care

The method of cleaning, be the same as that of such fabric.

→ 6-5 page (fabric, vinyl leather,
Care, such as resin parts)



Bleaching agents, solvents, do not use the dye. Stains, discoloration, next to the cause of the reduction in strength, seat belt There is a risk that does not exert the function normally.


Seat belt pre-tensioners (Front seat only)

By equipment type

Seatbelt pre-tensioning donor and is

When the engine switch is in, a **ON** become the following situations, it takes up the shoulder belt in an instant.

- -Out door received a strong shock from the car forward.
This is linked with the driver and front passenger SRS Eabaggushi stem.
→ 3-45 page
(Operation of the SRS air bag system)

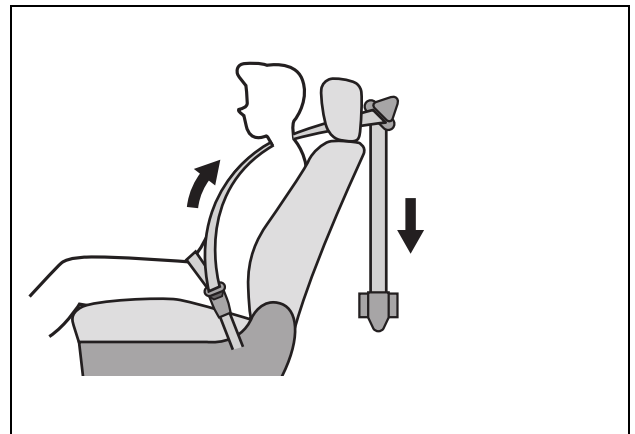

80J1018

アドバイス (Advice)

Actuated pre-tensioners and the airbag can not be re-used. Please replace Suzuki service factory.


In order to function properly

Do not defeat the parts that affect the function of the seat belt pre-tensioners. Or it is wound into a tree and the seat belt is not stunning, it may be or are no longer taken up properly when needed.

→ 2-35 page (mounting of components, taken
Disconnect, when the repair)

3

SRS air bag warning light

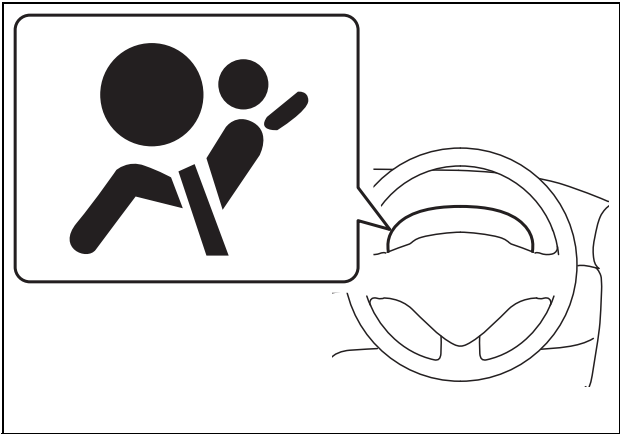

81M30841

Located on the meter panel.

- Seatbelt pretensioner, when the SRS air bag is activated, or the electronic control system Different When the ordinary is, engine switch Lights when.

| ON |

→ 1-10 page (warning light and display light)

Waste and scrap

Working to have no seat belt pre-Ten Shona, it must be discarded from is operated in the determined procedure.



注意

And when to discard the pre-tensioner, when scrapping the vehicles are, consult your Suzuki dealer or Suzuki agency.

The impact reduction of seat belt
Mechanism (front seat only)

Seat belt force limiter and is

 
By equipment type

And a strong shock from the front direction of the car, seat belts force limiter of the seat belt take-up within the device is activated, by feeding the Katabe belt so as not to be subjected to loads of more than a certain the occupant, to mitigate the impact.

Sheet and the belt variable Fosuri limiter

By equipment type


A strong shock from the front direction of the vehicle, seatbelts variable force limiter of the seat belt winding the device is operated, by feeding the shoulder belt so as not constant over load multiplication membered into two stages, the impact and relaxation.

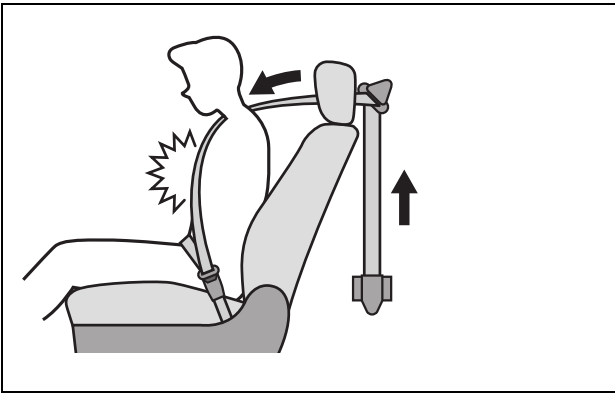

80J1039

**警告**

 Seat belt undergoing a strong impact, adhere to the resin melts at friction strong grinding belt shoulder anchor portion (1) and data ring plate portion (2), will belt slip. In such a case, the seat belt can not exert its original function. Please be replaced with Suzuki service factory.

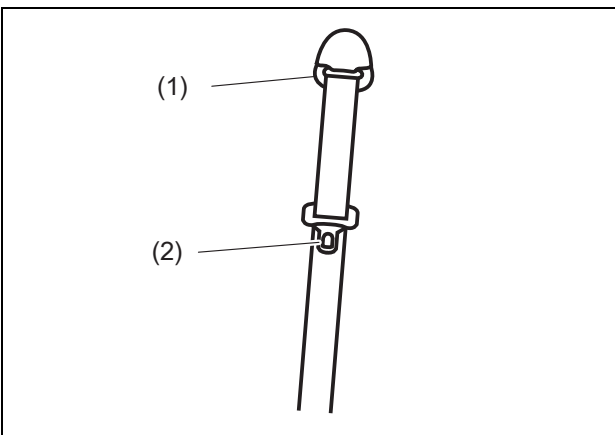

74P30320

The SRS air bag car When driving

SRS air bag system and is

The SRS stands for Supplemental Restraint System (Supplemental Resutorei cement system), is the meaning of auxiliary restraint system.

 
■ Driver and front passenger SRS airbag Gushisutemu

When the engine switch is, it receives a strong shock from the car forward, at the time of the strong collision, such as face hits the steering wheel and the passenger's side instrument panel also wearing a seatbelt, the driver and front passenger SRS air bag has become a bulge structure in an instant.

- Driver and front passenger SRS air bag system is, SRS air bag inflated is the role of the cushion, the driver's seat, the front passenger seat occupant wearing the seat belts mainly have the effect of reducing the impact to the face you. Seat belt is sure to wear.

→ 3-37 page

(How to wear a seat belt)

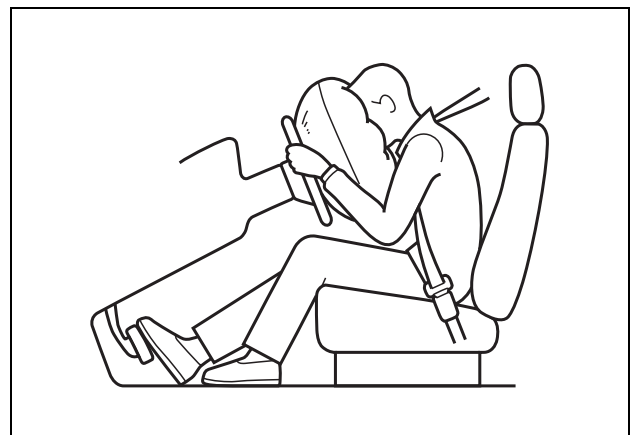

80J090

警告

- SRS air bag system is not intended to replace the seat belt. In conjunction with the seat belt, it is the auxiliary restraint device for a seat belt to exhibit the effect of it. Therefore, even if a car SRS d A bag system is equipped with, please wear a seat belt without fail.
- Please properly wear in the correct posture seat belt. If you do not wear a seat belt properly, the effect of the SRS airbags can not be sufficiently exhibited.



51K0007

 
アドバイス

Passenger's seat SRS air bag, even without a personnel riding in the passenger seat, you bulge driver's seat SRS airbags and at the same time.

Display and storage location


Has been yield paid to the part where there is a display of "SRS AIRBAG".

■ Driver's seat SRS air bag

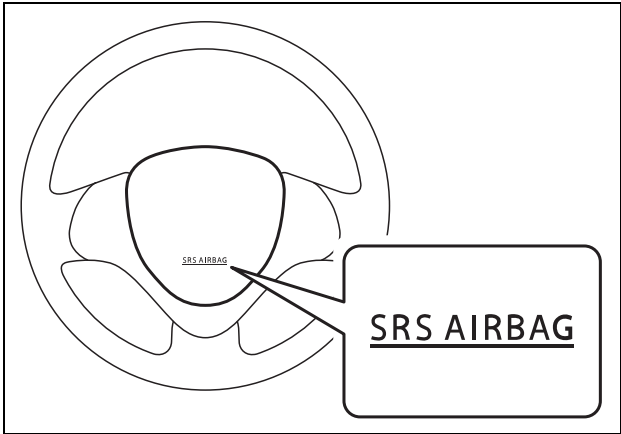

74P30750

 ■ Passenger's seat SRS air bag

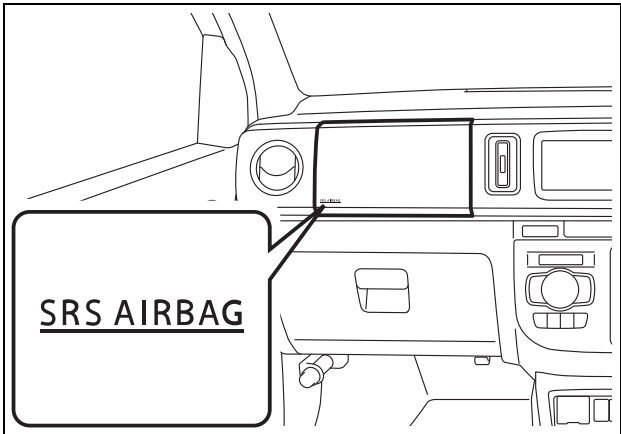

74P30330



 
- Italy Doing so may damage the storage portion of the air bag, it is when you or there is a crack, please replace Suzuki service factory. The air bag might not working correctly.
- Or a nasty blow to the storage location of the air bag, please do not to shock. Airbags is to bulge by mistake Ri is not working properly, there is a danger of being unexpected injury.

Seating posture

The driver and the front passenger seat of the passenger, sitting deep in the seat, please take lightly the back to back. In addition, please adjust the position of the seat so as not too much out in front of the seat.

In particular, the passenger in the front passenger seat, move the seat to the rear to a position that does not interfere with the passenger in the rear seat, please sit or we separated as much as possible the front passenger seat SRS air bag.

→ 3-28 page (correct driving position)

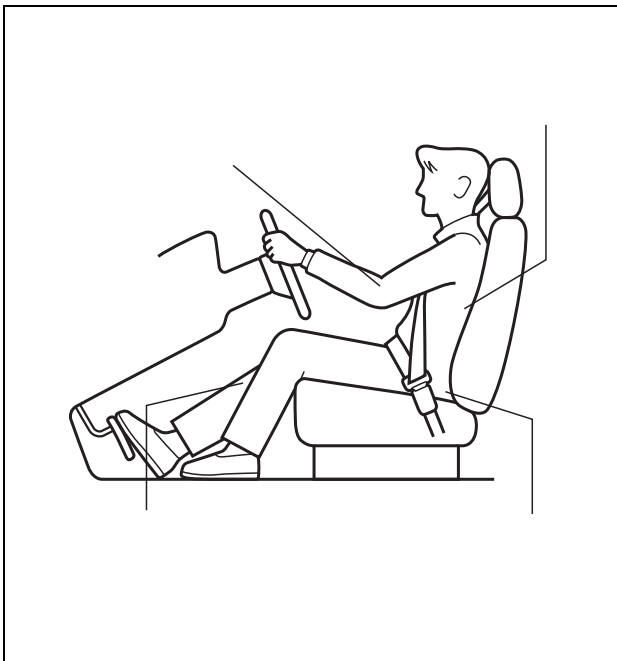

80J177

Attachment of the child seat

- 2-8 page (use of children for seat For use)
- 3-56 page (child seat Fixed by the seat belt)
- 3-50 page (child seat For selection)

Of SRS air bag system Handling

The SRS air bag system successfully in order to function

If the SRS air bag is there are things in the range of swell, what is the SRS air bag or blown there is to Ruosore or no longer inflated to normal.



- Do not modify the suspension. When the vehicle height and hardness of the suspension changes, the cause of Ayamasaku movement of the SRS air bag.
- When mounting and grill guard in front of the vehicle, please consult your Suzuki dealer or scan Suzuki agency. Modifying the front portion of the vehicle and can cause SRS air bag will not function properly.
- When installing and radio, please consult your scan Suzuki dealer or Suzuki agency. The radio wave of the wireless unit is in the SRS air bag computer
There is a risk that give an adverse effect.

警告

- Even in the accident to the extent that SRS air bag does not work, after the accident, please have it inspected in Suzukisa screw factory. When the system of the original function is impaired, there is a possibility that the effect of the SRS air bag can not exert enough when emergency.
- SRS air bag is, the addition of hand parts that affect the function, bulging in the absence think Igake, you may benefit no longer operate normally when necessary. The following cases, so you have a negative impact on the system, was Suzuki dealer or in advance, please consult your Suzuki agency.

- Removal of the handle, Handoruma

Wari repair, such as

- Instrument panel around, center console

Repair of repair and electrical wiring in the vicinity of Le

- Attachment, such as audio equipment

- Contact painted sheet metal around the dashboard

Preliminary repair

- Before the replacement of the seat and the seat or

 
Repair of split

- Repair around the center pillar

For driver's seat SRS air bag

警告

- By, for example, leaning on the handle, please do not close hands and face, chest and the SRS air bag housing portion. A strong shock when the SRS air bag is activated, there is a danger of being a serious injury.
- Replace the handle, put a sticker on the pad portion of the handle, paint the color, please do not remodeling, such as covered with a cover. There is a possibility that the SRS air bag will not inflate to normal when emergency.

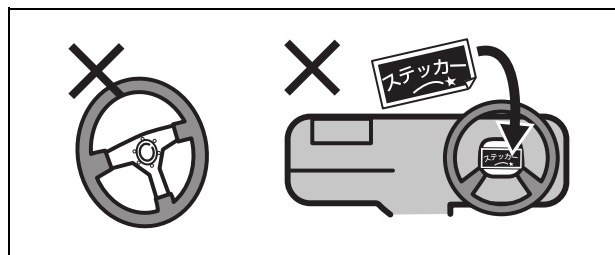


80J094

For the front passenger seat SRS air bag

警告

 - And when you ride in the front passenger seat, when you put your child, please be sure to observe the following things. With a strong impact when the guarded not and SRS airbags is activated, there is a danger of being a serious injury.
- SRS air bag housing portion of the instrument panel
Or place the limbs in, please do not close the face or chest.
- The children SRS air bag housing portion
Or to stand in front of, please do not sit hugging on top of the knee. Your child (s) is placed on the rear seat, please let wear the seat belts.

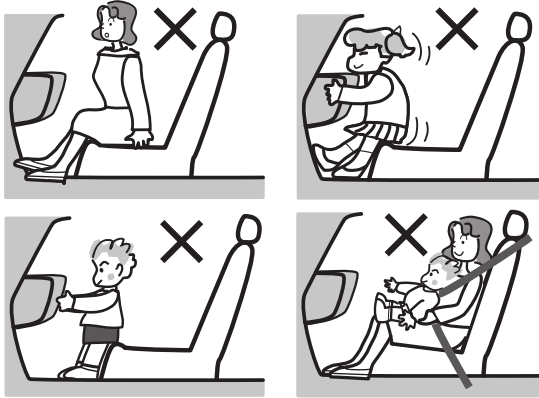

80J095

- In the case of commercial type vehicles, seat belt

Children not bet can be correctly installed, after you have a child seat, please put in the front passenger seat. In addition, the front passenger seat is lowered behind the most, children's seat, please attach to the positive.

- In the case of passenger type vehicles, seat belt

Children can not wear the door correctly, after you have a child seat, please put in the rear seat.

 
→ 2-8 page (sea for children

For use of the door)

→ 3-50 page (sea for children

On the execution of the selection)

- The air bag housing portion and its surroundings, please do not painted the color or put a sticker. In addition, accessory and fragrances, or place or install a such as ETC on-board unit and Portable car navigation systems, please do not leaning and umbrella.

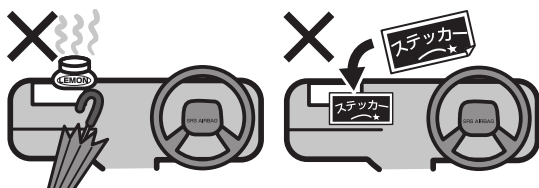

80J096

- Please do not install and A on the front glass and room mirror Kusesari (except for the Suzuki genuine products).

The operation of the SRS air bag system

When activated

- The air bag is lighththeadness marks instantly at a high temperature of gas. Depending on the occurrence and the other passengers in the attitude of the accident, you may bear abrasions, bruises, burns etc. and the like.
- Air bag bulging has become immediately to the grain-free structure.

警告

After the air bag is activated, do not touch the components of the air bag. Immediately after the operation component is hot, there is a risk of burns.

注意

Air bag comes out the gas, such as white smoke and a loud sound when activated, but it is not a fire. There is also no impact on the human body.

However, when the residue is attached, such as the eyes or skin, please sink wash as soon as possible water.

People with sensitive skin,

 
You may want to rarely irritating to the skin.

アドバイス

Actuated pre-tensioners and the airbag can not be re-used. Please replace Suzuki service factory.


It operates Troubleshooting

- Driver and front passenger SRS air bag
- The collided structure without deformation and movement be (such as concrete walls), when the front collision at about 25 miles / h or faster

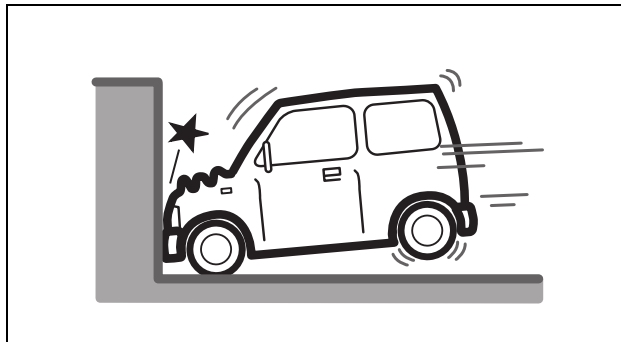

80J097

 - From the direction within the front about 30 ° of the vehicle, when subjected to pre-view the same strong impact

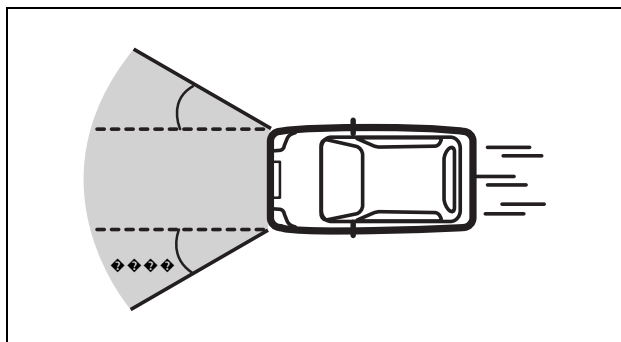


80J098

It may be operated Troubleshooting

- Driver and front passenger SRS air bag


Strong shock to the lower part of the vehicle body Upon receiving the, it works in many cases.

 - When the collision, such as a curb or median strip

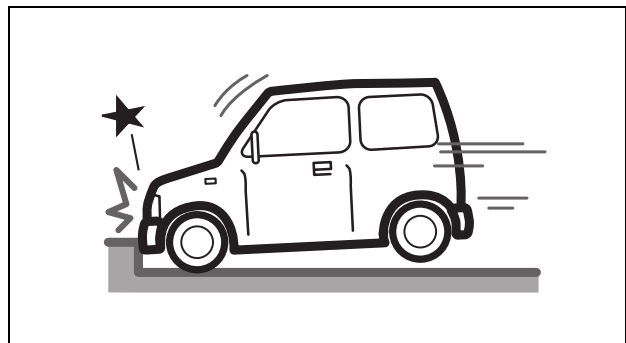


80J099

 - When it fell, such as in a deep hole or groove

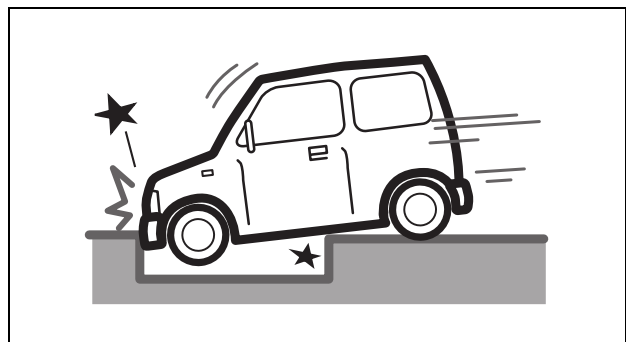

80J100

 - Or hit the ground to jump, when you or fallen from the road

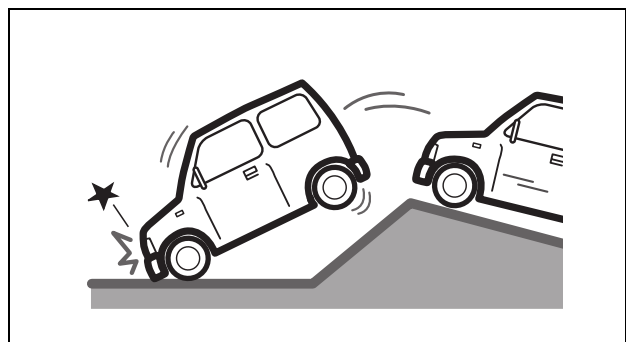


80J101

Troubleshooting, you may want to operating shock and strong


■ Driver and front passenger SRS air bag

Behind, a collision from the lateral direction, but in such rollover does not basically working, you may want to rarely operated shock is strong.

 
- Collision from behind

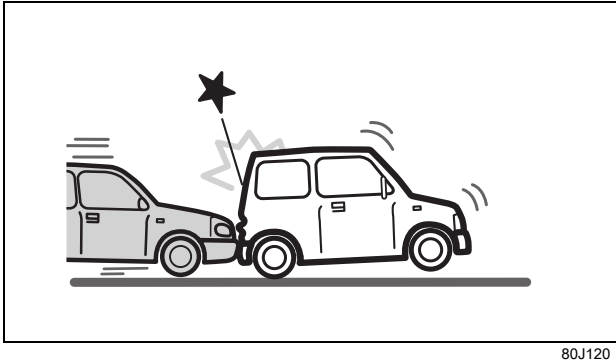

- Collision from the lateral direction

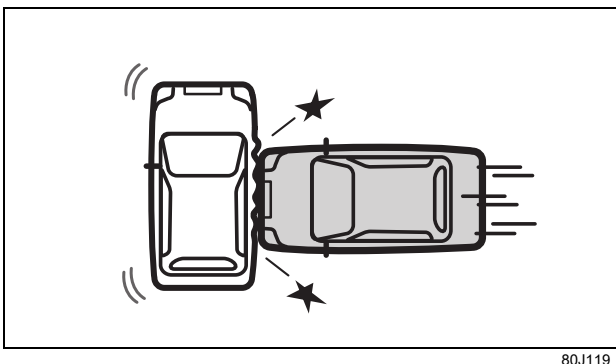 

- When the rollover and overthrow

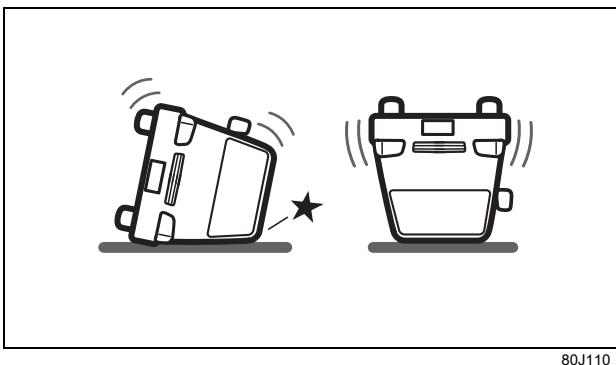 


It may not work Troubleshooting


■ Driver and front passenger SRS air bag

Or opponent moves collision, when the impact to or vehicle body is large deformation is absorbed, or when the angle of the collision is greater than about 30 ° forward, often does not work.

 
- The weight of the car of the same order that stopped, about 50 miles / h, or when the collision from the front with less velocity

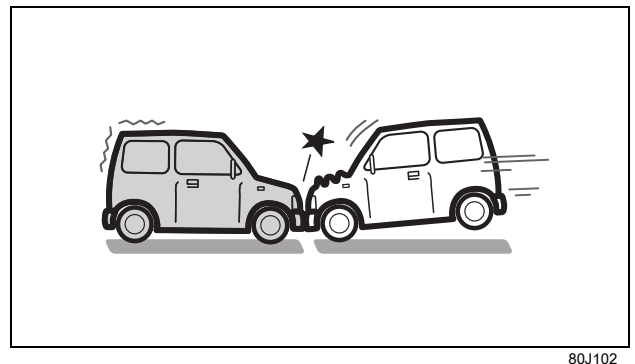

 - When I slipped into, such as under the truck bed

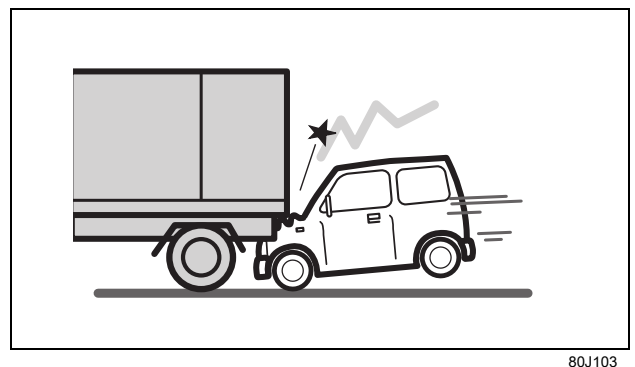


 - When the collision such as utility poles and trees

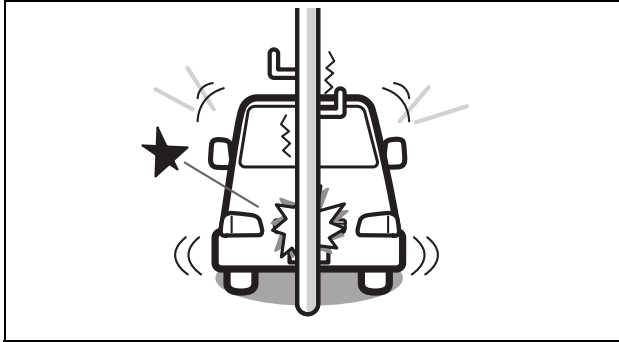


80J104

 - 3
- At an angle greater than forward about 30 degrees, upon impact like concrete wall or guardrail

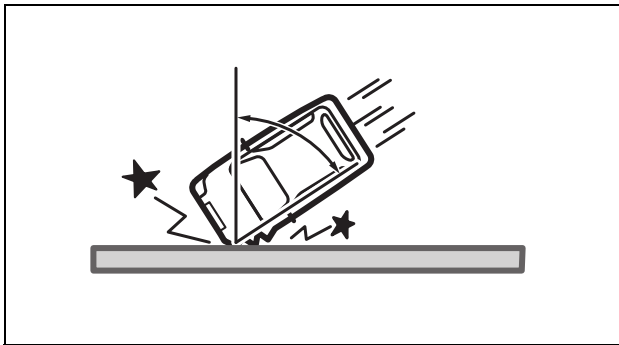


80J105

 - At the time of a collision deformation, when there is time which collides head on solid wall also impact speed such as concrete which does not move is less than about 25 miles / h

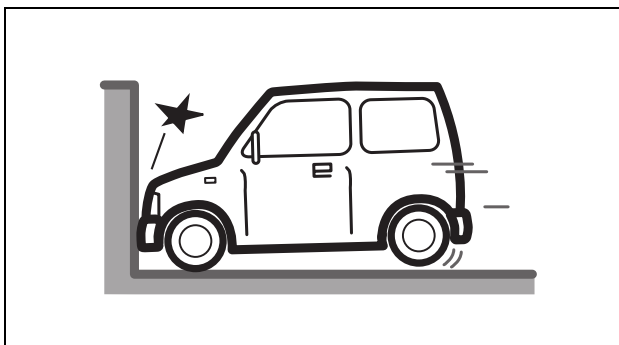


80J106

 - Can the direction of the collision is deviated from the center of the vehicle (offset collision)

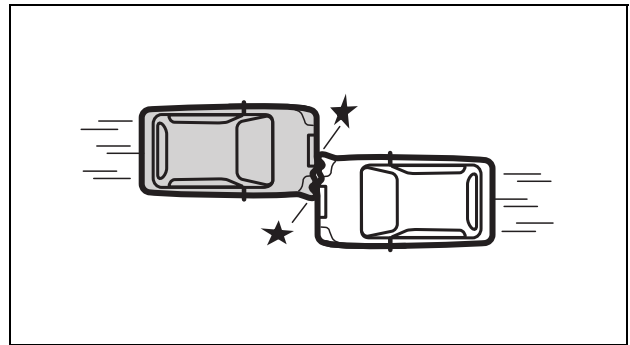

80J107

 SRS air bag warning light

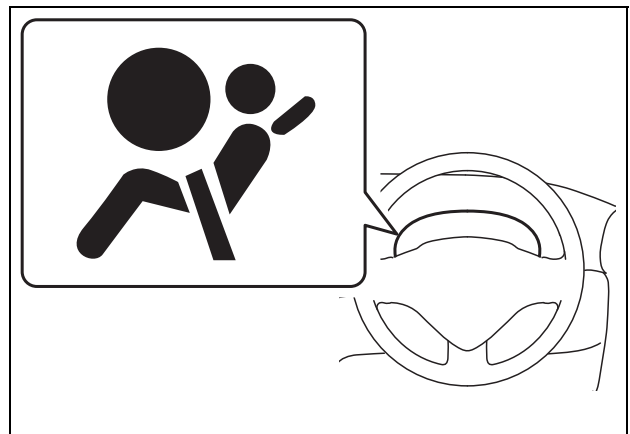

81M30841

Located on the meter panel.

- SRS air bag, when the seat belt Purite Nshona is activated, or the electronic control system Different When the ordinary is, engine switch Lights when.

| ON |

→ 1-10 page (warning light and display light)

Waste and scrap

When you discard the air bag that is not in operation, it must be discarded from is operated in the determined procedure.



80J112



注意

And when to discard the air bag, when you scrap the vehicles are, or Suzuki dealer, please consult your Suzuki agency. If not handled correctly, puffiness when the air bag is not think Igake, you may be injured.

Event data recorder And (EDR) is

This car is equipped with a computer to control the SRS air bag system. This computer, SRS along with the image A bag system is always diagnose whether you are operating normally, at the time of the accident, such as the air bag is activated, the event data recorder that records the vehicle data of the collision point and the before and after (EDR) equipped with the system.

Data to be recorded on the EDR

- Failure diagnostic information of the SRS air bag system
- Information about the SRS air bag deployment

アドバイス

- By such as the type of car, data that will be recorded is different.
- EDR is, unlike a typical data recorders, audio and video, such as conversation is not recorded.

3

For disclosure of the EDR data

Third party Suzuki and Suzuki has been commissioned, the data that has been recorded in the EDR, it may receive, such as improvement of vehicle collision 突安 overall performance is for the acquisition and utilization for the purpose. It should be noted that the third party that Suzuki and Suzuki has been commissioned, except in the following cases, does not disclose or provide the acquired data to a third party.

 
- If there is a consent of the car of the user
- Laws and regulations, a court order if the other based on the enforceable request
- Such as performing statistical processing, the processed data can not be identified by the user and the vehicle, provided such research institutions if

The selection of children's seat
about

- Children's seat is, in terms of read well this item, please choose the appropriate that matches the child's age and physique.
 - 2-6 page of" When you put the children "Please also read carefully.
 - Passenger type vehicles, equipped with ISOFIX compatible child seat fixed-only bracket adapted to the new safety standards for enforcement October 1, 2006 (ISOFIX anchor and Tezaan car). (However, the commercial type vehicle is not equipped)
- 3-58 page (ISOFIX corresponding Chai Rudoshito fixed-only bracket)

For certification mark of your child (s) for the seat meet the criteria of the ECE R44

ECE R44 to your child (s) for the seat meet the criteria of (※ 1) is, you can see the following certification mark.

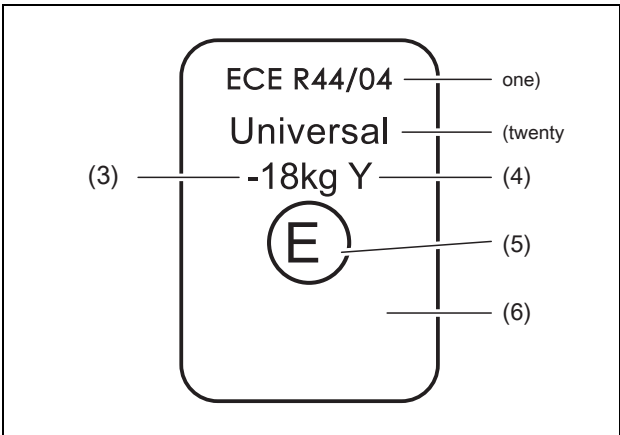

51K1022

- (1) laws number
- (2) child seat category of (※ 2) (3) body weight range (4) of the children as a target specifications of the device
- (5) child seat approved the country code (6) approval number of the children's seat

- Certification mark of the previous diagram is a typical example.

※ 1 The ECE R44, children's seat

International laws and regulations concerning. ※ of 2 previous figure " Universal "It is a general-purpose mosquito It represents that it is the approval of Tegori.

アドバイス

This car of Suzuki genuine child seat complies with the standards of ECE R44.

Of sheet fits your child (s) on the basis of ECE R44, how to look at the seat position-specific compatibility list

- 3-53 page (suitable for the standard of ECE R44
- Of children for the sheet to be if, seat position 置別 compatibility list)

■ For mass group


- For children meet the criteria of the ECE R44 sheet are classified into the following five types.

The weight of the mass group children	
Group 0	Up to 10kg
Group 0+	Up to 13kg
Group I	9 ~ 18kg
Group II	15 ~ 25kg
Group III	22 ~ 36kg

- Typical children's seat, there is something like the following.

Baby Seat

 Backward or children for the seat of the lateral attachment, your child of the neck is not sitting or, to use in children, which can not alone sit. ECE R44 standard group of 0, 0+ This corresponds to.

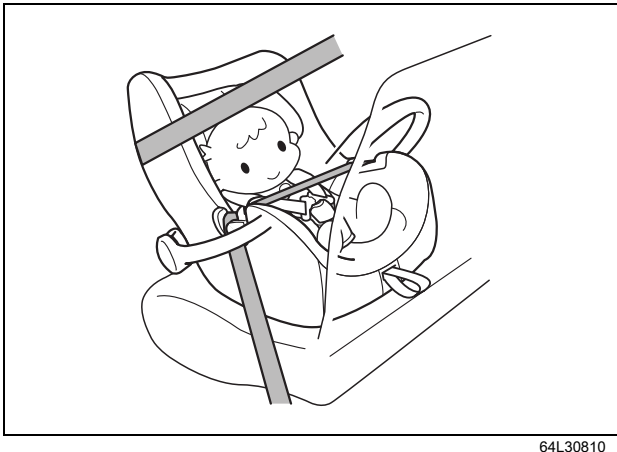

64L30810

child seat

In children sheet of the prospective mounting, and when the seat belt is applied to the neck and jaw, used to children, such as not to apply to the hip bone. ECE R44 standard group of I This then will phase in.



64L30820

junior seat

In children sheet of the prospective mounting, and when the seat belt is applied to the neck and jaw, used to children, such as not to apply to the hip bone. ECE R44 standard group of II, III

This corresponds to.



64L30830

■ Of the seat for children of ISOFIX type, about the size grade

Size grade is the classification symbol to be displayed on the children's seat. Refer to the following table.

Size grade		Description
A	ISO / F3	Total height forward-looking infant child seat
B	ISO / F2	Low-type forward-looking infant child seat
B1	ISO / F2X	Low-type forward-looking infant child seat (a different shape than the ISO / F2)
C	ISO / R3	Large rear-facing infant car seat
D	ISO / R2	Small rear-facing infant car seat
E	ISO / R1	Rear-facing infant car seat
F	ISO / L1	Left position for a child seat (Kyarikotto ※)
G	ISO / L2	Right position for a child seat (Kyarikotto ※)

※ The Kyarikotto, base that can be mounted sideways laid the child posture

It is one of the Bishito.

For more details, please consult the sheet of the manufacturer or dealer for children.

Compatible child seat on the standard of ECE R44, another seat positions compatibility list

■ Fixed by the seat belt (commercial type vehicles)

Mass group	Seating position	
	Passenger seat	Rear seat
Group 0 (up to 10kg)	X	X
Group 0+ (up to 13kg)	X	X
Group I (9 ~ 18kg)	UF	X
Group II (15 ~ 25kg)	UF	X
Group III (22 ~ 36kg)	UF	X

<Description of characters to fill in the above table>

U: Allow the use in this mass group general purpose (universal) category of your child

It is suitable for summary sheet.

UF: before direction of the authorized general purpose (universal) category for use in this mass group

It is suitable to come child seat. X: not suitable for attachment of the child seat.

- When attaching the child seat using seat belt, 3-56 page of "Fixed by the seat seat belt for your child (s) Please read".

Ⓕ アドバイス

- If you are using a child seat that is not listed in the table, please consult your manufacturing Zomoto or distributor of children's seat.
- When installing, read Do not fit the instruction manual that came with the child seat.

■ Fixed by the seat belt (passenger type vehicles)

Mass group	Seating position	
	Passenger seat	Rear seat
Group 0 (up to 10kg)	X	U
Group 0+ (up to 13kg)	X	U
Group I (9 ~ 18kg)	UF	UF
Group II (15 ~ 25kg)	UF	UF
Group III (22 ~ 36kg)	UF	UF

<Description of characters to fill in the above table>

U: Allow the use in this mass group general purpose (universal) category of your child

It is suitable for summary sheet.

UF: before direction of the authorized general purpose (universal) category for use in this mass group

It is suitable to come child seat.

X: not suitable for attachment of the child seat.

- When attaching the child seat using seat belt, 3-56 page of "Fixed by the seat seat belt for your child (s) Please read".
- Depending on the type of child seat of the ISOFIX type, be suitable for use in the above table of mass group, it may not be attached. For more information, 3-55 page of "ISOFIX fixed by the corresponding child seat fixed-only bracket (passenger type vehicles only) Please read".

📌 アドバイス

- If you are using a child seat that is not listed in the table, please consult your manufacturing Zomoto or distributor of children's seat.
- When installing, read Do not fit the instruction manual that came with the child seat.

- ISOFIX fixed by the corresponding child seat fixed-only bracket (passenger type vehicles only)

Mass group	Size grade		The position of the child seat fixed-only bracket	
			Passenger seat	Rear seat
Kyarikotto	F	ISO / L1	NA	X
	G	ISO / L2	NA	X
Group 0 (up to 10kg)	E	ISO / R1	NA	IL
Group 0+ (up to 13kg)	E	ISO / R1	NA	IL
	D	ISO / R2	NA	IL
	C	ISO / R3	NA	IL
Group I (9 ~ 18kg)	D	ISO / R2	NA	IL
	C	ISO / R3	NA	IL
	B	ISO / F2	NA	IUF
	B1	ISO / F2X	NA	IUF
	A	ISO / F3	NA	IUF
Group II (15 ~ 25kg)			NA	X
Group III (22 ~ 36kg)			NA	X

<Description of characters to fill in the above table>

IUF: of allowed general purpose (universal) category for use in this mass group

ISOFIX is suitable to the corresponding forward-looking children's seat.

IL: semi-universal (semi-universal) that are permitted to use in this mass group category

It is suitable for "Suzuki genuine baby seat" of.

X: ISOFIX not suitable for attachment of the corresponding children's seat. The fixed dedicated bracket

Please be fixed using the seat belt without. 3-56 page of "Fixed by the seat belt of the child seat Please read".

NA: in this position for child seat securing dedicated bracket is not equipped, you will not be able to attach the seat for children of ISOFIX type.

- When you install a child seat using a child seat fixed-only fitting,
3-58 page of "ISOFIX corresponding child seat fixed-only bracket Please read".

アドバイス

- If you are using a child seat that is not listed in the table, please consult your manufacturing Zomoto or distributor of children's seat.
- When installing, read Do not fit the instruction manual that came with the child seat.

 
Fixed by the seat belt of the child seat

- Children's seat is, make sure to choose an appropriate one for your child's age and physique.
→ 3-50 page (child seat For selection)
- In the case of passenger type vehicles, when Keru Attach the seat (sold separately) for children of ISOFIX type, 3-58 page of" ISOFIX corresponding child seat fixed-only bracket Please read ".

3

警告

- The front passenger seat, please do not install the filtrate facing child seat after, such as a baby seat. When the swell is the front passenger seat SRS air bag, applied a strong shock to the back of the children for the sheet, there is a danger of being a serious injury life-threatening.
- Forced When inserting child sheet and a junior seat in the front passenger seat, under the most behind the passenger seat up, please forward the attachment.

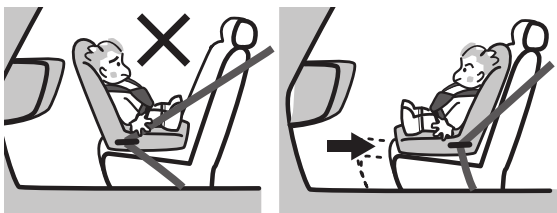


80J027

How to fixed

In this article, we describe the procedure for installing a child seat in the rear seat. If you are installing to the assistant's seat, please make sure Te mower Align the next thing.

 - Passenger seat, please lowered to the very back.
- Please do not be through the seat belt between the figure of the reclining lever (1) and cover (2).

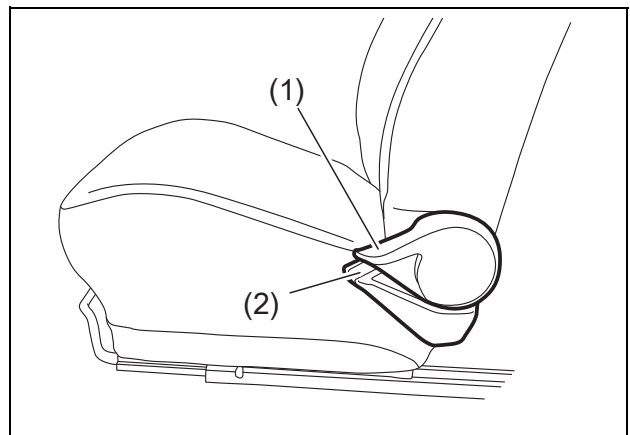


74P30800

1

Headrest (equipped by type) (3), remove or adjust the height that does not come into contact with children for the seat.

→ 3-31 page (of the headrest high

 It is adjusted and the removal and installation)

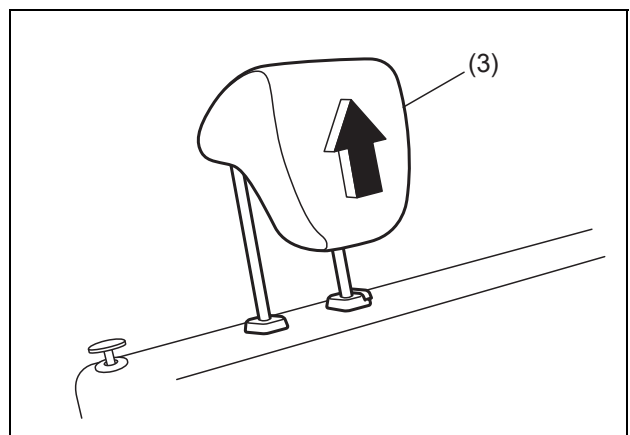

74P30810

- The rear seat of the above diagram is a typical example. It depends on the car of the type.

 


If you can adjust the headrest hit the children for a seat, please remove the headrest. Since the children's seat in a state that has hit the headrest is not securely fixed, the children, etc.-out door of the collision there is a response to the serious injury Ruosore.

2 Make sure the seat is securely fixed.

3 According to the instruction manual that came with the child seat, and thread the seat belt to a predetermined site.

Four Until it clicks into place, fully insert Tangupu rate (4) into the buckle (5).

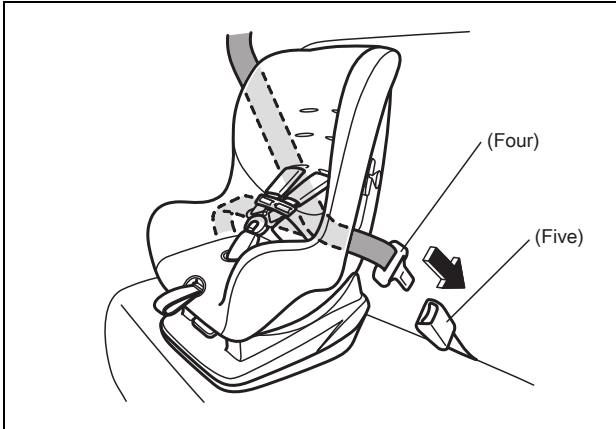


74P30820

- Children sheet of the figure is the representative example.

Five

 Seat to seat belt fixed mechanism for children If you also locking clip also not divided Bei, to hold it securely in place using the locking King clip (sold separately).

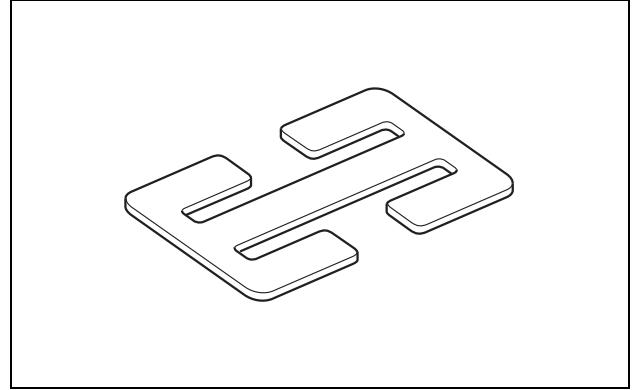

67H30630

- Locking clip of the above figure (sold separately) is a representative example.



When the seat belt locking mechanism or Rockin Gukurippu not securely fixed a children's seat, at the time of or collision when multiplied by the sudden brake, children there is a danger of being a serious injury.

6

The children sheet for smoked front and rear left and right Niyu, make sure whether it is securely fixed.

- If you can not securely fixed, Please check the instruction manual that comes with the Oko customers for the seat, please consult the shop where you purchased the children's seat.



Children's seat, please securely fixed. At the time and the collision when multiplied by the sudden brake, children might receive Keru fear of serious injury.

For ISOFIX corresponding child
Fixed seat

ISOFIX corresponding child seat fixed-only
bracket

By equipment type

The rear seat of the passenger type vehicles, ECE R44 (350 pages ISOFIX, which conform to the standards of reference) (※ 1) dedicated bracket for fixing the type of child seat (not supplied) has been equipped with. (However, it does not have is equipped with the rear seat of the commercial type vehicles)

- Fitting in the gap between the seat and back is the ISOFIX corresponding child seat fixing anchor (to hereinafter ISOFIX anchor substantially).
- Fitting in the backrest back downward, it is tea Irudoshito fixing tether anchor (hereinafter abbreviated as tether anchor).

※ 1 The ISOFIX, child seat

International Organization for Standardization, which unified the size and method of mounting the locking device [ISO (※ 2)] is a standard.

※ The 2 ISO, International Organiza-
tion stands for for Standardization (inter-
national Organizeisho emissions Four Stan Dadi
THEY cane down).

<In the case of Suzuki genuine supplies>

	ISOFIX anchor	Tether anchor
ISOFIX type of baby seat (Backward in fixed)	○ (use)	○ (use)
ISOFIX type of child seat (forward fixed)	○ (use)	○ (use)

 
- Children's seat is, make sure to choose an appropriate one for your child's age and physique.

→ 3-50 page (child seat
For selection)
- ISOFIX type of child seat, you do not have an needs to be fixed in the seat belt.
- When attaching the child seat to secure the seat belt, 3-56 page of" Fixed by the seat belt of the child seat "Read this guide a.

■ How to fixed

1 Make sure the position of the ISOFIX anchor (1).

- It is found in the gap between the seat and backrest.

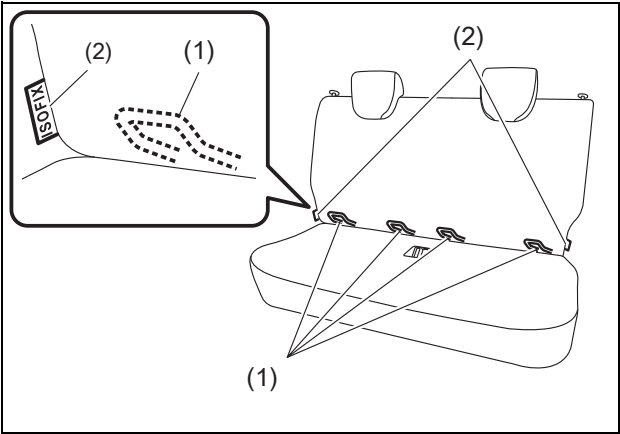

74P30300

(1) ISOFIX anchors (2) tag

 
- The rear seat of the above diagram is a typical example. It depends on the car of the type.

⚠ アドバイス

In the vicinity there is a ISOFIX anchor, as shown above tag (2) comes with.

2 Make sure the position of the tether anchor (3).

- Located in the back of the slit as shown in the following figure.

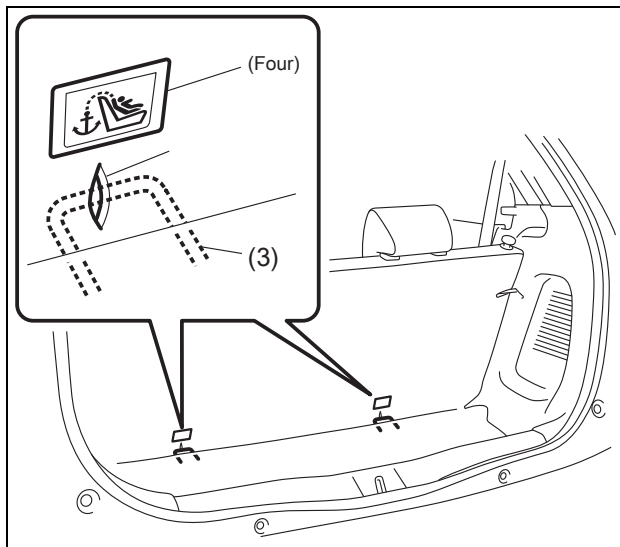

(3) tether anchors (4) label

 
- The rear seat of the above diagram is a typical example. It depends on the car of the type.

アドバイス

In the vicinity there is a tether anchor, the label as shown above (4) comes with.

3 The rear seat of the headrest (equipped by type) (5), remove or adjust to a height that does not come into contact with children for the seat.

→ 3-31 page (of the headrest high
It is adjusted and the removal and installation)

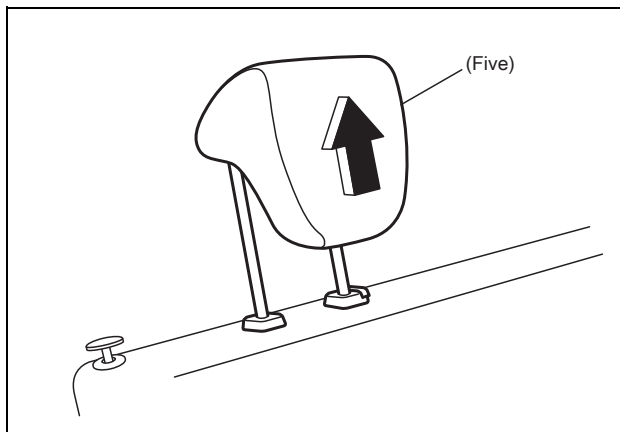


警告

If you can adjust the headrest hit the children for a seat, please remove the headrest. Since the children's seat in a state that has hit the headrest is not securely fixed, the children, etc.-out door of the collision there is a response to the serious injury Ruosore.

Four Make sure the seat is securely fixed.

 Five According to the instruction manual that came with the children for the seat, insert the seat connector for children (6) to the ISOFIX anchors (7).

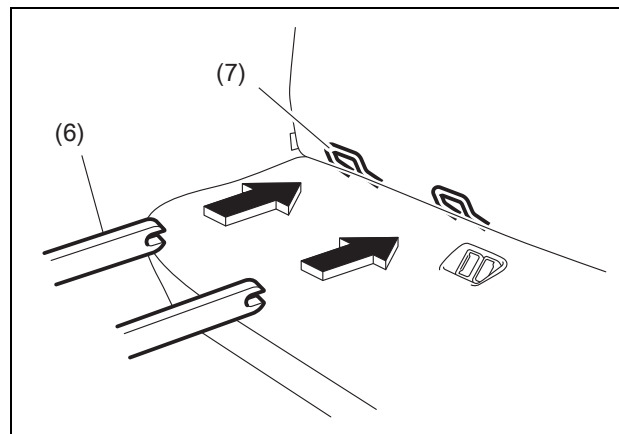


(6) connector

(7) ISOFIX anchor

6 If you want to use the tether belt, Attach to the tether anchor in the following manner.


- When you are attaching the headrest (equipped by type), passed between the headless strike the backrest lifted as shown in FIG. (Typical)

 In the case of a single tether belt

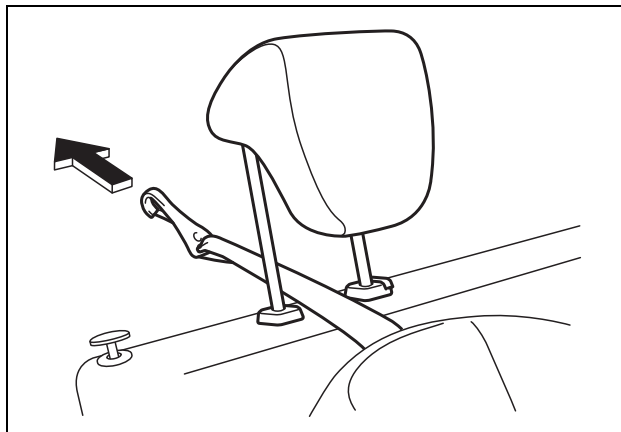

64L3078G

 In the case of two tether belts

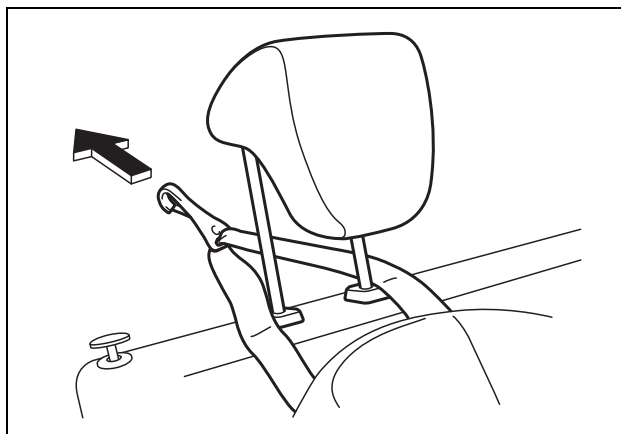

64L3079G

7 The children sheet for smoked front and rear left and right Niyu, make sure you are securely attached.




警告

- When installing a child seat, please make sure that there are no such seat belts or foreign objects around the ISOFIX anchor and Tezaan car. When such as seat belt is caught, not fixed child seat correctly, the children, such as at the time of the collision there is a danger of being a serious injury.
- The luggage of a fixed, do not use the ISOFIX anchors and tether anchors. When the anchor is bent or be damaged, not fixed child seat correctly, there you have it you that the children, such as at the time of the collision suffer serious injury.

Look at the meter the way


The illustration shows a typical example. Depending on the type of your car, it may differ from this illustration.

 No tachometer car

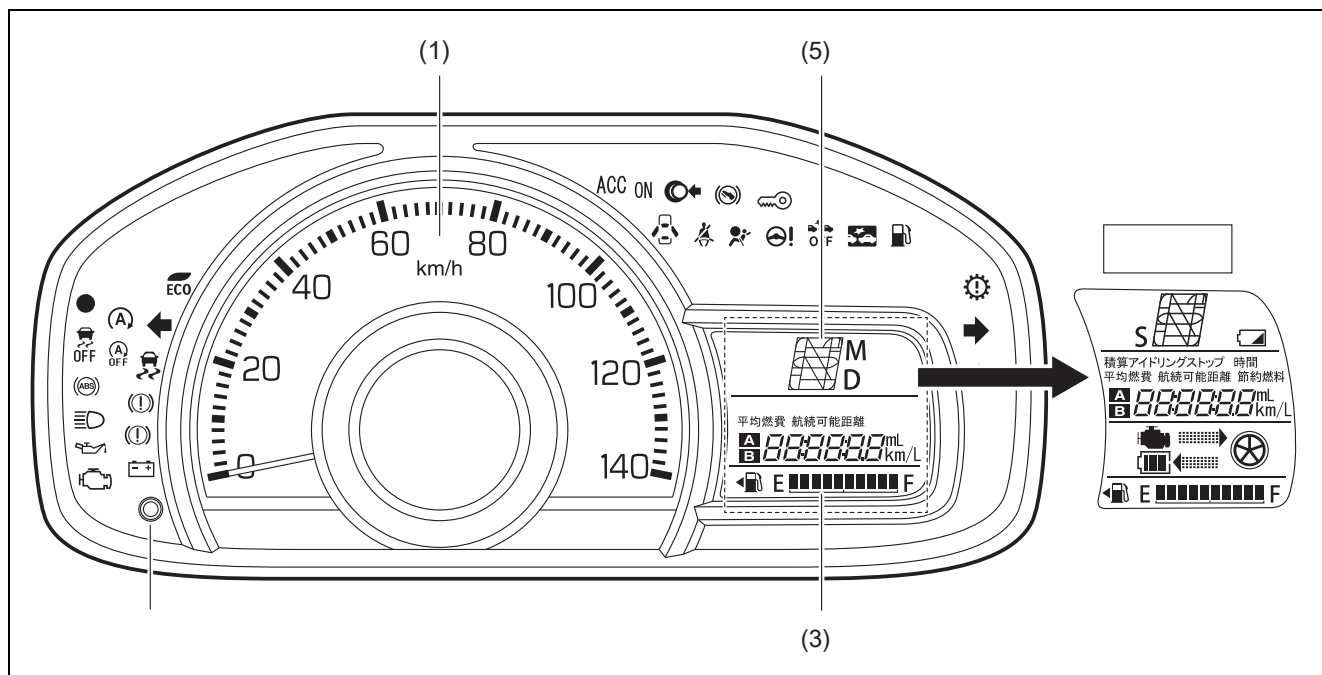

74P30341

 Tachometer vehicles

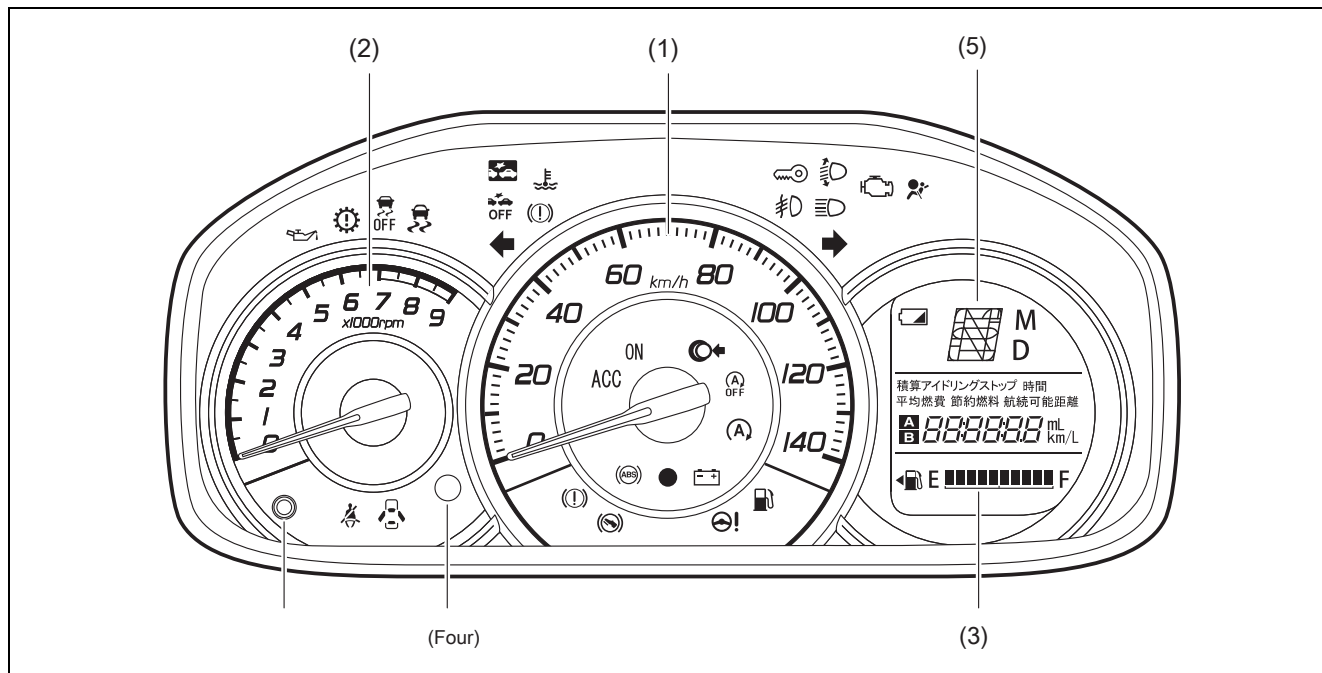

74P30850

(1) Speedometer (speedometer) (2) tachometer
(tachometer) (3) Fuel gauge

(4) Eco Drive Assist illumination
(5) multi-information display

→ 3-64 page (multi-information display)

⏏ アドバイス

The engine switch If you, on the multi-information Display b (4) "

HELLO Appear as "

It is. In addition, we scaled out guidelines of the speedometer and tachometer (equipped with another type) once.

3 (1) speedometer (speedometer)

Traveling speed is indicated by km / h.

Status Information lamp

By equipment type

- If fuel efficiency is determined to be a good operation, illumination speedometer will change from blue to green.
- In the idling stop system vehicles, when the energy charge is functioning, it will change to white.

⏏ アドバイス

- If it is less than the vehicle speed about 10 km / h, the bright irradiation of status information lamp does not change.
- In the idling stop system vehicles, it will also change to green during the automatic stop of the engine.
 - 4-63 page (Idling Top system)
- If you set switch the (customized), you can not alter the lighting of the status the Information cane Nranpu.
 - 3-70 page (Setting mode)

(2) tachometer
(Tachometer)

By equipment type

Engine rotation speed per minute (speed) is indicated.

注 記

 
- For engine protection, please be operated such guidance does not enter the red zone (※).
- ※ exceeds the allowable rotation of the engine
Red display range indicating that
- When you shift down, the engine speed will increase. Particularly Be careful.

(3) fuel gauge

Engine switch Of time, the measurement of fuel remaining amount will be shown.


- When the fuel level warning light is lit, please refueling to be Miyaka. In addition, Oh when the Align Te of the fuel gauge scale (one) is flashing, we have to inform you that there is almost no fuel.

→ 3-74 page (fuel level warning light)

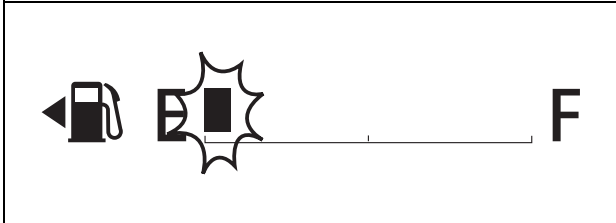

74P30760

⚠️ アドバイス

- After refueling, by the year indicating the amount **ON** display is correct from then on the engine switch, it takes a little time.
- Such as the slope and curve, because the fuel in the tank to move, you may see a change.
-  Some of the left • Mark indicates that the oil supply port (Futuroscope Eruriddo) is in the rear of the vehicle on the passenger side.

(4) Eco Drive Assist illumination

By equipment type

- During normal driving, it will light blue.
- If fuel efficiency is determined to be a good operation, eco-driving assist illumination will change from blue to green.


⚠️ アドバイス

- If it is less than the vehicle speed about 10 km / h, eco-driving assist illumination does not change.
- If you set switch the (customized), you can not alter the eco-drive assist illumination. For switch settings, consult your Suzuki dealer or Suzuki agency.

Multi-information display


The illustration shows a typical example. Depending on the type of your car, it may differ from this illustration.

 No tachometer car

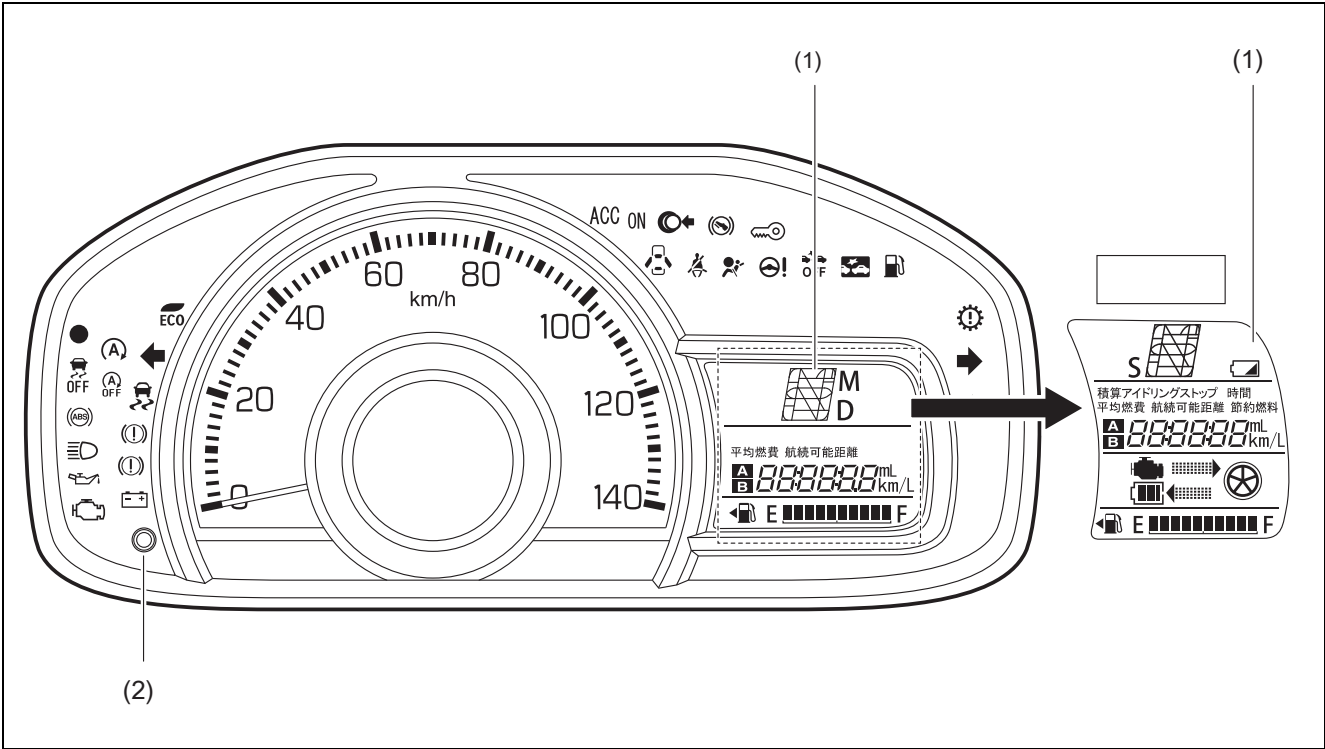

74P30860

 Tachometer vehicles

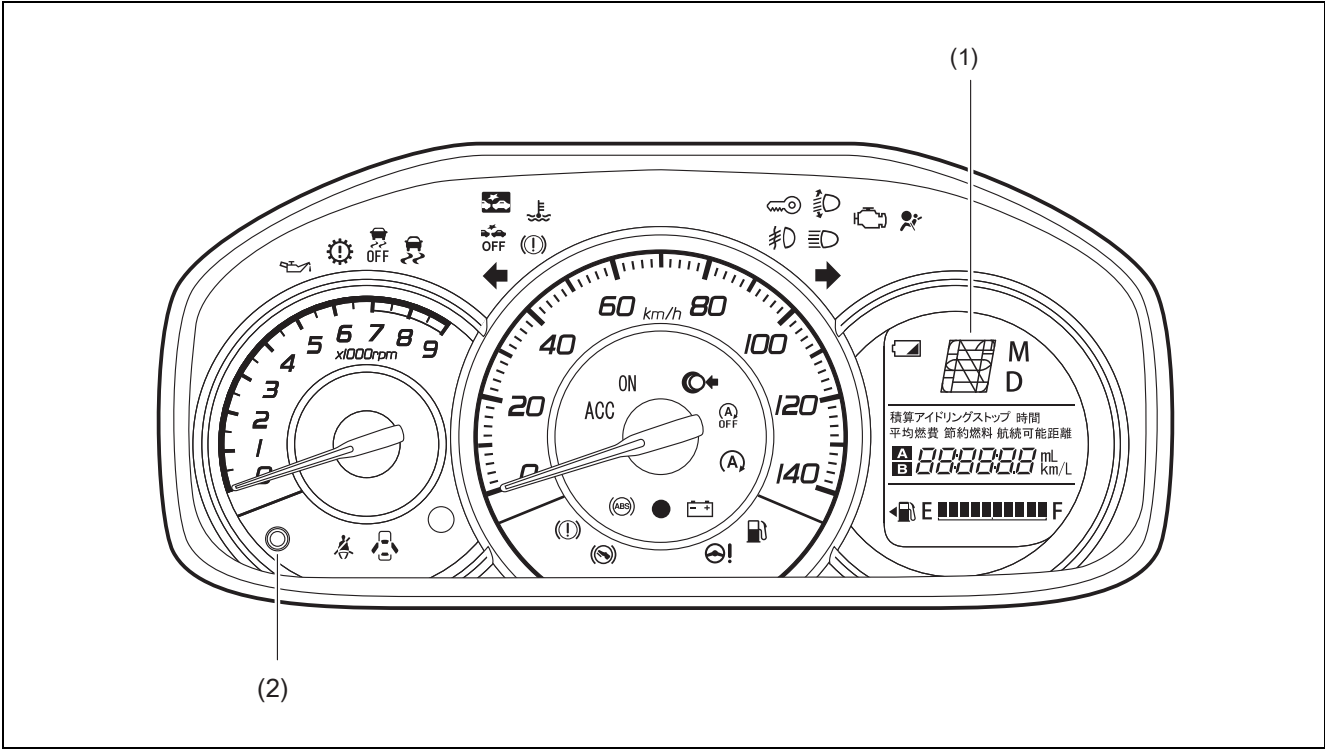

74P30870

(1) multi-information display (2) display switching knob

The upper side of the display

Please read the following references.

- 1-10 page (warning light and display light)
- 3-81 page
(Selector lever position display)
- 3-82 page (gear position display)
- 3-82 page
(S (sport) mode display)
- 3-83 page
(M (manual) mode display)
- 3-83 page
(D (drive) mode display)

 
The center of the display

The engine switch If you, you **ON** see one of the following.

- Odometer (total distance meter)
- Trip meter (section distance meter)
- Instantaneous fuel consumption
- The average fuel consumption
- Cruising distance
- Cumulative idling stop saving fuel (equipped by type)
- Accumulated idling stop time (equipped by type)

Display switching knob (2) you press in the meter will switch the display as shown in the following figure.

- For lighting control display, please read the following references.
 - 3-68 page
(Brightness of the meter adjustment)

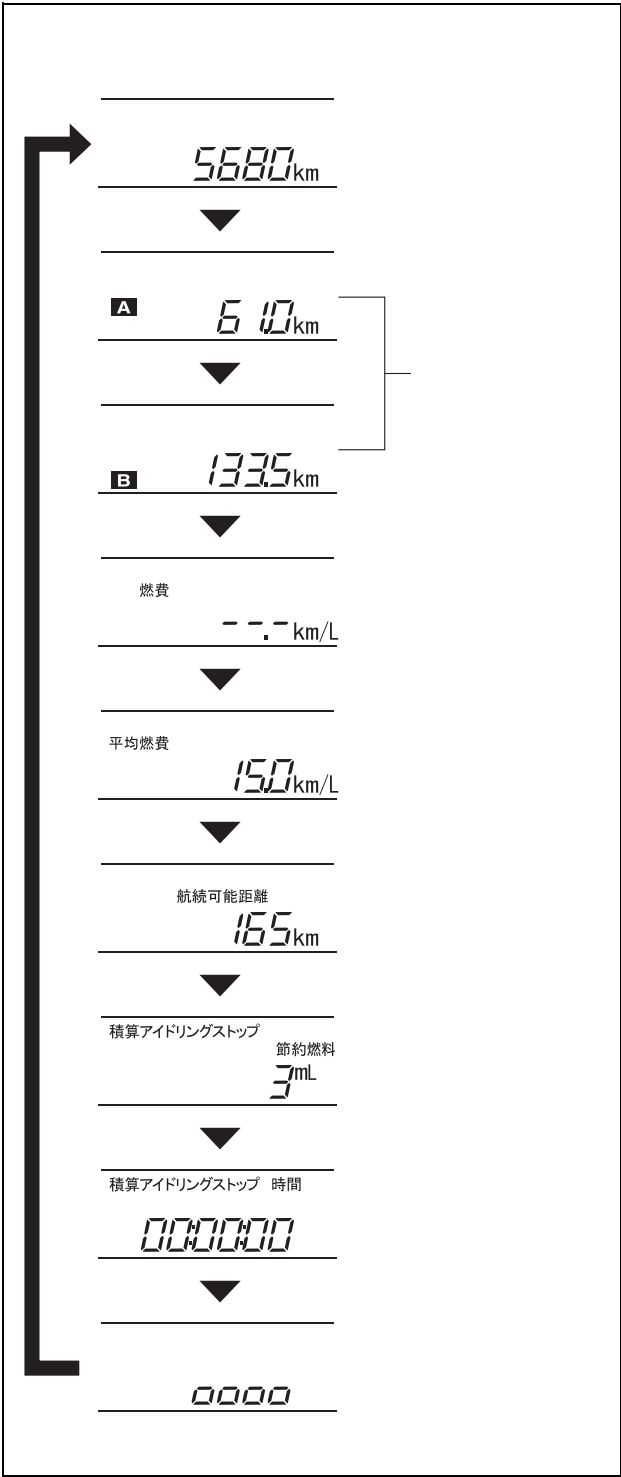

74P30370



While the vehicle is running, please do not the switching operation of the display. Operation to be distracted, can lead to an accident unexpected I think or be.

⚠️ アドバイス

- Display, will switch to when you release the knob.
- When the engine warning light in the meter while driving is turned on, it might fuel consumption and cruising distance is not displayed correctly.

→ 3-76 page (engine warning light)
- The following values to be displayed is an approximation. It may differ from actual.
 - Instantaneous fuel consumption
 - The average fuel consumption
 - Cruising distance
 - Cumulative idling stop saving fuel
- After traveling, when the engine switch to **LOCK**, will be displayed one of the eco-driving against the driver result.

→ 3-68 page (eco-driving display function)

■ Odometer (total distance meter)

It displays cumulative total in km unit of distance traveled from the time of new car (or at the time of the meter exchange). (Reset is not possible)

■ Trip meter (section distance meter)

Mileage after the reset will be displayed in km units. (The next distance measurement until it is reset will continue)

- **A** Two types **B** mileage and can be measured at the same time.

<Examples of how to use>

A : Reset to the time of departure, measure the distance after departure

B : Reset during fueling, measure the distance after refueling

- When reset, press and hold the knob (2) to switch the display until the display becomes "0.0".

⚠️ アドバイス

The maximum value of the trip meter at 9999.9, will return to the after 0.0. (Distance measurement will be continued)

■ instantaneous fuel

Instantaneous fuel consumption during running will be displayed.

⚠️ アドバイス

- You do not see the value in stopping.
- The maximum display value is 50.0. Even when the fuel cut control, etc. downhill is activated, you will not see more value.

■ The average fuel

The average fuel consumption from the Reset the display appears.

- When you reset, press and hold the knob (2) Switching display during the display of average fuel consumption.

⚠️ アドバイス

- For a while after a reset, the value is not displayed.
- If you remove the lead battery, the display of the average fuel consumption will be reset.

■ Cruising distance

The approximate distance that can be run in the current fuel remaining amount will be displayed.

- For cruising distance is a measure that is calculated based on the past of the average fuel consumption, it does not guarantee that the distance to be displayed can actually be traveling.
- Display and refueling will be updated. However, if a small amount of oil, there is a case where the display is not updated.

⚠️ アドバイス

- Past of average fuel consumption to be used in the calculation is not the same as the average fuel consumption to be displayed.
- It will erase the memory of the past average fuel consumption and remove the lead battery, it might different value is displayed and before removing.
- The engine switch If leave to **On** fuel, it might correct value is not displayed.
- If something does not display the value.
 - For a while after the lead battery connection
 - During the lighting of the fuel level warning light
 - 3-74 page (fuel level warning light)

■ Cumulative idling stop clause about fuel

By equipment type

Total savings fuel by idling stop from the Reset the display is displayed in mL single position.

- When you reset, and the accumulated idling Gusutoppu saving display switching sort knob during the display of fuel (2) long press.

⚠️ アドバイス

If you remove the lead battery, display of cumulative irregular idling stop saving fuel will be reset.

■ Integration Idling Top Time

By equipment type

Total of idling stop time from the reset the display, hour, minute, will be displayed in seconds.

- When you reset, press and hold the accumulated idling Gusutoppu switching displayed during the display of the time knob (2) long.

⚠️ アドバイス

- The maximum value of the accumulated idling stop time is 99:59:59, will be fixed in reset until.
- If you remove the lead battery, the accumulated idling stop time display will be reset.

■ Lighting of the meter

 
While the headlights and car width lamp is lit, it lights up.

Brightness adjustment of the meter

4 can be adjusted to the stage.

- The headlights and side lamps and lighting, lighting control display (3-65 page In terms of the reference), press and hold display switching knob (2) long. Brightness will change one step at a time.

3

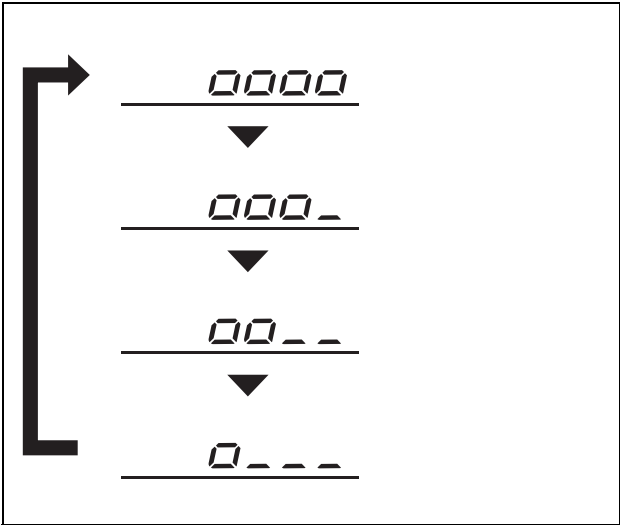

74P30380



警告

While driving Do not the brightness adjustment.
Operation to be distracted, it may lead to unexpected accident.

⌂ アドバイス

- During adjustment, and the display switching knob is not pressed or more than 5 seconds to push short, will switch to the display of Oh Dometa.
- Since the storage and removal of the lead battery will return to the initial state is erased, you will need to redo the brightness adjustment.

Eco-driving display function

By equipment type

The engine switch LOCK To (OFF)

Then, time following content is constant, will be displayed in the center of the Maruchii down conformation display.

- Idling stop system vehicles are displayed by a few seconds in order in the following figure.
- Idling stop system-equipped vehicles is eco-score (3) will be displayed for a few seconds.

⌂ アドバイス

- If you set switch the (customized), you can not be displayed.

 
→ 3-70 page

(Setting mode)

- In the idling stop system vehicles, cumulative saving fuel or idling Stop time due to the idling stop, the engine switch is It can be displayed on the multi-in conformation display at the time of the.

ON

→ 3-64 page (multi-info
Mation display)

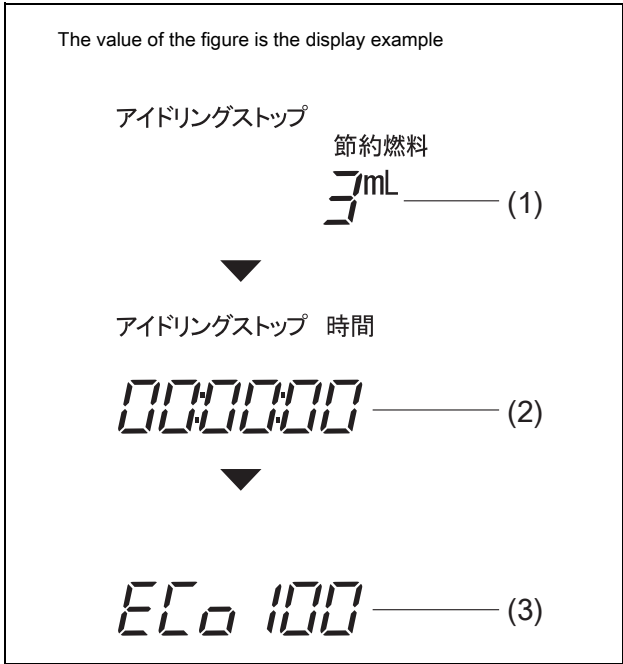

(1) idling stop saving fuel

Fee

Once fuel that has been thus saving the idling stop in the operation is displayed in mL units.

(2) idling stop time

When the total time of the idling stop in a single operation, minute, will be displayed in seconds.

(3) Eco score

In a single operation, from the percentage it is determined that the efficiency is good, and then scored the operation contents.

- Please as a measure of eco-driving.
→ 2-37 page
(Let's eco-driving)
- In the idling stop system vehicles, while it is being displayed as shown in the previous figure, status information lamp lights up. Illumination color varies depending on the number of Ecos core. The higher the score, it will be more green.

→ 3-62 page (status info
Mation lamp)

⚡アドバイス

In the idling stop system vehicles, and bear in mind the traveling to change the status-in conformation lamp in the meter to green or white color, you get a high score. (100 points)

Settings mode

In setting mode, you can do the following: setting switching (customize).

- Depending on the type of car, items that can be set is different.

item	Setting switching			References
<div>ENEGL</div> <div>Energy flow indicator</div>	EL - on	EL-off		4-72 page
	display(※)	Hide		
<div>EColnd</div> <div>Eco-score</div>	EC - on	EC-off		3-69 page
	display(※)	Hide		
<div>ILLUM</div> <div>Status information lamp</div>	IL - on	IL-off		3-62 page
	3-color change (※)	Blue fixed		
<div>Idling stop</div> <div>Save fuel / time</div>	IS - on	IS-off		3-69 page
	display(※)	Hide		
<div>AC</div> <div>Idling air conditioning set standard</div>	normal	Eco	CONF	4-74 page
	(※) fuel economy priority		Comfortable priority	
<div>DEFAULT</div> <div>Initialization settings</div>	dE - on			Over
	Return all of the settings to the initial state			

※ initial state (factory)

Setting switching of the engine switch In when you are parked in a safe place, you perform the following steps.

- 1

You can switch to the setting mode.

 - Switch to the odometer display by pressing the display switching knob short.
→ 3-66 page (odometer)
 - In the odometer display, until switched to the display of the setting mode, press and hold the knob length.
- 2

 
Select the display you want to switch the setting.

 - You can switch the display by pressing the display switching knob short.
- 3

Setting switching Go to the display.

 - Press and hold the display switching knob length. Sounds the indoor buzzer "beep", will switch to the figure below ON setting display (Display example) (1).

Display example (in the case of energy flow indicator)

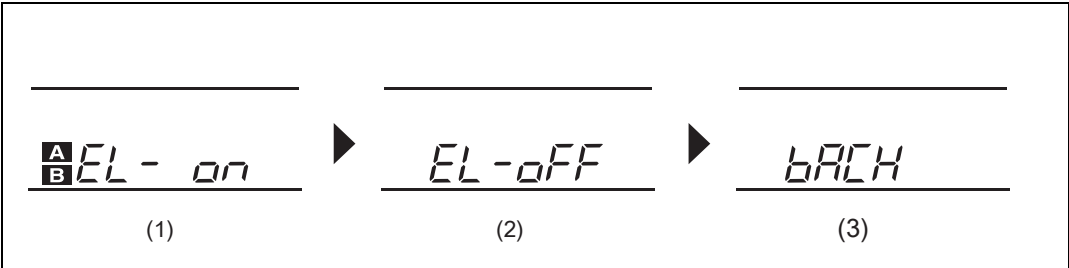

74P30530

(1) ON setting display (currently set) (2) OFF setting display (3) BACK Display

アドバイス

As shown above in (1), to the left of the setting display **AE** State, currently set There has been displayed It indicates that it is in.

- Four

To change the setting.

 - When you change the setting, select ON or OFF by pressing the display switching knob short. The after knob Press and hold. Indoor Breakfast Heather becomes a "beep", set to be displayed as "SUCCES" will change, and will return to the display of the procedure.
 - When you return to the procedure without setting switching, select the BACK display (3), and then press the knob long until you hear the indoor buzzer "beep".

- Five

Subsequently, when you want to switch settings, repeat step 2.

 - If you want to exit the setting mode, go to Step.

- 6

Exit the setting mode. You can stop in one of the following operation.

 - Select the "End" when the display of the procedure, the knob to switch the display until you switch to the odometer display The length Press
 - The engine switch **ACC** Or **LOCK** To (OFF)
 - It starts running

Warning lights and display lights seen how

For the location of the meter of the following warning lights and display lights, 1-10 page Please refer to the.

Warning light

(1) brake warning light



82K170

- Such as the following Jo Comes to situation, engine switch is Light is When.
 - The brake fluid is insufficient
 - And the parking brake
 - There is an abnormality in the brake system
- System is normal, fully release the parking brake Te When it is, the engine switch After you turn off that light up for about 2 seconds a on You.
- Be temporarily turned on during travel, it is normal to be re-lit the Conclusion off.

警告

- When the next, such as is stopped immediately a safe place, please contact your Suzuki dealer or scan Suzuki agency.
 - Completely release the parking brake

And when you do not turn off even if, when it lights up while the vehicle is running, there is that but-out effect of the brake has become worse or be. Please parked stepped strongly brake pedal.
 - The brake warning light and the ABS warning light

When the remains at lit. Pressing strongly the brake pedal may cause the vehicle to become unstable. Firmly grip the handle, dropped gradually speed de stepping carefully the Burekipe Dar, please stop.
- Please pay attention to forget release of the parking brake. When traveling while applying the parking brake, brake device is overheating, there is a brake Kunar fear such work. In addition, the chamber buzzer will continue to sound the "Pipipi", Pipipi".

→ 4-16 page (parking brake

 - The cancellation forgotten warning buzzer)

(2) the seat belt warning lamp



80J221

- He is wearing a seat belt occupant of the front seat do it
If not, it will light up when the engine switch is ON in.
- In addition, from the start of the run over the engine, first when the occupant of the front seat when the vehicle speed is equal to or greater than about 15 km / h is not wearing a seatbelt, seatbelt warning buzzer is intermittently to Tomo and sound, warning light will switch to flashing from the lighting.
- Depending on the type of car, and those to detect the seat belt wearing of the driver's seat, there is a thing to detect the seat belt wear of both the driver and front passenger.
- Also wear a seat belt, when the remains lit or flashes, abnormality of the system will be considered. Please have it inspected by Suzuki service factory.

Ⓐ アドバイス

- It is unlit and to wear a seat belt. Also, can the warning buzzer is sounding, also will stop the buzzer.
- Warning buzzer is also not wearing a seat belt, it will stop after you have continued to sound for about 95 seconds. However, the warning lamp is switched from blinking to lighting Kawawa While Tsu, Engines
A down switch ACC Or LOCK
Do not turn off until you (OFF).
- In the case of the passenger side, it does not light up when they are not divided be a passenger in the front passenger seat. However, you might want to operate that put the luggage in the passenger seat.
- Warning light is the driver's seat side and the passenger's side also used.

(3) SRS air bag warning light



80J111

- next If you like, the engine switch ON Lights when you.
- SRS air bag, seat belt pre Tensioner is actuated
- SRS air bag, seat belt pre It is abnormal tensioner electronic control system
- system But The normal case the engine switch When you are in, and turn ON after you turn on for about 6 seconds.



The following cases, immediately stop Me the use, please contact your Suzuki dealer or Suzuki agency. It Should, collided with the gas SRS air bag or seat belts pretensioners does not work properly and there is a danger of being a serious injury.

- The engine switch ON even if not light
- The engine switch ON To Taha
And, it does not turn off even after about 6 seconds
- It lights up during operation

(4) fuel level warning light



80J225

- The remaining amount of the fuel is Small If no, engine switch ON It lights up at the time of the It is. Please be promptly refueling.

- When lighting, warning buzzer is "paw"

When the beeps once. In addition, as it is feeding oil

Shinano Have When are out, the engine switcher switch Warning buzzer will ON sound each time to.

- To the system Different When the ordinary is, engine switch is Blinks ON When the. Sure to receive a check in the Suzuki service factory.

→ 3-63 page (fuel gauge)

⚠️ アドバイス

- In such slopes and curves for fuel in the tank to move, it may light up as soon as possible.
- By running how, it may be turned on and off is Ri returned Repetitive.

(5) ABS warning light

By equipment type



80J127

Electronic control system of the ABS (anti-lock brake system) To If there is an abnormality, a picture down Jin switch Lights when. It does ON operate the ABS during the lighting. Scan Suzuki service factory please have it inspected.

- the system Regular If the normal of is, the engine switch After the lights for a ON 2 seconds point to when you go out.

⚠️ 警告

When the ABS warning light remains lit to the brake warning light at the same time, to stop immediately a safe place, or Suzuki dealer, please contact the Suzuki agency. Pressing strongly Breakfast Rekipedaru There is a possibility that the vehicle becomes unstable. Firmly grip the steering wheel, dropped gradually speed by stepping on the brake pedal to the Shigeru Makoto, please stop.

⚠️ アドバイス

During lit ABS does not work, but it can be used as a normal brake.

(6) water temperature warning light (red)



65P30800

While the engine rotation, will flash red when the engine cooling water temperature is high. In addition, when the engine cooling water temperature becomes abnormally high lights in red.

- the system Regular If the normal of is, the engine switch After ON in about 2 seconds red color when you go out. (※)

※ When the engine cooling water temperature is low, the red It lights up after the blue lit in color.

- Red when it is lit, there is a risk of overheating. Please to stop immediately in a safe place.

 
→ 7-33 page

(When you overheat)

- When it blinks red, abnormalities of the system will be considered. Please have it inspected by Suzuki service factory.

(7) auto-leveling warning light

By equipment type

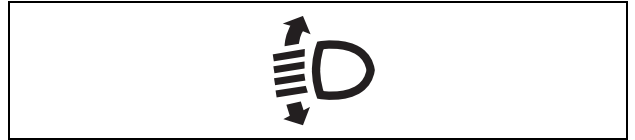

80J217


The discharge headlights vehicles, auto leveling (automatic optical axis adjustment) system Different to When the ordinary is, engine switch is Lights when.

| ON |

- the system Regular If the normal of is, the engine switch After ON the lights for about 2 seconds point to when you go out.
- If you light up while driving, parked in a safe place, stop the engine Teku Please. When in the engine switch again, the lever goes off after you turn ON for about 2 seconds, it can be used as it is. If it again without switching off lights, the abnormality of the system will be considered. Please have it inspected in Suzukisa screw factory.

3

 (8) engine warning light

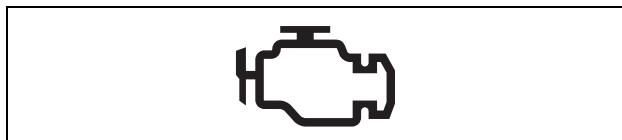

80J222

- If there is an abnormality in the engine electronic control system of lights in the engine rotation.
- Upon detection of a misfire of the engine, lights or flashes when the engine rotation.
- **the system Regular** If ordinary that is the engine switch Lights on you, will turn off the engine it takes.
- When the lights flashing in the engine rotation, please have it inspected by Suzuki service factory.



警告

When flashes, please stop immediately stop the engine. Since there is a possibility that the catalyst device is melting, please note the following in particular.

- To stop in a safe place there is nothing flammable, such as dried grass
- If unavoidable traveling not attempt to travel depressing larger the accelerator pedal, running at a low speed

(9) power steering warning light



80J408

If there is an abnormality in the electric power steering system, it lights up while the engine rotation. Suzuki service factory in Sai that we have it inspected.

- **the system Regular** If the normal of is, the engine switch Lights on you, will turn off the engine it takes.



 
注意

When the electric power steering system is abnormal, the function of the electric power steering system is stopped, handle operation becomes heavy. Although it is possible to operate with greater force than usual, please have it inspected at Sumiya crab Suzuki service factory.

アドバイス

- During and stop when you park, or repeat a handle operations, result or longer held in a state of turning the handle to the faction physician, handle operation might gradually heavy a Rukoto. This is not a Yes abnormal with a protective function for preventing overheating of the system. While refraining from the handle operation and shy under the temperature of the system is the operating force will return to the original, but it is a cause of failure and repeat the handle operations such as this.
- When performing a quick handle operation, it may sound like rubbing from the vicinity of the handle can be heard, but this is not a malfunction.

(10) hydraulic pressure warning light

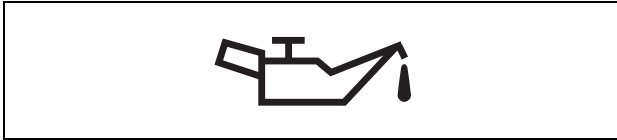

80J223

 
During engine, the pressure of the engine oil for lubrication of the internal engine will light to decrease.

- the system Regular If the normal of is, the engine switch Lights When you, will turn off the engine it takes.
- The amount of engine oil, please check at the oil level gauge. Inspection methods, " Maintenance notes "Please refer to.
- When lit during engine rotation, was parked in a safe place immediately, please contact your Suzuki dealer or Suzuki bills physical stores to stop the engine.

注 記

Do not continue to run while lighting. There is a possibility that the engine may be damaged.

(11) Charge warning light

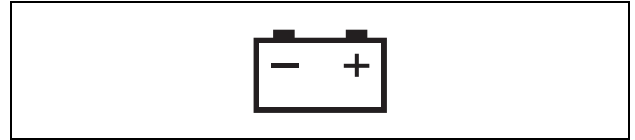

80J226

If there is an abnormality in the charging system, it will light up while the engine rotation.

- the system Regular If the normal of is, the engine switch Lights When you, will turn off the engine it takes.
- When lit during engine rotation, such as belts out it will be considered. Parked in a safe place to Tadachi, stop the engine for battery protection, contact your Suzuki dealer or Suzuki agency.

(12) transformer Mi Cushion warning light

Automatic car

Auto gear shift car



80J219

- the system Regular If the normal of is, the engine switch After the lights for about 2 seconds point to when you go out.

3

- CVT or system of AGS (※) Different to When the ordinary is, it will light up when the engine switch is in. Please have it inspected by Suzuki service factory.

- In the case of auto gear shift car, lights

To you, it may result in the following manner when are.

Select lever shift also operates the

Can not

- If the vehicle speed falls below 10 km / h, the own It becomes N (neutral) in motion, select lever position display in the meter flashes N, warning buzzer sounds

Engine can not start stop engine when the vehicle is stopped

- In the case of auto gear shift vehicle, and the following operation, the load on the clutch Do selfishly clutch becomes hot. Along with the warning light is flashing, you will hear a warning buzzer. And stop in a safe place, you will stop for a while engine 止

There. Again, and to the engine switch, please ON traveling from the Make sure that the flashing and warning buzzer warning light is stopped.

- It has repeatedly starting and stopping at the uphill

That

- Without going through brake pedal uphill

To, have stopped using the creep function

- Access while stepping on the brake pedal

It continues down the Rupedaru

- While applying the parking brake

It continues to step on the accelerator pedal

→ 1-17 page

(When the warning buzzer is sounding)

※ The AGS, Auto Gear Shift (Auto

It stands for the gear shift). The five-speed manual transmission, automated manual trans mission of the scan Suzuki equipped with electric oil pressure system actuators carried out in an automatic shift operation and your clutch: is (Automated Manual Transmission AMT).

(13) immobilizer warning light

Keyless push start system vehicles



64L30690

→ 4-4 page

(Immobilizer system)

The body of the electronic control system To If there is an abnormality, engine switch It may light ON at the time of. Please have it inspected by Suzuki service factory.

(14) semi-door warning light



82K274

Lights when one of the door is not completely closed.

- And are to remain lit, a warning buzzer will sound once and "paw" in each time you travel.



警告

Do warning light does not travel while lighting. When the half-door when the door is not completely closed, the door will carry the risk that lead to unexpected accidents open while the vehicle is running.

アドバイス

Because of the lead battery protection, and meet all of the following conditions, to automatically turn off the island.

(Battery saver function)

- Engine switch LOCK (OFF)
Position of(※)
- 15 minutes passed without lit

※ keyless push start system

Non-equipped vehicles, if the driver's seat door that is open, do not turn off the key to the engine switch is leaving the difference.

3

(15) mobile remote control battery warning light

Keyless push start system vehicles



70K122

Power of a mobile remote control pond When the cut is close, the engine switch When it is ON turn on for about 15 seconds. After replacement of the battery, please reset the warning light.

→ 6-10 page

(Battery replacement of the remote control key)

(16) brake system warning light (Orange)

By equipment type



82K170

- Such as the following: electronic control system. Different When the ordinary is, it will light up when the engine switch is in. Please have it inspected by Suzuki service factory.

- ABS (equipped by type)

→ 4-43 page

(Handling of ABS vehicles)

- Hill-hold control (type

Another equipment)

→ 4-50 page

(Hill Hold Control)

- Radar brake support (RBS)

(Equipped by type)

→ 4-52 page (radar Velay

Key support (RBS))

- Improper start suppressing function (equipped by type)

→ 4-57 page

(Improper start suppression function)

- System on the other brake

Beam

- Lights when the laser radar detects the dirt on the front glass.

→ 4-61 page

(Laser radar)

- the system Regular If ordinary that is the engine switch To the when, and turn off after you have lit cage and the next of.

- Driving support function non-vehicles: about 2 seconds

- Operation support functions vehicles: about 3 seconds

(17) brake request Print Keta

Auto gear shift car



82M30400

And to not step on the brake pedal to the operations such as the following, indicator lights let you know that there is a need to operate by stepping on the brake pedal.

- When the select lever is, brake Kipeda Stepping Le The engine switcher switch is not or

START It was

- Warning buzzer will sound continuously. Breakfast

I stepped on Rekipedaru and retry the operation of the engine switch.

- When the select lever is other than or, But Kipeda Stepping Le The engine switch is not or

START It was

- It sounds a warning buzzer is continuous, selector

Trevor position display or Giyapoji Deployment display will blink. And the selector lever or, stepping on the brake pedal, sure to redo the operation of the engine switch.

- In a state in which the vehicle is in motion, such as when to repeat the forward and backward, the brake pedal

Stepping From the select lever is not or N

DM, Or it was operated on

- Warning buzzer sounds for approximately 1 second, selector

Trevor position display will blink in the N. From completely stop stepping on the brake pedal, please repeat the operation of the select lever.

Indicator light

(18) select Lever position display

Automatic car

Auto gear shift car

P R N D L

74P30540

Automatic car

Shows the position of the select lever, you will see P, R, N, D, one of the L is.

→ 4-18 each of the page (select lever
The function of position)

Auto gear shift car

Shows the position of the select lever, you will see P, R, one of the N is.

→ 4-28 each of the page (select lever
The function of position)

- Blinks when the next such as.

- Select lever or more than **P** **N**

Burekipeda at the time of the outside Stepping Le Mana

Ide the engine switch

START To

did

Select lever position display is N also

The flashing R, brake request indicator lights, a **warning buzzer will sound continuously.** Input is the selector Trevor or, please repeat the operation of the engine switch is stepping on the brake pedal.

- Vehicle, such as when to repeat the forward and backward

In a state that is moving, Burekipeda

Le The select lever not step on the

N From, **D** Was operated on **R**

Select lever position display is a point in N

Flashes, warning buzzer will sound for about one second. From the stop completely by stepping on the brake pedal, please repeat the operation of the select lever.

- When you operate the select lever, Se

Select lever position indication of the position and within meters of Rekutoreba is different

Select lever position display is N also

The flashing R, a warning buzzer will sound continuously. As it is the case that a little (2 to 3 seconds) waiting for the select lever position location display is not switched even if, by stepping on the brake pedal. Then, try the operation of selectors Trevor.

- During running, by operating the select lever

Becomes N (neutral) automatically also unable speed, or when the vehicle speed is below 10 miles / h

Select lever position display is a point in N

Flashing, it sounds a warning buzzer is continuously or be. Please have it inspected by Suzuki service factory.

(19) the gear position display

Auto gear shift car



64P30400

- Engine switch ☐ ON At the time of, To the current gear position ☐ is displayed ☐ When entering the select lever or.

- Blinks when the next such as.

- Select lever or more than ☐ P ☐ N

The outside brake pedal at the time of the Do not step on

It was in the engine switch Idle ☐ START

Gear position display is 1 or 2

Flashing, brake request indicator lights up, warning buzzer is continuous

Continued To sounds. A select lever

☐ P Or to put in ☐ N please repeat the operation of the engine switch stepped on Burekipe Dar.

- When you operate the select lever, Se

Table gear position display is one of the gear position display is different from the position and within meters of Reikutoreba

It shows flashing, warning buzzer Ri ringing continuously. As it is the case that a little (2 to 3 seconds) waiting for the gear position display does not change cut also, by stepping on the brake pedal, please repeat the operation of the select lever.

- And shift operation in the manual mode

Not shift the gear position to the desired also

- flashes in the current gear position, warning Breakfast

Heather will sound continuously. Wait a little, please retry the shift operation.

- In the idling stop system vehicles, the engine is automatically restarted When Yellow, gear position display will be temporarily, but this is not a malfunction.

(20) direction indicator indicator



80J211

- Blinks when to operate the turn signal / emergency flashing lights.
- When blinking becomes abnormally fast, bulb out of the turn signal / emergency flashing light will be considered.

→ 7-28 page

(When replacing the light bulb)

(21) headlight upward (high Beam) indicator



80J212

Lights up when the headlights of upward.

(22) S (sport) mode display

Automatic car



74P30550

S (sport) mode switch is displayed in-out ON Noto.

→ 4-20 page

(S (sport) mode switch)

(23) D (drive) mode display

Auto gear shift car



64P10080

Engine switch At the time of, **ON** will be displayed and put on the back Rekuto **ON** a.

→ 4-28 each of the page (select lever
The function of position)

(24) M (Manual Le) mode display

Auto gear shift car



64P10090

Engine switch At the time of, **ON** will be displayed and put on the back Rekuto **ON** a.

→ 4-28 each of the page (select lever
The function of position)

(25) ESP ® OFF indicator light

By equipment type



57L30045

ESP ® OFF switch will light up when you press and hold.

→ 4-47 page

(ESP ® Handling of vehicles)

(26) ESP ® Actuation indicator lamp

By equipment type



79K019

- When the traction control or stability control is activated, and then little by little flashes.
- ESP ® It lights that there is an abnormality in the system.

→ 4-47 page

(ESP ® Handling of vehicles)

(27) Low temperature indicator (blue)

 


65P30800

When the engine switch is, light **ON** blue and low engine cooling water temperature, and turns off when the engine is warm.

- Or Manotoki lit in blue even warm up to enough, the abnormality of the sensor will be considered. In addition, when the flashing red, the abnormality of the system will be considered. Sure to receive a check in the Suzuki service factory.


(28) push indicator

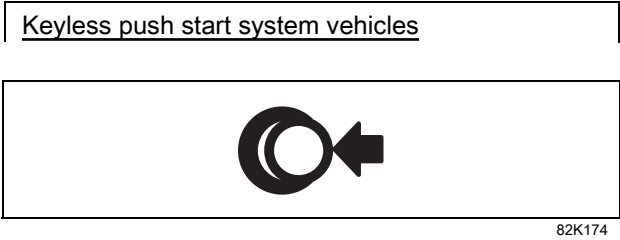

In select lever position, when **P** lit by stepping on the brake pedal, you can start-up of the engine.

→ 4-5 page (keyless push scan Start system)

 (29) ACC indicator

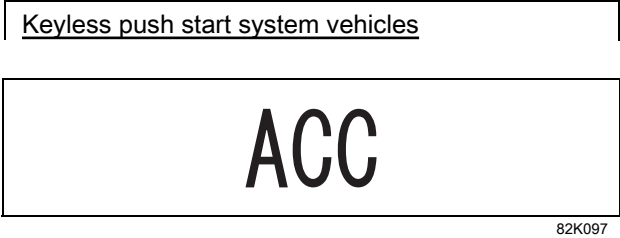

Engine switch **ACC** It is in the position And lights.

 
→ 4-6 page (the way of switching power supply)

⚠️ アドバイス

Because of the lead battery protection, and about 60 minutes satisfies all of the following conditions has elapsed, self dynamic The engine switcher switch off the **LOCK** (OFF) to return to the position or It is.

- It is not stepped on the brake pedal
- Select lever position **P**
- It is closed all the doors

(30) IG ON indicator

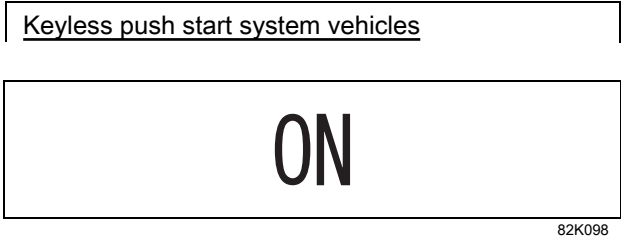


Engine Di In your application stop state, the engine switch Lights to be **ON** the position.

→ 4-6 page (the way of switching power supply)

(31) idling stop

 Indicator light

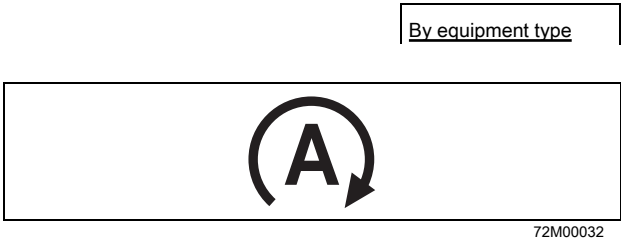

While the vehicle is running, lights and engine satisfies the condition (standby condition) to automatically stop.

→ 4-63 page (Idling stop system)

- the system Regular If the normal of is, the engine switch When you are in, and **ON** off after you turn on for about 2 seconds.

(32) idling stop cis

Temu OFF indicator light

 
By equipment type



72M00159

- It can be turned on by pressing the idling stop system OFF switch.
- Flashes to be a situation such as the following.
 - Different to the idling stop system
 - When there is always
 - Engine parts (starter) and back
 - When Terry is time to replace→ 4-71 page (idling stock
Flop system OFF switch)
- the system Regular If the normal of is, the engine switch When you are in, and ON off after you turn on for about 2 seconds.

(33) security alarm indicator

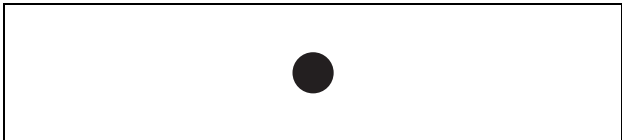

82K269

- Security alarm < Alarm mode
 - > At the time of, and to lock the door in the keyless entry or keyless push start system vehicles of the request switch, security alarm is set to about 20 seconds after the blinks rapidly.
- Set in flashes every two seconds.
- Alarm at the time of parking is created Motion And to that, the engine switch About 8 seconds and then blinks rapidly when you.
- 3-16 page
-
- (Security alarm)

- To the body of the electronic control system Different When the ordinary is, for about 15 seconds when the ON switch is, it blinks at 1-second intervals. Sure to receive a check in the Suzuki service factory.

(34) Eco-drive indicator

Tha

By equipment type



70K30030

Lights when fuel efficiency is determined to be a good operation.

- the system Regular If the normal of is, the engine switch Lights ON you, will turn off the engine it takes.

Ⓕ アドバイス

- Does not light is less than the vehicle speed about 10 km / h.
- If you the setting switch (customization), you can not light. For switch settings, please consult the Suzuki dealer or Suzuki agency.

(35) radar brake support

(RBS) OFF indicator light

By equipment type



72M20303

- **Such as the following: electronic control system** Different When the ordinary is, it will light up when the engine switch ON is in. Please have it inspected by Suzuki service factory.

- RBS

→ 4-52 page (radar brake support (RBS))

- Improper start suppression function

→ 4-57 page

(Improper start suppression function)

- System on the other brake

Beam

- The RBS OFF switch lights up when you press and hold.

→ 4-60 page (radar brake support Port (RBS) OFF switch)

- Lights when the laser radar detects the dirt on the front glass.

→ 4-61 page

(Laser radar)

- **the system** Regular If ordinary that is the engine switch When you are in, and ON off after you turned on for about 3 seconds.

(36) radar brake support

(RBS) actuation indicator lamp

By equipment type



72M20304

- RBS or improper start suppression function will flash during operation.

→ 4-52 page (radar brake Support (RBS))

→ 4-57 page (improper start suppression function)

- **the system** Regular If ordinary that is the engine switch When you are in, and ON off after you turned on for about 3 seconds.

(37) fog lights indicator light

By equipment type



74P30830

 
While the fog lamp is lit, it lights up.

Light switch

Turning on and off of the light


It can be used regardless of the position of the engine switch, and turned on and off Turn the light switch knob (1) in the following manner.

Auto-light system-equipped vehicles

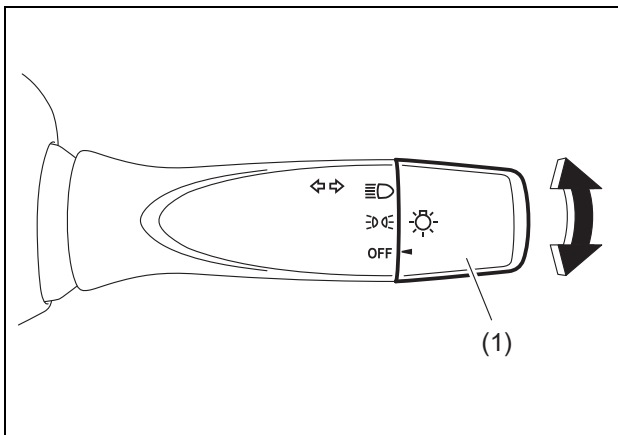
 


74P30560

Auto-light system vehicles

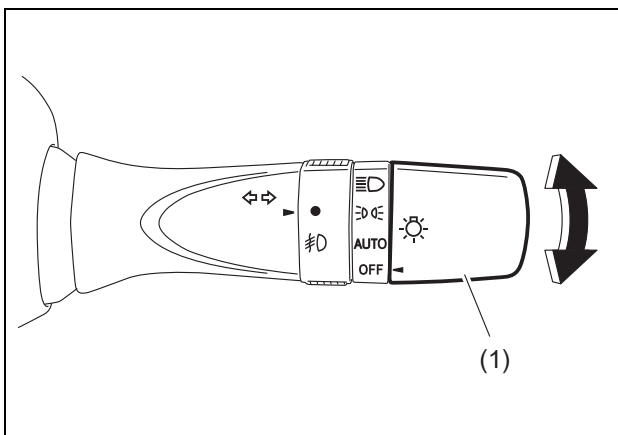

74P30880

Position of the light switch	Headlight (headlight)	Car width lamp, tail light, Number lights, instrument lighting
	turn on	
	turn off	Lighting
AUTO	Automatic turning on and off (※)	
OFF	Extinction	

※ auto-light system (data Type Another equipment)

It will operate only when the engine switch is in.

注 記

While the engine is stopped, Please Do not such a long period of time is turned on. Cause of lead battery up.

■ Auto-light system

By equipment type

Can be used when the engine switch is ON, headlight and car width lamp is automatically according to the brightness of the outside of the vehicle Lighting - turns off.

Engines A down switch | ACC | Or
LOCK If it (OFF), and automatically turns off.

- Turning the knob on the light switch to the position of AUTO, and then turned on and off in the following manner.

The brightness of the outside of the vehicle	Headlight (headlight)	Car width lamp, tail light, number lights, instrument lighting
Bright when	Extinction	
Off when dim		Lighting
When it is dark	Lighting	

注 記


AUTO The left engine switch of position If a manner that, **ON** if not bought or engine, and the outside of the vehicle becomes dark both light and side lamps will light up. And as it is a long time to turn on, please keep in mind that it becomes the cause of the lead battery up.

3

アドバイス

Or place objects on top and ambient of the auto light sensor (2), please do not leave blew such as glass cleaner. Defeated the sensitivity of the sensor is low, it will no longer lights on and off correctly.

Instrument panel passenger side

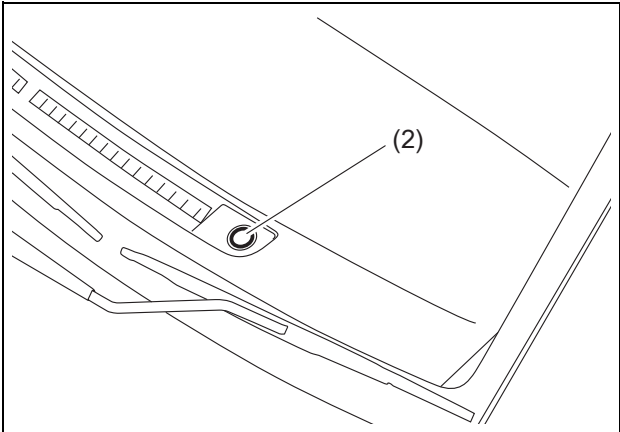

74P30890

Light forgetting to turn off the warning buzzer

In order to prevent forgetting to turn off the headlights and side lamps, opened the driver's door when such as the following, indoor buzzer will sound continuously with the "Pi".

Keyless push start system-equipped vehicles

Even after you remove the key, lights and car width lamp is lit

Keyless push start system vehicles

The engine switch **LOCK** To (OFF)
Even after that, lights and car width lamp is lit


And turn off the lights and car width lighting, interior buzzer will stop.

Light of the upward, downward switching it

When you switch the headlights to the upward (high beam), you can illuminate far.

- When the light is on, it will be up and press the lever (2) the car forward. Returning to the original position, it will be under direction.
- Regardless of the position of the light switch, and pull the lever to the front, while pulling, upward light is on.
- When you up the light, head light upward (high beam) indicator light in the meter lights.

→ 3-82 page (headlight upward (high beam) indicator)

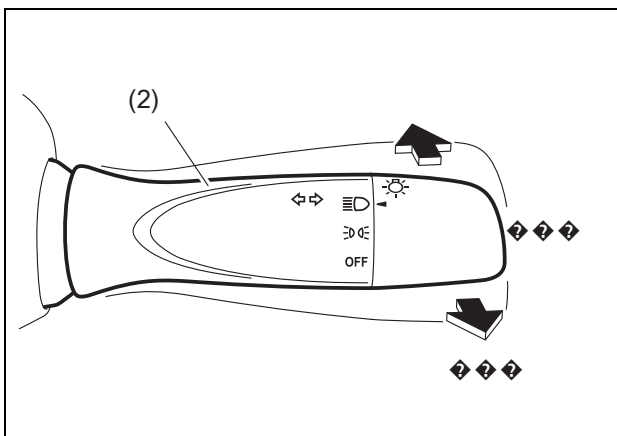

- Switch of the above diagram is a typical example. It depends on the type of your car.

アドバイス

When there is an oncoming vehicle or the preceding vehicle, please down the light.

Fog lamp switch


By equipment type

The headlights and side lamps are and can be used to come, and then use when there is poor visibility in rain or fog.

- If you Mawa the light switch of the ring (1) fog lights, fog lights indicator light in the meter lights.

→ 3-86 page

(Fog lamp lit indicator)

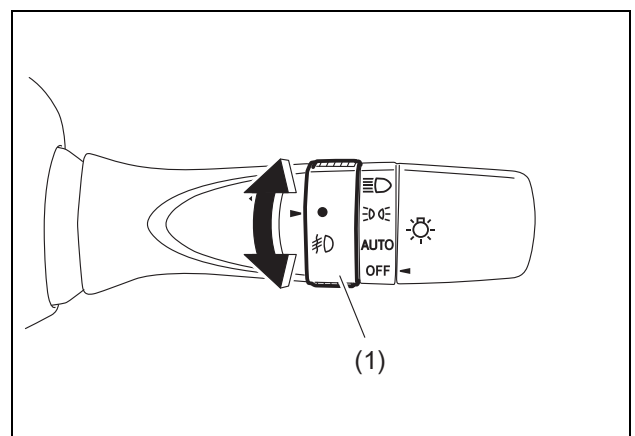

74P30900

注記

Because of the lead battery protection, please immediately turn off the switch When the visibility is getting better.


Optical axis adjustment dial

By equipment type

Halogen headlights vehicles, when turning the lights to the optical axis adjustment dial the light, you can adjust the light of the optical axis. And put the luggage and passenger light of the optical axis is at the top orientation, it will be the nuisance of the oncoming vehicle and the preceding vehicle. By operating the dial, please adjust the optical axis downward.

3

- Dial operation, please be carried out when the light is on downward (low beam). Light is steady upward (high beam), when or not lit, can not determine whether the optical axis is not properly adjusted.
- The scale of the dial 0 ~ Five Until there is, the optical axis is you can adjust in 11 steps (increments of 0.5).
- Increasing the scale of the dial, the optical axis will be downward.

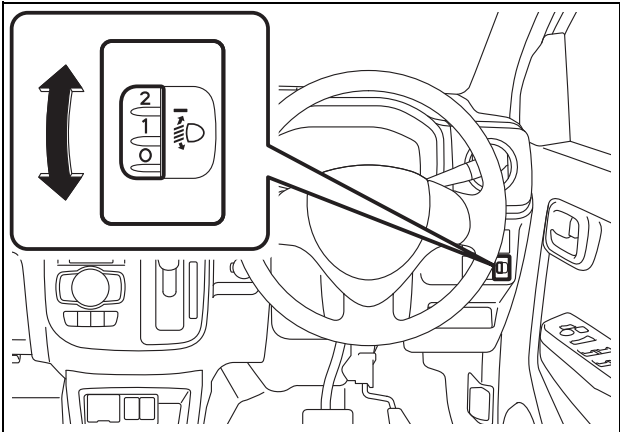

74P30580

- Will change by luggage and passengers of how to put it, please adjust to the appropriate position in reference to the numerical value in the following table.

<Measure of the dial position>

Passenger type vehicles

conditions	Dial position
Take only the driver's seat	0
Take the driver's seat and the passenger seat	0.5
4 passengers	1 to 1.5
Luggage compartment packed with 4 passengers	1.5 to 2
Luggage compartment packed in riding only the driver's seat	2-2.5

Commercial type vehicles

conditions	Dial position
Take only the driver's seat	0
Luggage compartment packed in riding only the driver's seat	2-2.5

警告

Do running is not a dial operation. Operation to be distracted, it can lead therefore it unexpected.

注意

When adjusting the optical axis of the base in such inspection, be sure to dial to the position of 0. When 0 at a position other than that to adjust the basic optical axis, such as a light of the optical axis faces upward from the reference and might serve as safety issues.

アドバイス

- When you operate the dial, the optical axis of the downward-out of light (low beam) and upward (Haibi-time) will be adjusted at the same time.
- In the case of discharge headlights vehicles, the optical axis is automatically adjusted.
→ 3-75 page
(Auto-leveling warning light)


Direction indicator switch

Engine switch You can use when.

When the right turn, left turn

Turn left at the time: you push the lever (1). Turn right at the time: Press down on the lever.

- Turn signal indicator on the direction indicator and the meter will blink at the same time.
- And return the handle to the original, the lever is returned to automatically, and the indicator light direction indicator is turned off.

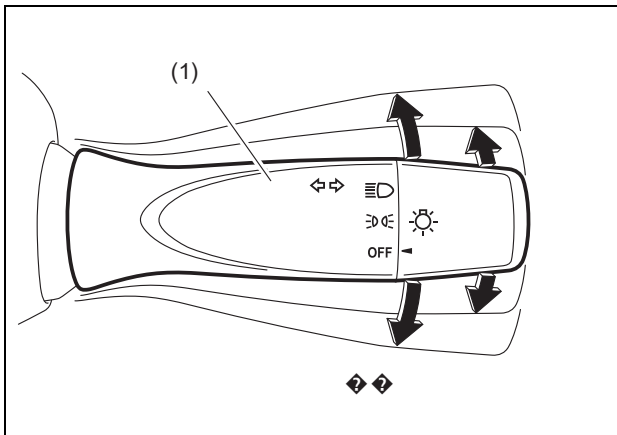

- Switch of the above diagram is a typical example. It depends on the type of your car.

アドバイス

If the angle to cut the handle is small, it may lever does not return automatically. Please return the lever by hand.

When the lane change


Press and hold lightly the lever in the direction of trying to change lanes.

- Only while pressing, turn signals and table 示灯 flash es.

Emergency flashing light switch

It can be used regardless of the position of the engine switch. Forced to use in an emergency or when the street parked car, such as failure.

- When you press the switch, turn signal indicator light of all of the direction indicator and the meter will blink.
- And it goes off when pressed again.

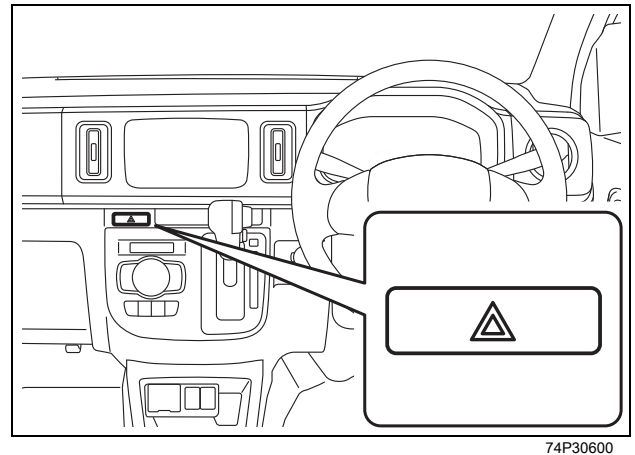

注記

Please do not blink for a long time while the engine is stopped. It will be the cause of the lead battery up.

Wiper / washer switch

Engine switch You can use when.



注意

Cold at the time of, washer fluid was sprayed on the glass surface is frozen, visibility might be evil Kunar. From warming the glass surface with a de Furosuta, please inject the watchdog Shah solution.

→ 5-2 page (defroster)

注記

- When the window is dry, please move the wiper from wet the cormorant indole in the washer fluid. When you empty the weapon there is a risk of scratching the glass surface and Waipabu blade (rubber portion).
- When the wiper blade is in the glass has had Ritsu, please do not operate the wiper. Or damaged blade portion (part of the rubber) is, there is a possibility that the wiper or malfunction.
- When the washer fluid does not come out sufficiently, please turn off the washer switch. It will cause the washer pump to malfunction.

■ When the wiper is stopped in operation

When the temperature of the wiper motor followed by a large load is that written state to the wiper such as snow goes up, the wiper will stop breaker is activated to protect the wiper motor. Be sure to deal with the following procedure.

- 1

Safe place Stop to Car, and en gin The switch

ACC

 Or

LOCK

Turn (OFF).
- 2

And the wiper switch to OFF.
- 3


Remove the hamper snow of any obstacle the operation of the wiper.
- Four

After a while the temperature of the wiper motor is reduced, the breaker is attributed automatic recovery will enable use of the wiper.

 - If the wiper can not be used even wait for a while, other reasons may apply. Please have it inspected by Suzuki service factory.

Front wiper switch

Operate lever (1) up and down.

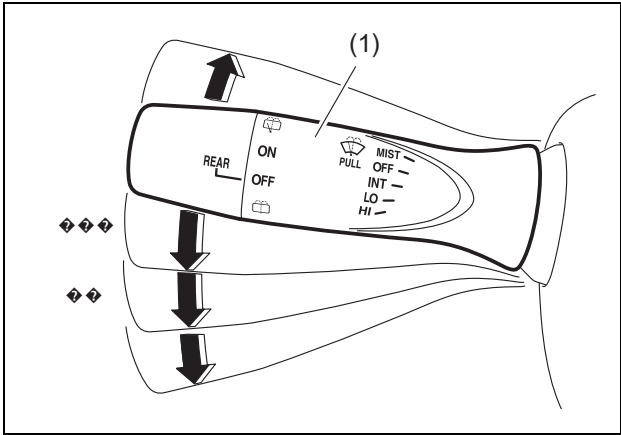


74P30610

- Switch of the above diagram is a typical example. It depends on the type of your car.

MIST	Operating while pushing up the lever
OFF	Stop
INT	Intermittent operation
LO	Low speed operation
HI	High speed operation

Front washer switch

 
When you pull in the lever (1) to the front, moves the wiper several times washer fluid is injected.

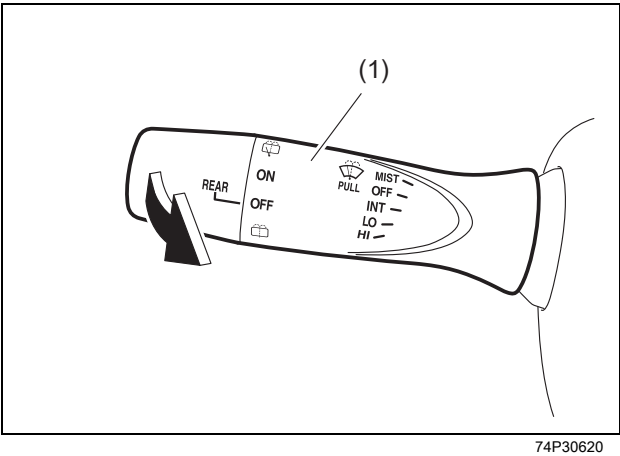

Rear wiper switch

By equipment type

 Turn the knob (2).

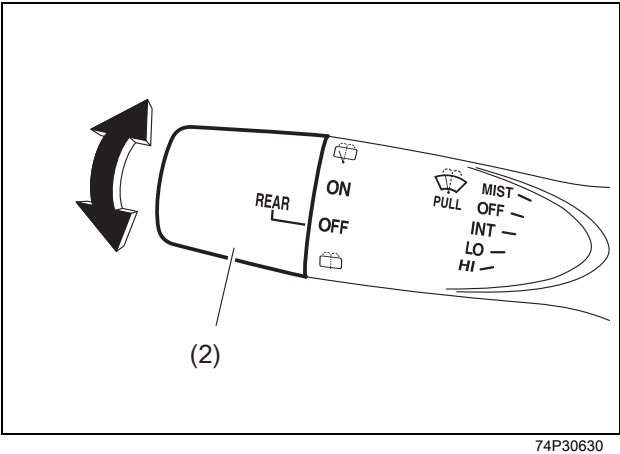


ON	Working
OFF	Stop

Rear washer switch

By equipment type

- **Figure of • Direction to turn the knob (2), and at the top of the ON (washer) to adjust** When the washer fluid is injected, will move at the same time the rear wiper is also linked. To return to the ON When you release the hand from the knob.
- **Figure of • Direction to turn the knob (2), combined and washer fluid to the bottom of the OFF (washer) is injected.**

 When you release the hand from the knob back to the OFF or be.

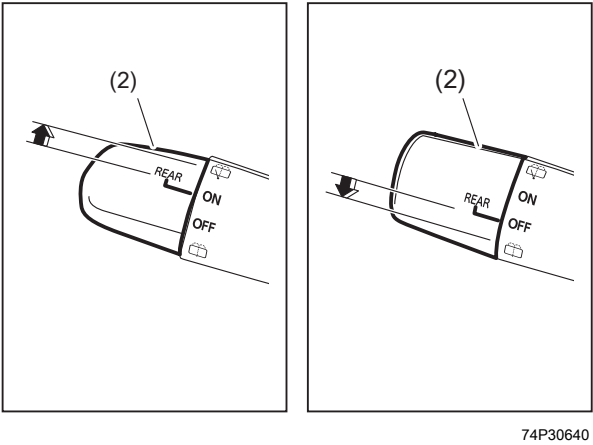

Horn switch

It can be used regardless of the position of the engine switch. When you press the part that had horn mark the month of the handle, the horn will sound or be.



Rear defogger switch

While the engine rotation, or can be used during idling
Stop system vehicles of the automatic engine stop, take
a clouding of the inner side of the back door glass.

 
→ 4-63 page
(Idling stop system)

- Back door glass is warmed and press the switch, indicator light in the switch (1) lights up.

Switch off and press again.


- When used in about 15 minutes continuously, it automatically turns off the switch.
- In use **D to The down Jin switch** **ACC** Or
Other **LOCK** If you (OFF), ene
Automatically switch does not enter even restart the gin.
- In the door mirror heater vehicles, simultaneous to the door mirror also warmed, it takes the mirror Nitsu Itakumori.
→ 3-27 page
(Door mirror heater switch)

Manual air-conditioned car

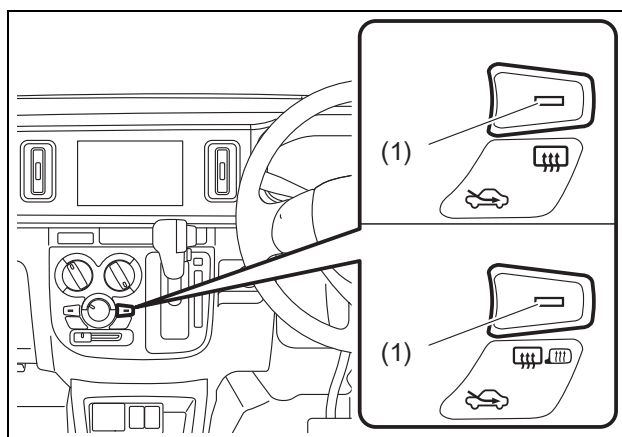

74P30650

 Automatic air conditioning cars

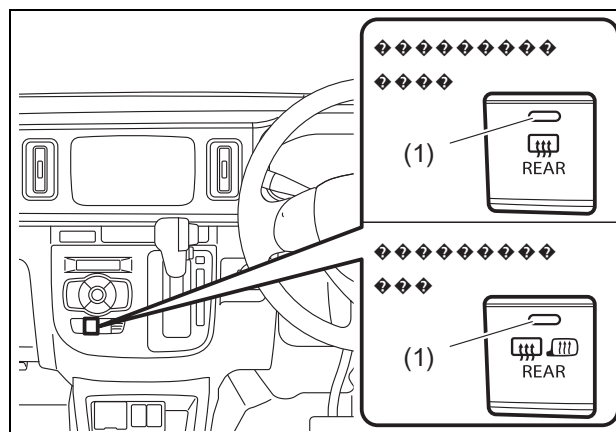

74P30660

注記

- Because of the lead battery protection, please turn off the quickly switch When the take is cloudy. You can also melt the snow, please do not use for the purpose of or dried rainwater.
- Care and wipe the interior side of the back door glass, so as not to damage the hot wire and terminals, please blowing along the heat line with a soft cloth dampened with water.

アドバイス

While the engine is stopped it does not enter the switch. (Except during automatic engine stop idling stop system vehicles)

[illegible]

4. When driving

- Engine start and stop
 - The function of each position of the engine switch 4-2
 - Immobilizer system 4-4
 - Keyless push start system 4-5
 - Engine of Kakekata 4-9
 - Stopping piece of the engine 4-13
- Parking brake
 - Operation of the parking brake 4-16
- Change lever
 - Operation of the change lever 4-17
- Automatic car
 - Operation of the select lever 4-18
 - Automatic car characteristics 4-21
 - when operating the automatic car 4-22
 - Way of operation of the automatic car 4-23
- Auto gear shift car
 - Operation of the select lever 4-28
 - Characteristics of auto gear shift car 4-34
 - when you drive a auto gear shift car 4-35
 - Way of operation of the automatic gear shift car 4-37

 
- ABS
Handling of ABS vehicles 4-43
- ESP®
ESP® Vehicles of handling 4-47
- Hill hold control
Hill hold control 4-50
- Driving support function
Operation support functions - - - - - 4-51
- Idling stop system
Idling stop system 4-63

Safe driving is first

Seat belt that has been installed on your car, SRS air bag system, also safety equipment such as ABS (anti-lock brake system), there is a limit to the occupant of the safety or be. As well as adhere to the legal speed limit, please try to safe driving in the conservative speed.


The function of each position of the engine switch

Keyless push start system-equipped vehicles

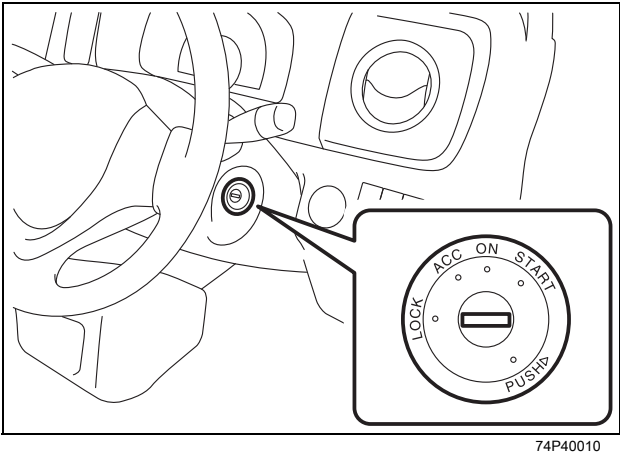

74P40010

 Keyless push start system vehicles

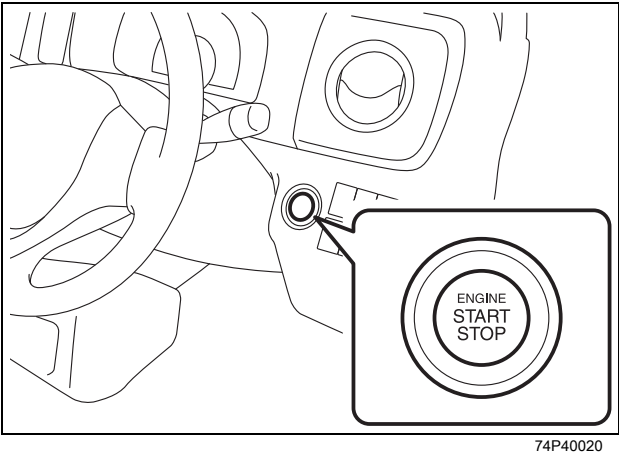

74P40020

 

 
 



Fou

- Engine switch of the above diagram is a typical example. It depends on the type of your car.
- If you want to start the engine, 4-9 page of" Kakekata of engine Please read ".

■ Keyless push start system-equipped vehicles

Engine switch Position of	State of the engine	Functions
<u>LOCK</u> (OFF)	Stop	When you park, is the position when connecting or disconnecting the key. And pull out the key, it takes a steering wheel lock.
<u>ACC</u>	Stop	Door mirror and Odioma other without the engine is the location when using navigation, accessory socket for any electrical equipment (the equipment by type).
<u>ON</u>	Stop	The position when using power windows and wiper such as electrical components without the engine (the equipment by type). Meter lights up.
	During the rotation	All of the electrical equipment you can use. The state of the during normal operation.
<u>START</u>	Starting	The position at the time of starting the engine. Starting the et al., Key Over Please release the hand from. Key to automatically Return to. <u>ON</u>

 ■ Keyless push start system vehicles



Engine switcher Position of the switch (※) engine status indicator of			Functions
 (OFF)	Stop	-	At the time of parking <u>By position</u> It is. The engine switch  (OFF) To to return, and to open and close any of the door, it takes a steering wheel lock.
	Stop	ACC	The position when using navigation door mirror or audio or without the engine running and Deployment, such as the electrical components of the accessory socket (the equipment by type).
	Stop	ON	The position when using electrical equipment such as Pawaui Ndo and wiper without the engine. Meter lights up.
	During the rotation	-	All of the electrical equipment you can use. Through is normal during operation of the state.
	Starting	 (Press the brake pedal Lighting a)	Put to the selector Trevor in possession of a mobile remote control  and press the engine switch stepping on the brake, and then automatically start.

Four





※ for the switching of the engine switch position, 4-5 page of "Keyless push Stars

  Theft system Please read ".

注 記

When you are stopping the engine, the engine switch  Or to remain 
Please do not. Also, please do not use such a long period of time navigation or audio, in that state. Cause of lead battery up.

 ⚠️ アドバイス

- Han Dollar locks normally, the engine switch  From (OFF)  Or  Will be released when you.
- In the case of keyless push start system vehicles, and the affected of strong radio waves or noise, push indicator light in the meter There is flashing, you may not be able to  of the power supply switching and engine.

Itoki handle lock such be cleared

■ Keyless push start cis Temu Non-vehicles

Key is LOCK From (OFF) ACC Nima
No Align. While moving lightly the handle to the left and right, please turn the key.

■ Keyless push start system vehicles

You can not start the engine. While moving lightly the handle to the left and right, please press the engine switch.



 
64L40180

Immobilizer system

Keyless push start system vehicles

The immobilizer system is Me other anti-theft, by Rukoto to communicate mobile remote control with the vehicle in radio waves, except in the remote control, which is registered in advance is a system to be able start the engine strange.

■ Immobilizer warning light

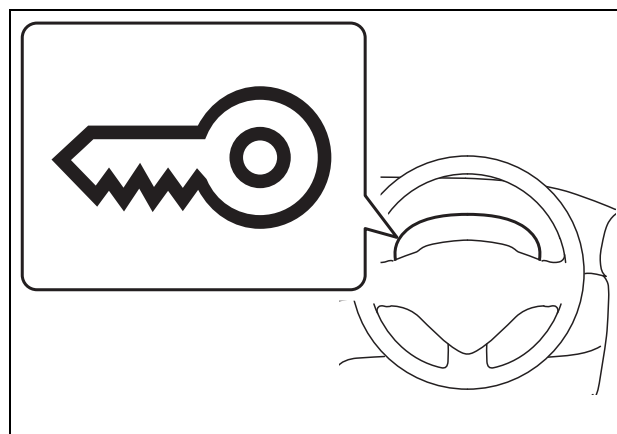

81M40141

Located on the meter panel.

→ 1-10 page (warning light and display light)

If the start-up of the engine is possible, when making the engine, turn off the lights and Taha about 2 seconds.

- If you blink or light up for about 5 seconds, there is a case where the engine is not applied. Of mobile remote control place Make sure, the engine switch

LOCK Back to the (OFF)

From, please repeat the operation.

→ 4-12 page

(When the push indicator is not applied
engine flashing)

- Even when the portable remote control is taken out of the vehicle warning is activated flashes.
→ 4-8 page (mobile remote control outside of the vehicle lifting
Chi issued warning)

Keyless push start system

By equipment type

Possession to have a mobile remote control " Work dynamic range of the vehicle "(4-8 page If that contains the reference), it will enable the switching of beauty power Hoyo starting by the engine switch. In addition, there is the addition to the following features.

- Keyless Entry
 - 3-8 page (keyless entry)
- Facilities tablets and unlocking of the door by the request switch
 - 3-11 page (mobile remote control)
- Immobilizer (vehicle anti-theft device)
 - 4-4 page
(Immobilizer system)

ACC indicator light



82K097

Located on the meter panel.

- Engine switch ACC Position near
That the lights.
 - 1-10 page (warning light and display light)
 - 4-6 page
(The way of switching power supply)

IG ON indicator



82K098

Located on the meter panel.

- Engines Down In stop state, the engine switcher switch Lights to be in ON position.
 - 1-10 page (warning light and display light)
 - 4-6 page
(The way of switching power supply)

Push indicator



 
82K174

Located on the meter panel.

- 1-10 page (warning light and display light)
- When lit by stepping on the brake pedal, you can start a normal engine. However, when the flashes can not be started,
4-12 page of" When the push indicator is not applied engine by flashing the Please read ".
 - When you blink and press the engine switch to not step on the brake pedal, 4-7 page of" When the push indicator lamp is not switched power flashing Please read the ".

Engine switch lighting

- Lights and open the driver's door. OPERATION seat door lights up close and about 15 seconds, it turns off while gradually dimmed.
- While the headlights and car width lamp is lit, it lights up. It will turn off and turn off the light.

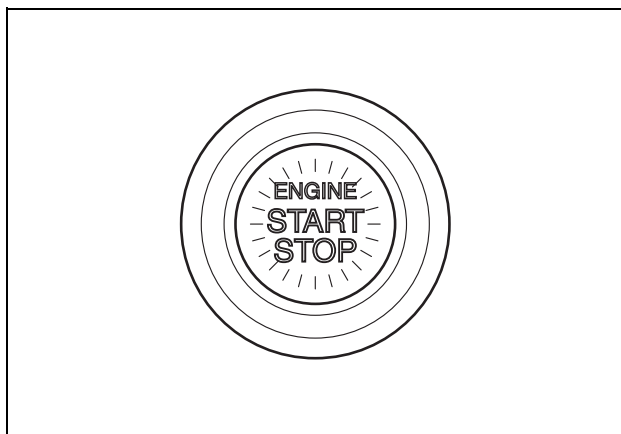

アドバイス

Because of the lead battery protection, and meet all of the following conditions, and automatically turns off. (Battery saver function)

- Headlights and car width lamp is turned off
- About 15 minutes passed without opening the driver's door

Way of power supply switching of

If you want to check the electrical components of use and meter without the engine, switch the position of the engine switch in the following manner.

 
It should be noted, "that of the switching Power supply switching example of "It's called.

1


In possession of a mobile remote control Wari be in the driver's seat.

2

Press the engine switch (1) to not step on the brake pedal.

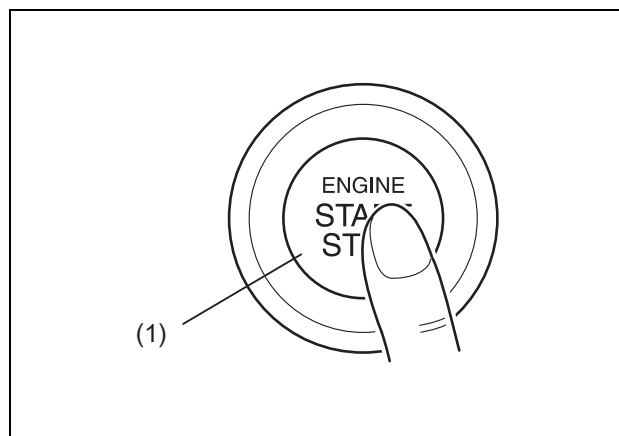

 - Position of the engine switcher switch as follows will change each time you press.

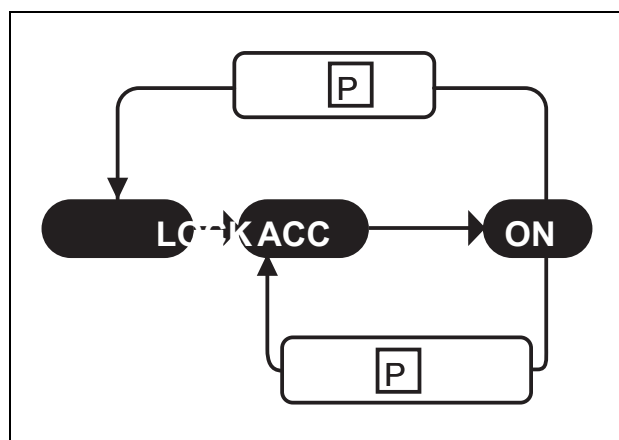

アドバイス

 
- Select **LOCK** But And it has entered into other than, **LOCK** Be returned to (OFF) not.
- Of the select lever **Malfunction** In such, the engine switch **LOCK** To (OFF) also Etc. It may not.
→ 4-15 page (engine switch)
When you return the can)

■ When the push indicator lamp is not switched power flashing

Mobile remote control " Operating range of the vehicle "(Page 48 It has not been detected by reference) it will be considered. The driver wearing a portable remote control, push indicator light in the meter After turning off, and retry the operation. If you still can not switch, there is a risk of the battery out of the mobile remote control. Please switch in the next procedure.

- 1 Press the engine switch (1) to not step on the brake pedal.
- 2 Within about 10 seconds to push indicator light in the meter is flashing, you rely on for about 2 seconds the tip of the mobile remote control (2) (Rocks switch side) to the engine switch.

- Push indicator  Blinking
In, lights immobilizer warning light for about 5 seconds.

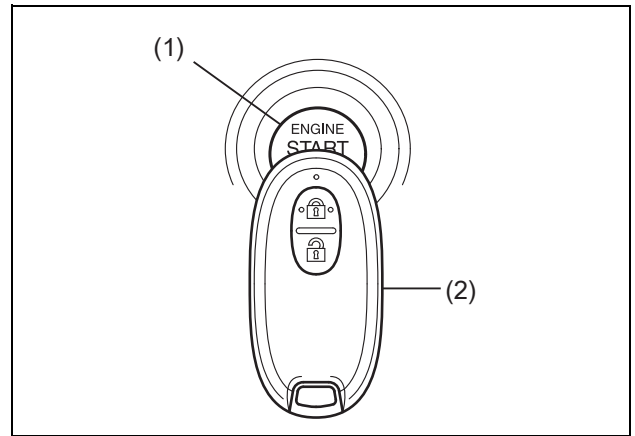

64L40030

※ such switched be subjected to the procedure
Itoki is, it could be another cause, such as a lead battery up. Please contact your Suzuki dealer or Suzuki agency.

アドバイス

- If you set switch the (customized), handheld remote controller detects out-of-range warning buzzer (the indoor buzzer) can and one is- suing. With the switching of the settings, please consult your Suzuki dealer or Suzuki bill management shop.
- Battery of portable remote control **OFF** When the record is close, when it is in the engine switch **ON** portable remote control battery warning light in the meter will turn on for about 15 seconds.
→ 3-13 page
(Mobile remote control battery warning light)
→ 6-10 page
(Battery replacement of the remote control key)

Mobile remote control is taken out of the vehicle warning

Following cases, with indoor / external buzzer sounds about 2 seconds intermittently, immobilizer warning light flashes in the meter, warns the taken out of the vehicle of the portable remote control.

 
- engine rotation In, or D Njinsu switch is

ACC Or Position Near

In that state, I opened one of the doors, mobile remote control at the time of closing all doors after the Soviet Union in the car Absent Case

- Engine switch ACC Or ON

A state at the position, if the handheld remote controller is not in the vehicle when was Utoshi place a engine

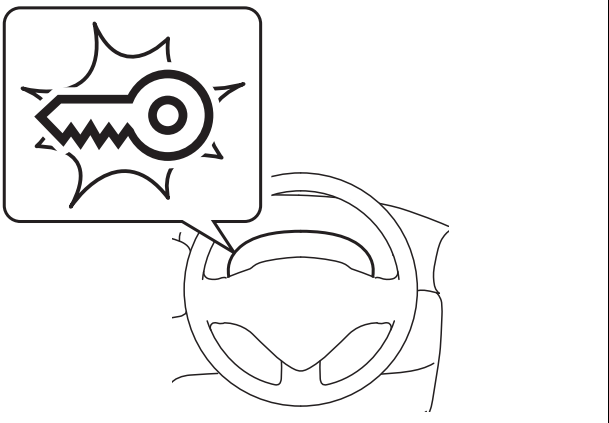

74P0001

When an alert is activated, please promptly return the mobile remote control in the car.

- In warning the operation can not restart of the engine.
- Flashing immobilizer warning light, usually, a mobile remote control is off a little to from getting back in the car. Extinguished

There is no place If is, once the engine switch

LOCK

 
Please re-operation from the back to the (OFF).

アドバイス

Mobile remote control is in possession of the driver, please management.

Engine start / power supply switching / portable remote control is taken out of the vehicle warning operation range WARNING (vehicle)

" Operating range of the vehicle "(1) is a passenger compartment with the exception of such as on top of the instrument panel and luggage compartment.

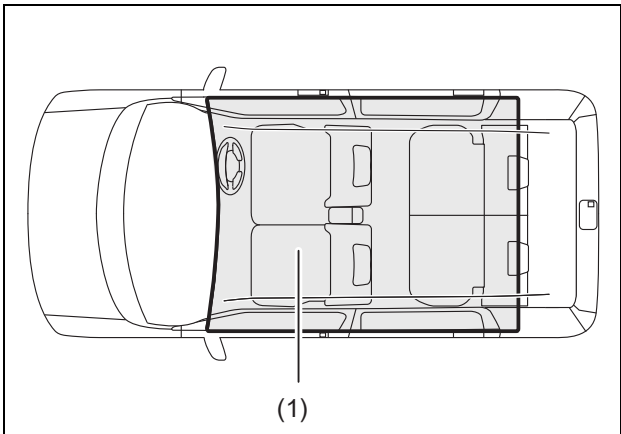

81M40230

アドバイス

- " Operating range of the vehicle Even if there is a mobile remote control to ", the remote control is not detected to be in the following situations, you may not be able to start the engine and power supply switching. In addition, there is a case where the portable remote control is taken out of the vehicle warning is activated.

- The battery of the mobile remote control is not exhausted

That

- Strong radio waves or noise mobile remote control

I have received of influence

- Contact mobile remote control and made of metal

Or have been, are or covered

- Where Ya the mobile remote control recessed

Such as in storage space

→ 5-59 page

(Instrument panel storage space)

→ 5-60 page

(Drink holder)

→ 5-62 page

(Other equipment)

- Mobile remote control of the instrument panel

A front or sun visor, on the floor

- **Operating range of the vehicle** Even if there is no mobile remote control ", to be in the following situations are detected remote control is, you may be able to switch the engine start and power. In addition, mobile remote control is taken out of the vehicle warning might not work.

- Even if there is a mobile remote control to the outside of the vehicle
It is too close to the door
- On and load a mobile remote control of the instrument panel
In the room

Takekata of engine

2-12 page of" If you want to apply the engine "Please read also together.

アドバイス

- If you turn off the switch, such as head lights and air conditioning, engine will be is an easy-to-understand either.
- If you can not handle lock is released, you might not be able to the start-up of the engine.

 
→ 4-4 page (handle locks
When you can not be released)

Four

Keyless push start system-equipped vehicles

1


Make sure that the parking brake (1) is firmly Rikaka'.

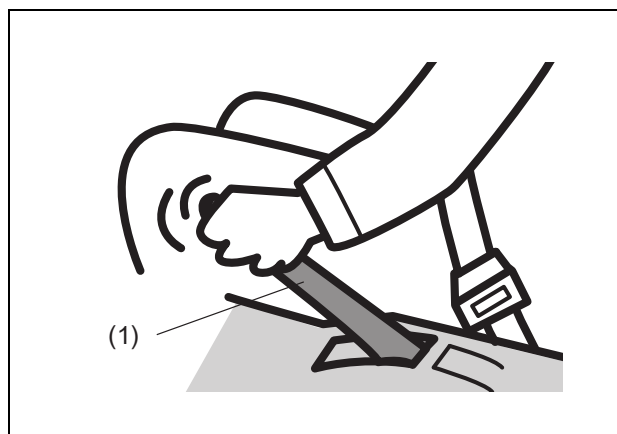

80J1037


2 Manual car Is, the change lever
But make sure it is in the N (neutral).

 Automatic car The select Les
Make sure **P** that the bar is entered into.

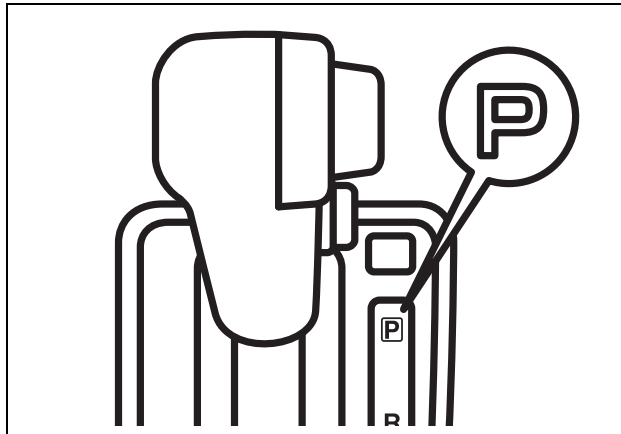

74P20010

 
Auto gear shift car The engine
The switch In it, **ON** confirmed by the select
lever position **P** display in the meter that the select
lever is turned.

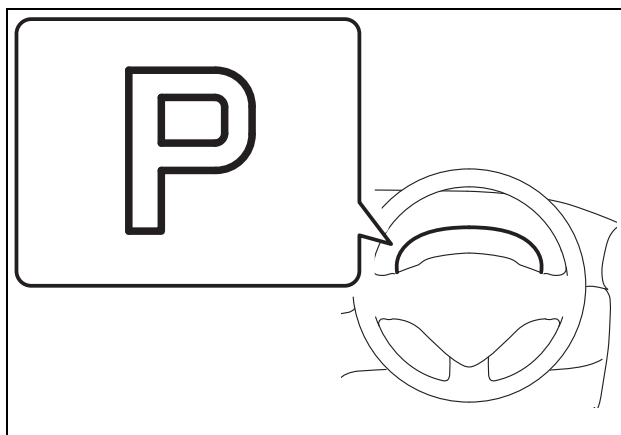

74P40030

3 It will continue to tread firmly on the brake pedal (2) in
the right foot.

 - Please do not step on the accelerator pedal (3).

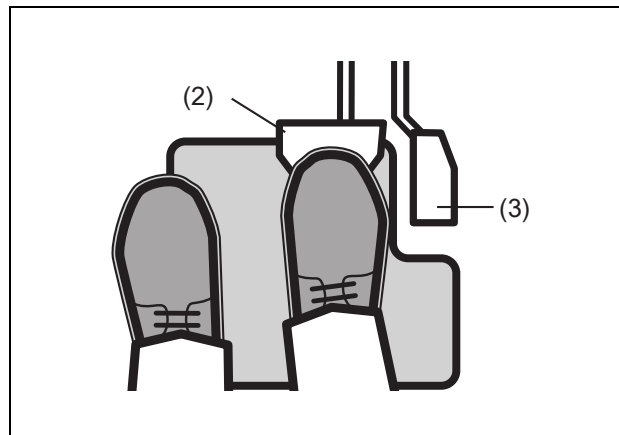

64L40060

 
⚠️ アドバイス

Auto gear shift car

In the case of, mail
Select lever position in the Tar is-out P Noto, engine
start-up even without stepped on the brake pedal is
possible, please stepped on safety because brake
pedal was of. If when the display is N not continue to
look at Stepping on the brake pedal, the engine can not
be started.

Four Manual car

, The clutch with his left foot
You see write stepping up to full pedal (4).

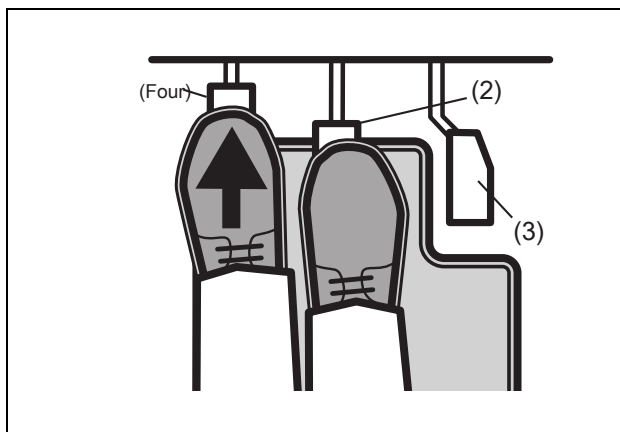

64L40160

 
(2) the brake pedal (3) an
accelerator pedal

■ Clutch start system

Manual car, not from turning the Starter and not depressed the clutch pedal as far as it will go, you can not the engine at start-up.

Five key

START Turn up.

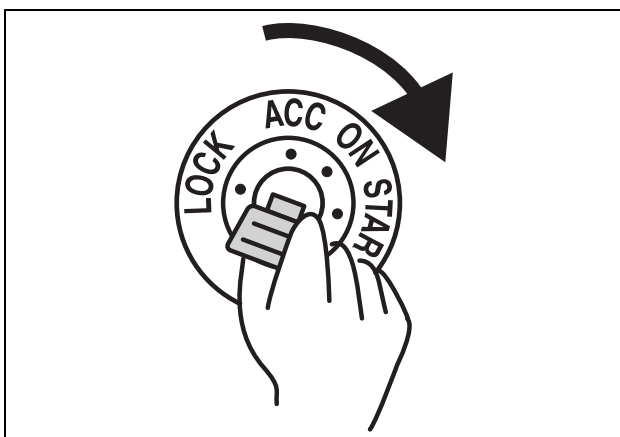

80J1036

- If you took the engine, release the hand from promptly key.

Auto gear shift car

- When the select lever is, the blanking
Rekipedaru Do not step on The engine switch
Ide START If you,
Brake request indicator is turned on, you will
hear a warning buzzer.

- Select lever or P N
In addition to , The engine switch
START If you, you look like the
following.
 - Brake request indicator
Lighting ter is
 - Select lever position display or
Gear position indicator is flashing
 - Warning buzzer is sounding

※ engine be subjected to the procedures or
When not scolded, it could be another cause, such
as a lead battery up. Please contact the Suzuki
dealer or Suzuki agency.

注 記

Lead back For Terry protection, the key

START Please do not continue more than eight seconds

a state in which the turn to. Engines Down is When Kaka should not
be, the key once ACC To

 
Back, please only do again, wait at least 10
seconds.

Keyless push start system vehicles

1, 2, 3 is the same operation as keyless push-start system-equipped vehicles.

Four When you push indicator light in the meter turned on, press the engine switch (1). When the engine is either bought, the starter will stop automatically.

- May not take the engine, Starter will automatically stop after a while. After the automatic stop or system failure at the time of, as long as you hold down the engine switch and around the Starter.

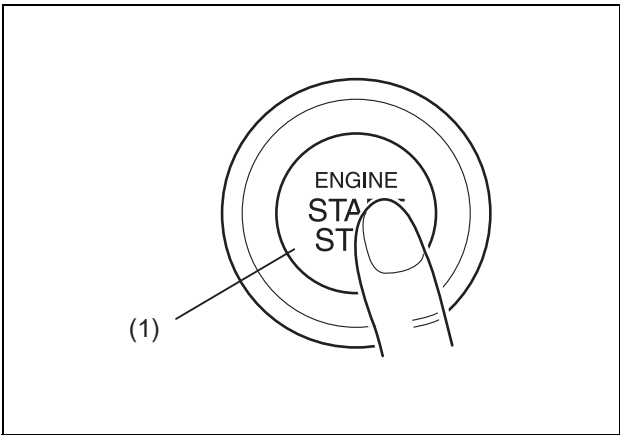

82K254

- When the push indicator is not applied engine flashing

 
Mobile remote control " Operating range of the vehicle "(Page 48 It has not been detected by reference) it will be considered. The driver wearing a portable remote control, push indicator light in the meter After turning off, and retry the operation. If you still can not take the engine, there is a Re emesis battery out of the mobile remote control. Sai that will perform the following steps.

1 It reaffirmed that it contain a select lever is in, will continue firmly stepping on the brake pedal.

2 When you push indicator light in the meter turned on, press the engine switch (1).

3 Within about 10 seconds to push indicator light in the meter is flashing, you rely on for about 2 seconds the tip of the mobile remote control (2) (Rocks switch side) to the engine switch.

- Push indicator In, lights immobilizer warning light for about 5 seconds.

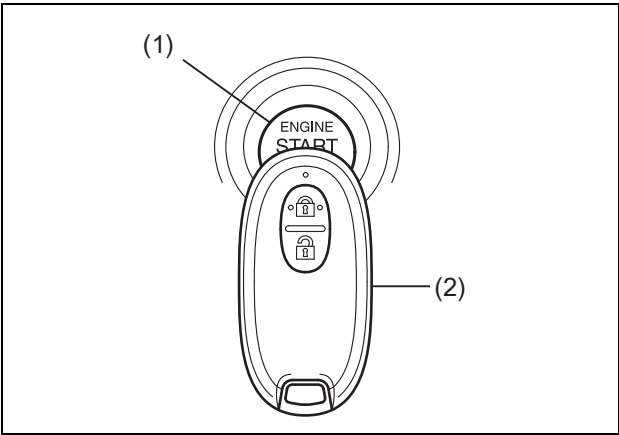

64L40030

※ engine be subjected to the procedures or When not scolded, it could be another cause, such as a lead battery up. Please contact the Suzuki dealer or Suzuki agency.

🔧 アドバイス

- If you set switch the (customized), handheld remote controller detects out-of-range warning buzzer (the indoor buzzer) can and one is- suing. With the switching of the settings, please consult your Suzuki dealer or Suzuki bill management shop.
- **Battery of portable remote control OFF** When the record is close, the engine switch When it, **On** the remote control battery warning light in the meter will turn on for about 15 seconds.
 - 3-13 page
(Mobile remote control battery warning light)
 - 6-10 page
(Battery replacement of the remote control key)

Stopping of the engine how

To stop the engine



Other than an emergency, please do not stop up the engine while the vehicle is running.

- Since the brake booster does not work, you will need a strong force when stepping on the brake pedal.
- Since the power steering system does not work, the handle becomes heavy.
- The following features will not work.
 - ABS (equipped by type)
 - ESP® (Equipped by type)
 - Les over Dark-Brakes support port (RBS) (equipped by type)
 - Improper start suppressing function (equipped by type)
 - Emergency stop CIGNA Le (ESS) (equipped by type)
- Auto gear shift car Is, the death of AGS
It carries the risk that the stem is no longer working.

Four

注 記

When you stop the engine while the vehicle is running, the auto matic transmission (type There is a possibility that another equipment) may be damaged.

■ Keyless push start system-equipped vehicles

The engine switch ACC Modoshima to It is.

!

警告

Manual car

It is Running , Absolutely to the edge

Jin switch

LOCK To Do returned

Please Do not. When a key event exit, handle Ri is no longer Mawasemasu is locked and can cause lead to unexpected accident.

Fou

■ Keyless push start system vehicles

State engine stop method for a vehicle	
During a stop	Press the engine switch
Running (emergency)	The engine switch 3 battered or more, or press or long 2 seconds

- If you can not stop the engine in the vehicle is stopped, the engine switch 3 barrage or more, or, please press greater than or equal to the length 2 seconds. In this case, since the abnormality of the system will be considered, please have it inspected by Suzuki service factory.

When removing the key

Keyless push start system-equipped vehicles

And pull out the key, it takes a steering wheel lock.

1 Automatic car Otagiya , It was placed in the Shift select lever and release the button on the selector lever.

- Because of the erroneous operation prevention, to or only key missing when you are plus look at the following conditions.

 
- Select lever position P
- Hand from the button of the select lever
- and release the automatic car

→ 4-21 page (Key interlock)
→ 4-26 page (parking)

Auto gear shift car
→ 4-35 page (Key interlock)
→ 4-41 page (parking)

2 key LOCK To return to the (OFF)
And remove the key.

- Manual car ACC LOCK → (OFF), loincloth Push the key.

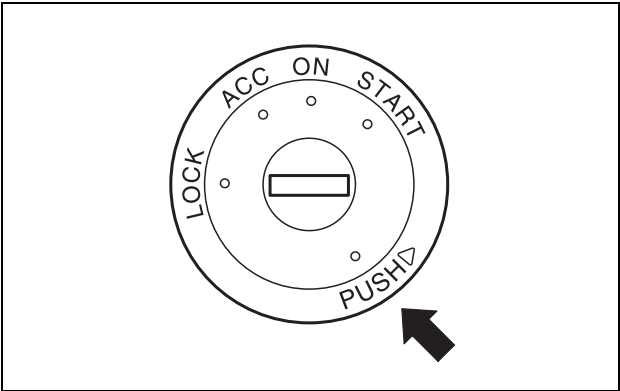

64L40170

- Key forgetting to pull out warning buzzer

Is the buzzer to prevent forgetting to pull out of key.

- key ACC Or LOCK To (OFF)
Opening the left driver's door was, you will hear the indoor buzzer is "copy, copy," and intermittently.
- And pull out the key to stop the indoor buzzer.

Care and return the engine switch

Keyless push start system vehicles

- 1 Put to the select lever, to P release the button on the selector Kutoreba.

→ 4-18 page

(Operation of the select lever)

- 2 Press the engine switch to return to LOCK the (OFF).

- The engine switch LOCK (OFF)
When you open and close any of the door to return to, it takes a steering wheel lock.
- Because of the erroneous operation prevention, next As When such is the engine switch LOCK To (OFF)
It can not recover.
 - Other than the position of the select lever P
 - Entered position of the select lever is in P

Even though, when you hold down the button on the selector lever

→ 4-26 page (parking)

- Select lever Because of the Disabilities, etc., the engine switch LOCK It returned to (OFF)
You might not. Please have it inspected by Suzuki service factory. In addition, please refer to the following tasks before inspection.

- In order to prevent the theft, door by key operation

Please to lock the. (It can not be locked in the request switches and keyless entry)

- In order to prevent the lead battery up,

Please remove the negative terminal of the battery.

(Commercially available tool such as a 10 mm wrench required)

Engine switch back forgotten warning buzzer

Is the buzzer of the order to prevent the forgotten back of the engine switch.

- The engine switch ACC Nishitama
When I opened between the driver's seat door, indoor buzzer is "copy, copy," and sounds intermittently or be.
- Put to the select lever, release the button on the selector Trevor You . When you press the engine switch twice to return to the (OFF), you Ri LOCK indoor buzzer.

LOCK If you do not returned to (OFF), the door can not be facilities tablets in requests switch and mobile remote control.

Handle lock not working warning buzzer

Failure or the like, and return the engine switch LOCK, intermittently any one of the even when the door open closed handle is not locked If, opened the driver's door, the room buzzer "beep, beep," and It will sound. Suzuki service factory in Sai that we have it inspected.

Operation of the parking brake

Parking brake takes to the rear wheels or be. Please firmly Apply the parking brake when parking.

⚠ 注意

Hill hold control vehicles cases, it does not inhibit Le hold control and apply the parking brake is actuated.

→ 4-50 page
(Hill Hold Control)

- Hill hold control ESP ®
It is equipped to vehicles. (In the case of Alto)

In addition, under the handle right ESP ® By the presence or absence of the OFF switch, ESP ® You can of vehicles identified.

 
→ 4-49 page
(ESP ® OFF switch)

When you park

Without pressing the button (1) and pull up to fill the parking brake Kireba.

To cancel

- While a little pulling the lever push the (①) lever the tip of the button (1) (②), and then lower it all the way to the bottom (③).
- When hill start is, carefully stepping on Akuserupe Dar in his right foot while applying the parking brake, please release the parking brake while confirming the feeling that the car starts to move.

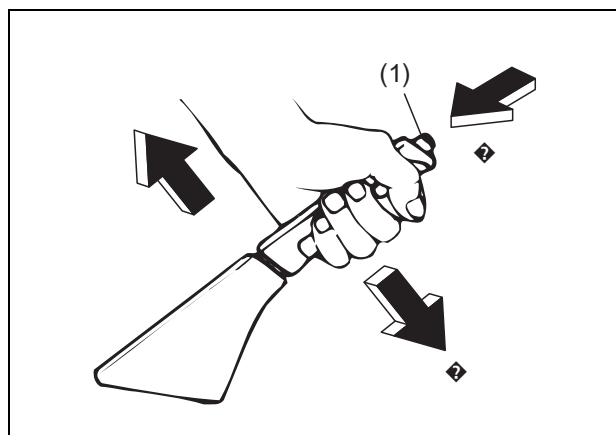

71L40081

⚠ 警告

When you release the parking brake, brake warning light in the meter Please make sure you are unlit. One million, if the vehicle travels while applying the parking brake and can cause the brake system to overheat become ineffective brake.

→ 3-72 page (brake warning lamp)

■ Parking brake release forgotten warning buzzer

 
When traveling while forgotten to release the parking brake, indoor buzzer will continue to sound the "Pipipi", "Pipipi".

Operation of the change lever

Manual car

When operating the change lever is stepping into fill the clutches pedal.

- Because of the erroneous operation prevention, it can not be put directly to the 5 gear to R (Reverse). Please operate to R from once put in N (neutral).

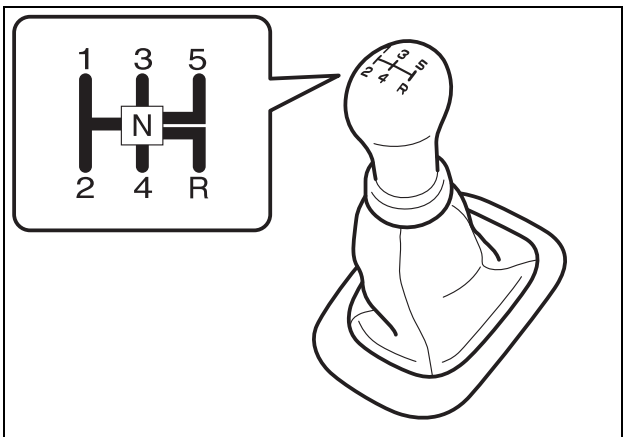

注記

Rutoki put the change lever to the R (reverse), please operation from completely stopped the car. When you operate in a state in which they are not completely stopped, it will cause the transmitter and Deployment may be damaged.

Maximum speed of the shift down

To prevent over-rotation of the engine, sure to shift down below the upper limit speed in the following table.

Shift down the upper limit speed (km / h)	
2-speed → 1 speed	35
3-speed → 2-speed	60
4-speed → 3-speed	100
5-speed → 4-speed	140

※ Depending on the type of driving conditions or your car, this
It may not reach the upper limit speed.

注記

 
Please do not shift down at a rate that exceeds the upper limit speed. The rotation of the engine is too high, it will cause the engine to fail.

Operation of the select lever

Automatic car

※ If you have been described as "automatic car" in this document, it shows the "CVT vehicle".

 
The function of each position of the select lever

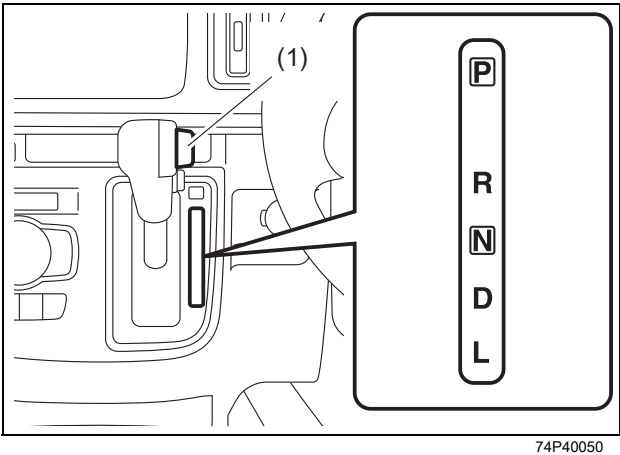


 
 
(1) button

<div>P</div> parking	When you park, when you start and stop the engine keyless system-equipped vehicles <ul style="list-style-type: none">The drive wheels (front wheels) will be fixed.
<div>R</div> reverse	Position when retracting the car <ul style="list-style-type: none">Sounds a warning buzzer in the room, it tells you that you have entered into the <div>R</div> select lever to the driver.
<div>N</div> neutral	Position of the state in which the power starts and the engine does not transmit <ul style="list-style-type: none">You can start the engine, but please start at the position <div>P</div> for safety.
<div>D</div> drive	Position of the normal running <ul style="list-style-type: none">The depression amount of vehicle speed and accelerator pedal, can travel automatically shifting.
<div>L</div> Low	Position, such as when to twist a powerful engine brake <ul style="list-style-type: none">Use this when you want to travel the steep downhill.

Move the selector lever the way

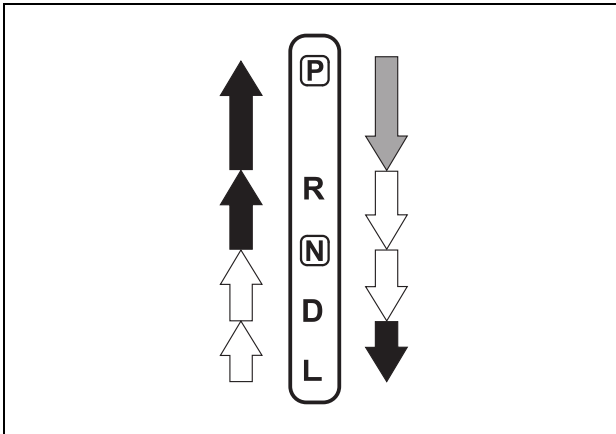

74P40060

	Stepping on the brake pedal, and move the selector lever while holding down the button.
	Move the selector lever without pressing the button.
	Press and hold the button and move the selector lever.

注 記

Were allowed to completely stop, please put it in the select lever. When the car is have dynamic, it will cause the transmission to malfunction. Incidentally, CVT vehicles for transmission protection, variable before advancing when the vehicle speed is greater than about 10 miles / h

It will not be fast. (Remain neutral)

アドバイス


 

 
↑ ↓ Of operation, be sure to wear a habit you do not press the button on the selector lever. Always button Press And to have the operation, wrong

 To put want

There are precautions may cause.

■ The shift lock system

Such as when to start, is a system to prevent the erroneous operation of the select lever.

- Engine switch  In brake
Only when you are stepping on the pedal, it can be moved to another position from the selector lever.
- Engines Down switch  Or  When the (OFF), even if stepped on Burekiye Dar, can not move to another position from the select lever.
- Do we press the button of the select lever, Do not step on the brake pedal. You might see a shift lock is not released.
- Should the engine switch  West
Te, if you do not move from the selector lever also stepping on the brake pedal to another position, the next "How to cancel the shift lock "Please read the, please release the shift Torokku. In this case, any failure of the shift lock system will be considered. Tadachinisuzuki service factory in Sai that we have it inspected.

! 警告

Or spilled and drink to the select lever moving parts, if it is or contains foreign matter to the inside, because there is as it is a risk that if continue to use shift-lock system may not function properly, promptly checked by Suzuki service factory please received by.

! 注意

When you start, please operate the select lever remains stepped firmly on the brake pedal.

■ How to release the shift lock

 
Of the shift lock system failure or lead back Te

In such as Lee up, when not move from the select level P to another position, you can release the shift lock in the following procedure.

1 ACE safety For, the engine switch

To firmly put the parking brake, and then to state that stepped on the brake pedal.


2 While holding down the shift lock release button on the selector lever panel, to operate the cell Rekutoreba.

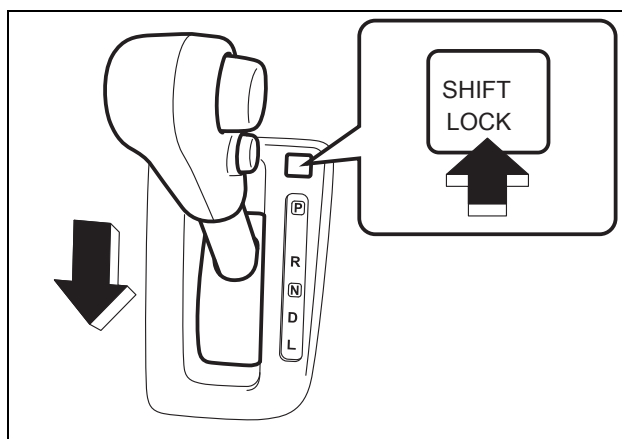

74P40070

S (sport) mode switch

 - Each time you press the switch to toggle between ON and OFF.
- When ON, S (sports) mode indicator light in the meter lights.
- S (sport) mode switch, at the time of engine start-up to return to the OFF state.

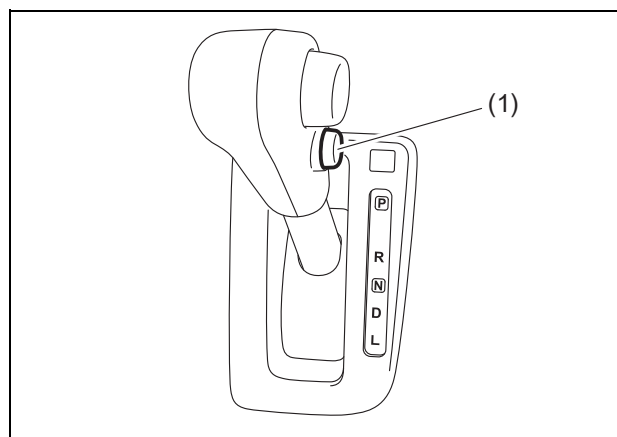

74P40080

(1) S (sport) mode switch

■ When the switch is ON

It is suitable for traveling of the hill and mountain paths.

 
- In the downhill, Ri written the engine brake.
- In the uphill and mountainous road maintaining high engine speed, it is strong and smooth running change is not small of engine rotation.

■ When the switch is OFF

It is suitable for normal driving.

- You can high running of the fuel economy performance and quietness.

■ S (sport) mode display

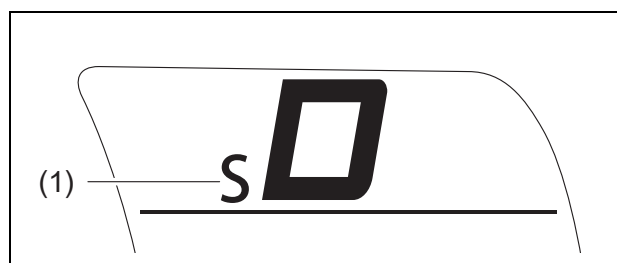

74P40090

 
S (sport) mode switch-out ON Noto, S (sport) mode display (1) of the meter in the panel will be displayed.

→ 1-10 page (warning light and display light)


Characteristics of the automatic car

Automatic car, driving operation is released from the clutch operation and formic Yachenji is but will be easier, there is a note on the automatic car-specific phenomenon and operation.

Be aware of the creep phenomenon

When you are stopped by multiplying the engine, the back Rekutoreba  It contains in addition to the That and, also will move the car slowly not step on the accelerator pedal. This is called creep phenomenon.

⚠ 注意

- A select lever  Put in other than When is, please firmly stepping on the brake pedal.
- Such as at the time immediately after the start of the engine and air conditioning working, it may creep phenomenon becomes stronger. Please step on a firm brake pedal in particular.

🔧 アドバイス

CVT vehicle also has creep phenomenon.

Kick down

It depresses running to fill the Akuserupe Dar (except at low vehicle speed), automatically engine rotation to shift down is increased, it is powerful acceleration. This is called a kit Kudaun.

- If you want to, such as overtaking is depressing to fill the access Rupedaru. Powerful acceleration and kick-down can be obtained.

⚠ 注意

When the normal acceleration, please depress slowly Akuserupe Dar. Depresses full, kick down

To there is a rapid acceleration of fear unexpected.

Uphill downhill shift control


It controls the selector lever  actuated in the position.

- If it is determined that the medium uphill to shift down maintaining high engine speed, you can smooth running with less Aku cell operation.
- If it is determined that the descending Sakanaka to shift down, it will take the engine brake.

Key interlock

Keyless push start system-equipped vehicles

 
For error prevention, and missing key only when the following conditions are met: This is called key interlock.

- Select lever position 
- And release the hand from the button of the select lever

→ 4-14 page (when removing the key)

When operating the automatic car

Transmission warning light

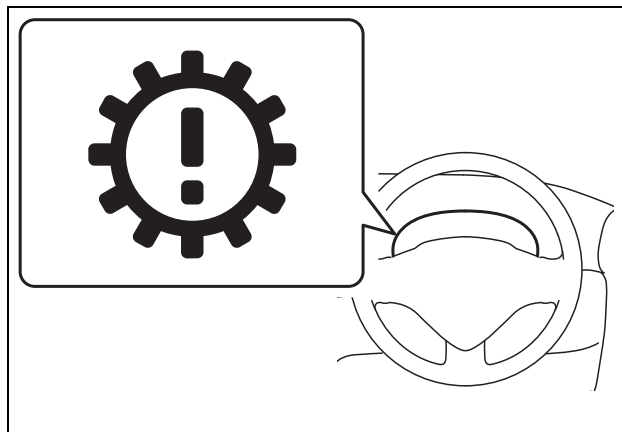

81M40161

Located on the meter panel.

- To the CVT system Different When the ordinary is, engine switch Lights when

→ 1-10 page (warning light and display light)

R (Reverse) position warning buzzer

In the room and placed in **R** select lever
Warning It sounds tell buzzer, select lever
R It informs the driver that are in the.

⚠️ アドバイス

R (Reverse) position warning buzzer, it does not belong to order news retraction of the car to the outside of the vehicle of the person.

 
Note the erroneous application of the pedal

In order to prevent the erroneous application of the pedal, stepping in actually foot the accelerator pedal and the brake pedal before subjecting the engine, please check the position.



If the wrong look Stepping on the accelerator pedal and the brake pedal, it may lead to unexpected accident.

Brake pedal is stepping in the right foot

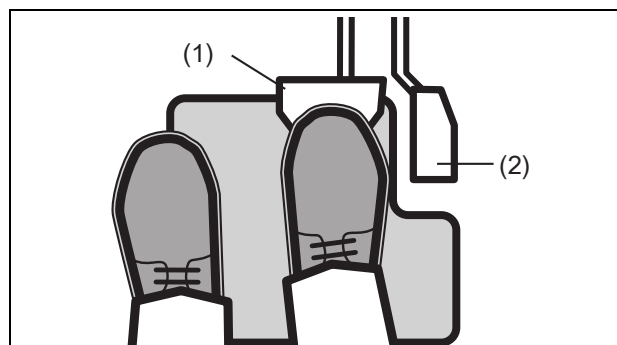

64L20140

(1) Brake pedal (2) the accelerator pedal

You can not have the appropriate brake operation in the left foot. Brake pedal, please wear the habit of stepping in the right foot.

When you operate the select lever

- Such as when to repeat the advance and retreat, it may be forgotten that it has put into the back Rekutoreba. Is after retracting the car, please wear a habit to put in color immediately. **N**
- When you repeat the forward and backward crosscut, etc., Please operate the select lever from the fully stopped.

 


Please do not operate the select lever while stepping on the accelerator pedal. There is a risk of accident and Kyuhatsu advance.

Position of the select lever is confirmed by eye

When starting up and get off the vehicle, during forward, please check with the eyes that are in the time of recession.

When away from the car

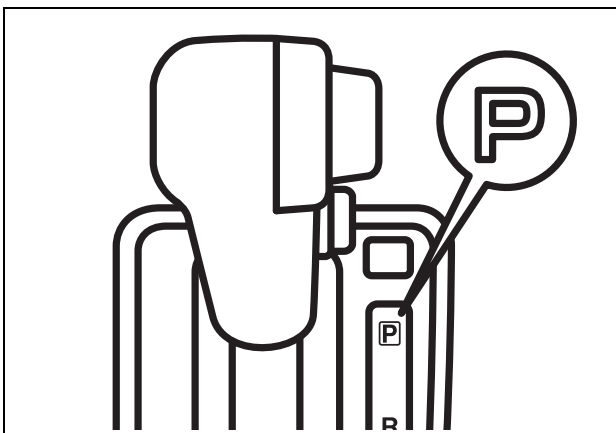

74P20010



Not away from the car while the engine running

so Please give me. You should select lever

P And it contains in addition to, there is a possibility that the car starts to move alone. Also, in Dari depress the accelerator pedal or move the selector Trevor accidentally when you get into the car, there is a risk of sudden acceleration unexpected.

Way of operation of the automatic car

4-18 page of "Operation of the select lever" Also we read together, please refer to the correct handling.

Sitting in the driver's seat

 
- 1 Pedal is surely stomping, tweezers the seat adjusted to handle operation is easy to perform position, and adjust the handle (type-specific instrumentation Bei).

→ 3-28 page (front seat)

→ 3-28 page

(Tilt steering)

- 2 The position of the accelerator pedal (2) and Burekiye Dal (1) verify with his right foot.

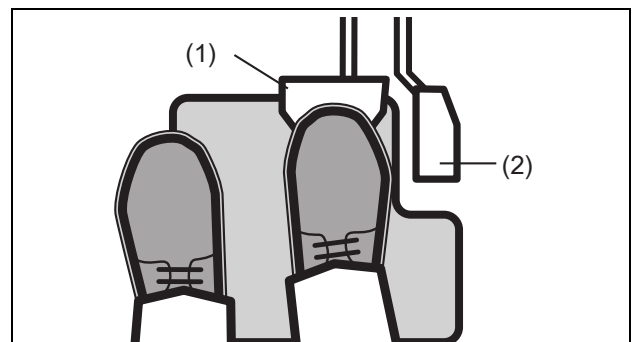


64L20140

The start of the engine

It is over how details of the engine, 4-9 page of" Kakekata of engine "Be sure to read.

1 You only Toka firmly on the parking brake.

 2 Make sure the selector lever is in.

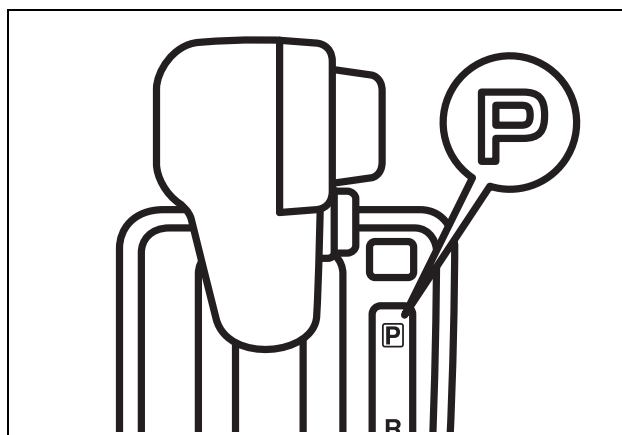

74P20010

アドバイス

Select lever will take engine in position, but please put the engine in for safety.

P

3 Press down the brake pedal with the right foot.

Four Start the engine.

Take-off

■ Normal start

1 Plug seen firmly Stepping on the brake pedal with the right foot.

2 Forward at the time of, is to put the selector lever during the recession, make sure the position of the lever in the eye.

3 To release the parking brake, and make sure the turning off of the brake warning light in the meter.

Four Slowly release the foot from the brake pedal, and start stepping on to the heavy slowly carefully the accelerator pedal.

■ Starting at the steep uphill

1 2, It is " Normal start It is the same operation as ".

3 Slowly release the right foot from the brake pedal, and carefully look at Stepping on the accelerator pedal.

Four While confirming the feeling that the car starts to move, and then start to return the parking brake lever.



80J255

⚙️ アドバイス

Hill hold control vehicles cases, it has the ability to prevent a certain period of time that the car is retracted at the time of starting at a steep uphill or be.

→ 4-50 page
(Hill Hold Control)

Traveling

■ Normal running

When you start to put in the select lever, by stepping write only the amount of the traveling speed and the accelerator pedal, you can run automatically shifting.

⚠️ 注意

Other than an emergency, please do not put in the select lever while driving. D down gin because the brake is not effective at all, it may cause an unexpected accident.

■ Rapid acceleration traveling

If you want to, such as overtaking is depressing to fill the accelerator pedal. Powerful acceleration and kick down is to give Rarema.

■ uphill traveling

When you are traveling out of the uphill, and we crowded look Stepping on the accelerator pedal in order to keep the scan speeds, there is the rotation of the engine to kick down increases suddenly.

- Depending on the slope of the hill, when the pre-S keep the ON the (sports) mode switch, you can powerfully smooth running is little change of the engine rotation.

■ downhill running

When traveling remains of the downhill, it may speed is weak effectiveness of the engine brake is too out.

- Depending on the slope of the hill, and a combination of engine brake in advance S the (sports) mode switch to ON.
- In steep downhill, put in when a powerful engine brake required.

⚠️ 警告

In the steep downhill or a long downhill, please combination of engine brake. If you continue down the brake pedal in the downhill, the brake system to overheat there is a possibility that the brake is not whether the effect.

→ 2-16 page (D in the long downhill
Using the down gin brake)

pause

- 1

Select lever stops remain in the running position, firmly depress the brake pedal.
- When you pause at the steep hill, and apply the parking brake, if necessary.

• When the stop time is likely to be long, you put in the select lever.

N

- 2

So as not to make a mistake when you re-start, make sure the position and release the parking brake of the select lever in the eye.



When paused, please do not racing. You should select lever is

PN

 And it has entered into other than, There is a Re morning sickness leading to unexpected accidents and sudden acceleration.

注 記

Uphill, etc., please do not try to stop the car by, for example, take the balance in the accelerator operation. Trans mission Nfurudo to overheat, It may cause failure.

Parking

- 1

It completely stopped the car.
- 2

While stepping on the brake pedal, firmly to Kakema the par parking brake.
- 3

Stop the engine from putting

 
R

 in the select lever, and then release the brake pedal or Rayukkuri and feet.

• Select lever is confirmed by

R

 your eye has become position.

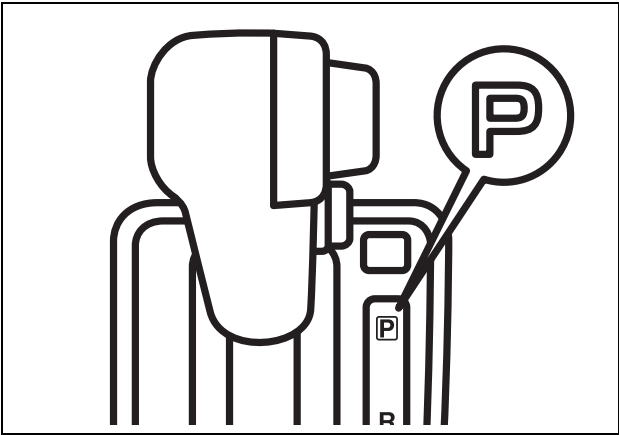

74P20010



Chu When the car is, the select lever

P

 Sure to stop the engine from the put in. Without the shift lock is operated

R

 is at a position other than, think in such erroneous operation There can lead to unexpected accident.

- Four

The engine switch

LOCK

 (OFF) To you back. Keyless push start-system-equipped vehicles, remove the key from the engine switch.

→ 4-14 page

(When removing the key)

→ 4-15 page (engine switcher

When you return the switch)

Recession

■ Correct driving position

When retracting the car will be in luck rolling posture in which the twisted body, will pedal is difficult to tread. Please brake pedal and the accelerator pedal is gradually driving operation in reliably Fumeru posture.

■ When repeating the forward and backward

Care and repeats the forward and backward in such as a garage, were allowed to completely stop, please perform the operation of the next forward or backward.

 
アドバイス

Such as when to repeat the forward and backward, you may forget that you had to put in a cell Rekutoreba. Is after retracting the car, please wear a habit that is input to the color immediately.

Be careful also to such a thing

■ When to be a little move the car

Even when you move just a little bit, please take the correct driving position that Burekipe Dar and the accelerator pedal is Fumeru surely.

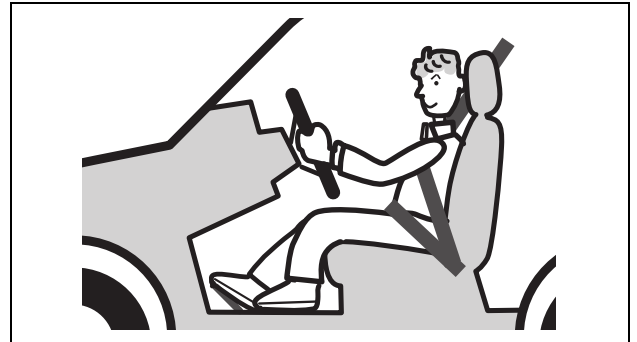

80J014

⚠ 注意

Slope, etc., the position of the advancement of the selector lever (☐ DL ☐ After leaving in inertia to Retirement or, and do not move forward by inertia while the position of the retreat (). Or become effectiveness of the brakes rather than evil stalled, with or handle is heavier, it may lead to unexpected accident. Also, be or become the cause of the failure.

■ When you stop

 
注 記

When the car is moving even a little, do not put in the Serre Kutoreba. Transmission will be the cause of failure.

Operation of the select lever

Auto gear shift car

The function of each position of the select lever

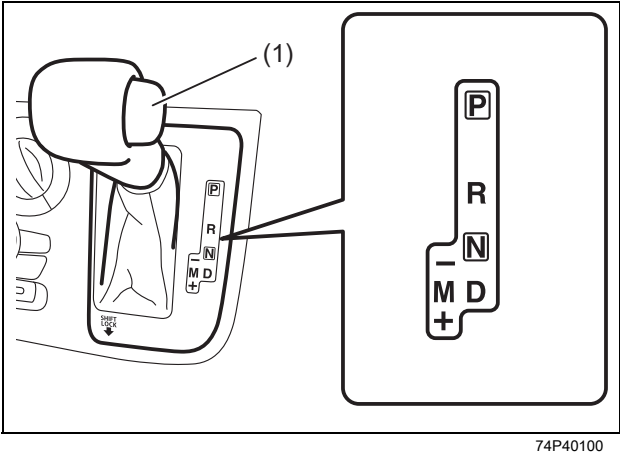


74P40100

(1) button

<div>P</div> parking	When you park, when you start and stop the engine, pull out the key <ul style="list-style-type: none">The drive wheels (front wheels) will be fixed.
<div>R</div> reverse	Position when retracting the car <ul style="list-style-type: none">Sounds a warning buzzer in the room, it tells you that you have entered into the <div>R</div> select lever to the driver.
<div>N</div> neutral	Position of the state in which the power starts the engine and transmits <ul style="list-style-type: none">You can start the engine, but please start at the position <div>P</div> for safety.
<div>D</div> drive	Position of the normal running <ul style="list-style-type: none">The depression amount of vehicle speed and accelerator pedal, can travel automatically shifting.
<div>M</div> manual	Position of when traveling in the manual mode <ul style="list-style-type: none">If you want to travel in the manual sense, use, such as in when you travel on a slope and mountain paths. → 4-31 page (use of manual mode type)
<div>+</div> Shift up	Position of when to shift up in the manual mode
<div>-</div> Shift down	Position at the time of shift down in the manual mode

Move the selector lever the way

 - You can choose either of the (drive) mode, or M (manual) mode.

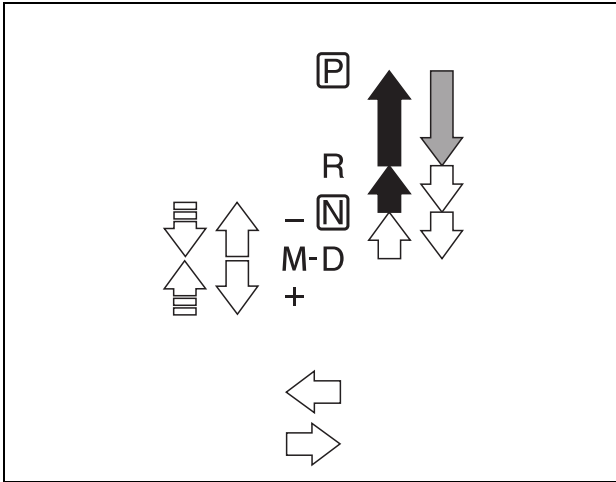

64P40210

	Stepping on the brake pedal, and move the selector lever while holding down the button.
	Move the selector lever without pressing the button.
	Press and hold the button and move the selector lever.
	Automatically returns to its original position and the release to the hand from the select lever.

- When you operate the select lever, please check the display. Note the inside meter (selector lever position display or the gear position display).
- Engine switch **ON** But, if the engine is in the stop state, because the selector lever is not switched, the selector lever position display in the meter, but is still of N, but this is not a malfunction.

- When the following operations to let you know in the display and warning buzzer in the meter.

- Depress the select lever, brake **N**

pedal The depressed The Meide engine switcher switch

START If you, brake

Request indicator lights, sounds a warning buzzer. Stepping on the brake pedal, please repeat the operation of the engine switcher switch.

- Select lever or more than **P** **N**

When outside, the brake pedal Do not step on

When the engine switch, the brake pedal request indicator lights, the display (select lever position display or the gear position display) in the meter **flashes, warning buzzer Over Sounds Or It is. And** the select lever or, by stepping on the brake pedal, please repeat the operation of the engine switcher switch. **N**

- Vehicle, such as when to repeat the forward and backward

In a state that is moving, Burekipeda

Le The select lever not step on the

N Or from **N** operation Then, **N** requests indicator in the meter lights, flashing Sele

Kutoreba position displayed in the N, will sound a warning buzzer. From completely stop stepping on Burekipe Dar, please repeat the operation of the select lever.

- When you operate the select lever, Se

Indication of the position and within meters of Rekutoreba (selector lever position display or the gear position display) is different if, flashing selector lever position display or gear position display, sounds a warning buzzer. When the little (2 to 3 seconds) waiting for the selector lever position display or the gear position display is not switched even as it is, by stepping on the brake pedal, please repeat the operation of the select lever.

⚠ 注意

- Were allowed to completely stop, please put the select lever **DOWN**. When the car is **moving**, it will cause the transformer mission fails.
- When the transmission warning light is lit, immediately stop the operation, sure to receive the inspection nest Suzuki service factory. When the warning light is on, it may become as follows.

→ 3-78 page

(Transmission warning light)

- Shifting even by operating the select lever

Can not

- When the vehicle speed falls below 10 km / h, the own

It becomes N (neutral) in motion, select lever position display in the meter flashes N, warning buzzer sounds

- The engine is stopped when the vehicle is stopped

- Engine can not be started

📌 アドバイス

↑ ↓ Of operation, be sure to wear a habit you do not press the button on the selector lever. Always

When you press the button is operating, wrong

PR It will put to

There is a fear.

■ The shift lock system

Such as when to start, is a system to prevent the erroneous operation of the select lever.

- Engine switch **ON** In brake
Only when you are stepping on the pedal, it can be moved to another **position** from the selector Trevor.
- **Engines** Down switch **ACC** Or **LOCK** When the (OFF), even if stepped on Burekiye Dar, can not move to another position from the **select** lever.
- Do we press the button of the select lever, Do not step on the brake pedal. You might see a shift lock is not released.
- Should the engine switch **ON** West
Te, if you do not move from the selector Trevor also stepping on the **brake** pedal to another position, the **next " How to cancel the shift lock "Please read the,** please release the shift Torokku. In this case, any failure of the shift lock system will be considered. Tadachinisuzuki service factory in Sai that we have it inspected.

⚠ 警告

Or spilled and drink to the select lever moving parts, if it is or contains foreign matter to the inside, because there is as it is a risk that if continue to use shift-lock system may not function properly, promptly checked by Suzuki service factory please received by.

⚠ 注意

When you start, please operate the select lever remains stepped firmly on the brake pedal.

■ How to release the shift lock


Of the shift lock system failure or lead battery

Li Over the uplink and the like, a select lever

P When from not be moved to another position, you can release the shift lock in the following procedure.

1 **ACC** For, the engine switch
To firmly put the parking brake, and then to state that stepped on the brake pedal.

2 With a finger from the hole at the bottom of the selector lever, while holding down the shift lock release button (1), to operate the select lever.

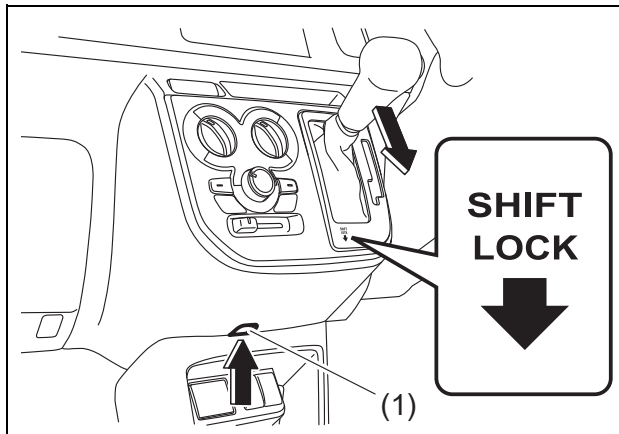


- The above figure is a typical example. It varies based on type of car.

Use of manual mode type


Drive mode will automatically shift, but if you in manual mode (manual shift mode), allows you to shift to any.

Manual mode **Over** When the soil is however dynamic the select lever from to.

D **M**

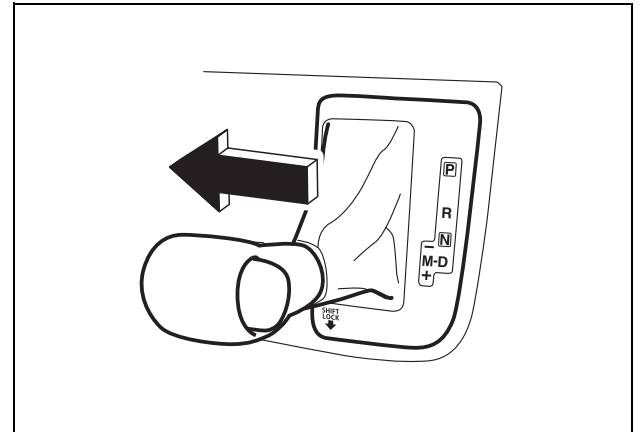

- With manual mode display (1) is displayed on the meter, the current **Giyapo Jishon** (2) **Table Shows Will To**.
- Gear position immediately after the move the select lever to Kara, is automatically **Giyapo Jishon** that has been selected at the time of the.

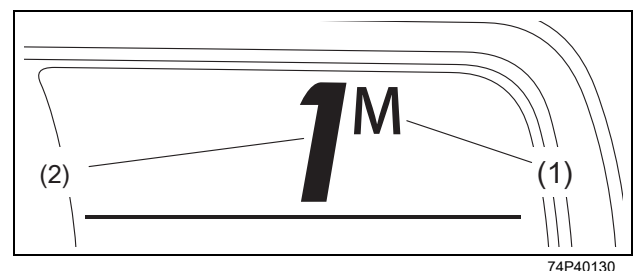

(1) Manual mode display (2) gear position display

- Even without moving to the select lever, and pull the remains **Padorushifutosu** match while traveling in front, temporarily you can to man mode.

→ 4-34 page (temporarily Manual When you Rumodo is)

■ Shift operation in the manual mode

In accordance with the gear position to the running speed can be selected from the first speed to the fifth speed gear.

- And even without the shift operation it decreases the vehicle speed, automatically shift down, stopping Then gear position 1 It will be.



- Accelerating on a slippery road surface, speed, brake please carefully done is. Ri like to sudden acceleration and engine brake, there is a lead to slip accident.

→ In 2-17 page (slippery road surface Run slowly)

- If you continue down the brake pedal in the long downhill, it carries the risk to be ineffective brake brake system to overheat.

→ 2-16 page (D in the long downhill Using the down gin brake)

- While driving, please do not pull the parking brake lever. Ready to multiplied by the sudden brake, there is a risk of accident.



- While driving Please do not put in the select lever. Since the engine brake does not work, unexpected accident original It will be the cause. Other than the select lever, if you've entered, please return to Sumiya crab. Gear in accordance with the traveling speed will be selected.

- When the transmission warning light is lit, immediately stop the operation, sure to receive the inspection nest Suzuki service factory. When the warning light is on, it may become as follows.

→ 3-78 page

(Transmission warning light)

- Shifting even by operating the select lever

Can not

- When the vehicle speed falls below 10 km / h, the own

It becomes N (neutral) in motion, select lever position Display of the meter flashes N, warning buzzer sounds

- The engine is stopped when the vehicle is stopped

- Engine can not be started

アドバイス

- Select lever Manual mode, if so It does not automatically shift up will. While when the paddle shift switch, Der switch was temporarily manual Rumodo pulling it toward automates upshift when the engine is in a high rotation Or

It is. However, because of engine protection, you may want to automatically shift up even in the manual mode.

- Or too high engine speed, it may not be able to shift to or too low no longer.


- There is a case where the engine speed is increased when shifting down, but, this is is due to perform a smooth gear shift, but this is not a malfunction.

- And Shifutodau down to the appropriate gear in downhill, please combination of engine brake. Engine brake takes effect low-speed gear moderately. However, there is a case where the shifting three or more stages time to shift is or hunt.

- When you shift, you might operation sound can be heard, but this is not a malfunction.

Use the select lever

- If you want to shift up, the select lever + Move to the side (downward) Or It is. When you release the hand, the lever will return to the position of automatically. M
- If you want to shift down, the select lever - Move to the side (upward) Or It is. When you release the hand, the lever will return to the position of automatically. M

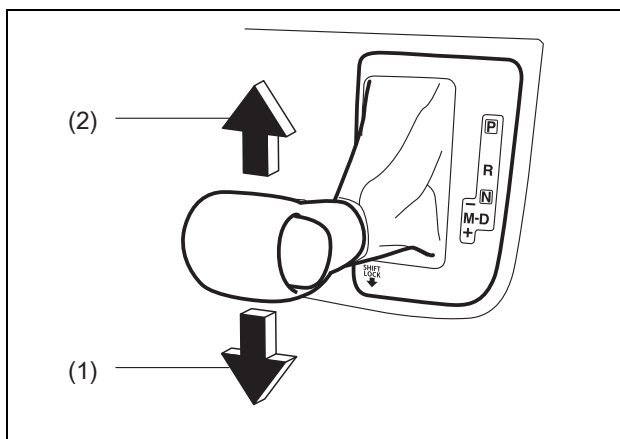

74P40300

(1) + Side (shift-up) (2) - Side (shift down)


アドバイス

When you continuously want to shift, from the back to the position M of the select lever, please cycle the lever. The lever + Or - While keeping to the side, you can not shift continuously.

Using the paddle shift switch


By equipment type

- If you want to shift up, the paddle shift switch on the right side of the handle (+ Pull the side) to the front. When you release the hand, the switch will automatically return to the original position.

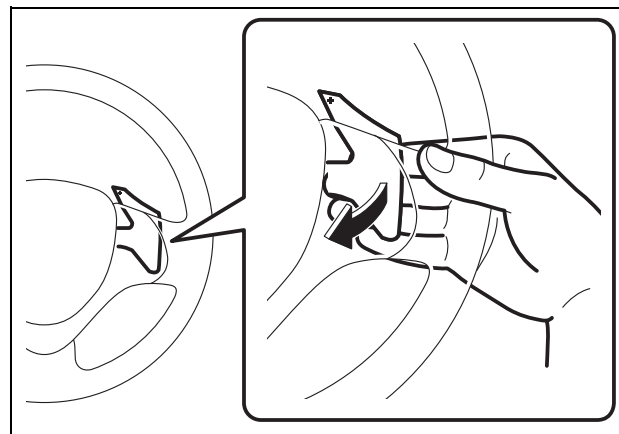

74P40310

- If you want to shift down, the paddle shift switch on the left side of the handle (- Pull the side) to the front. When you release the hand, the switch will automatically return to the original position.

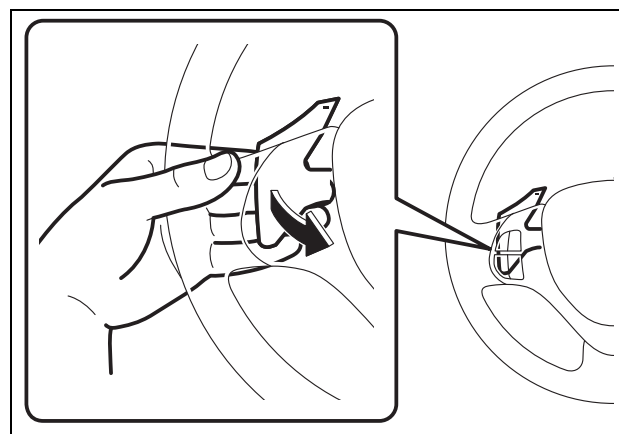

74P40320

アドバイス

- When you continuously want to shift from the hand is released from Padorushi shift switch, please again pull the switch. In the remains of the state which is obtained by subtracting the switch, you can not shift continuously.
- When you operate the left and right of the paddle shift switch at the same time, it may not be changed in speed.