•



▲警告	
▲注意	
注記	
のかアドバイス	

•

••••

•

** *****

** ****

This page is using the sample describes the basic reading way of this document.



When you find that you want to know the

If you are searched in the following way, you can search quickly.

- Search by title
 - Comprehensive Table of Contents
 - The beginning of the table of contents for each chapter
 - header
- Mounting position, look for from a warning light and display lights
 - Illustration Table of Contents → 1-2 page
- Find from the buzzer sound
 - When the warning buzzer is sounding \rightarrow 1-17 page
- Search by name
 - Index → 9-1 page
- Find a 4WD vehicle-specific described
 - When you drive a 4WD vehicle \rightarrow 2-32 page
 - tire chain → 6-18 page
 - When you get traction → 7-36 page
- Find oil and, a replacement part
 - Skillful Tsukiaikata with your car \rightarrow 6-1 page
 - When emergency \rightarrow 7-1 page
 - Service data → 8-1 page
- Find from the Frequently Asked Questions (Q & A)
 - Frequently Asked Questions (Q & A) → 1-24 page

Note about your car

Sign, and the number to be entered is, vehicle inspection, please

refer to the ID plate.

The eyes	of your love car model
Car name and	Car name:
vehicle type	Model:
Chassis number	
Engine type R06A type	body color
symbol business mode	symbol
Transmission	 Manual transmission Automatic Mission (※)
	 Auto gear shift
License plate	
(Vehicle number)	
Purchase date Ye	ar Month Date

It is described as "automatic car" in this book \times If it is, it indicates the "CVT vehicle".

ID plate (1)

It is affixed to the engine room.



• Engine room of the above diagram is a typical example. It depends on the type of your car.



(2) vehicle type

(3) Chassis number

(4) Engine type (5) Body color symbol (6) body color and interior color combination code (7) operating model symbol(Supplemental code)

Comprehensive Contents



Quick Guide



A must-read! For safe drive

A must-read! · · · · · For safe drive 2-2

3

Before driving

Opening and closing of the door
Alarm device
Open and close of the window 3-19
Adjustment of each part 3-24
Adjustment of sheet 3-28
Seat belt ······ 3-35
SRS air bag 3-41
Sheet for children 3-50
Meter 3-61
Switch of how to use 3-87

Fou

When driving

Engine start and stop 4-2	
Parking brake ······ 4-16	
Change lever 4-17	
Automatic car 4-18	
Auto gear shift car 4-28	
ABS · · · · · · · · · · · · · · · · · · ·	

ESP ®	-47
Hill hold control 4-50	
Operation support functions	4-51
Idling stop system 4-63	

Five

Handling equipment

Air conditioning, heating	5-2
Audio 5-17	
Other equipment	5-52

6

Skillful Tsukiaikata with your car

Care 6-	2
Handling	at the time of cold 6-13

7

When emergency

Punk	
Battery uplink and the7-19	
A blown fuse	
Bulb out	
Overheat	
others	

8 Service data

9

Index

3 Four Five 6

1

2

9

7

8

Illustration Table of Contents

appearance





74P10011

(1) rear wiper
antenna 5 -17 (4) bonnet · · 5-53 (5)
headlight 3-92 (7) fuel filler
opening (the fuel lid) 5-52 (8) number lamps
rear combination lamps 7-32 (10) back door
3-4 (11) door mirror 3-24 (12) door
3-4 (13) back eye camera 5-37 (14) fog lights

Interior 1



74P10020

(1) laser radar 4-61 (2) on the front passenger seat SRS air bag

Warning label (※) ························ 2-3	0 (3) room mirror · · · · · · · 3
-24 (4) interior lights 5-57	(5) sun visor
5-56 (6) a seat belt 3-35 (7)	assist grip · · · · · · · 5-65 (8)
instrument panel center pocket · · · · · · 5-59 (9) o	drink holder 5-60
(10) change lever (manual car) 4-17	

Clutch start system (manual car) 4-11 (11) front seat
3-28 (12) parking brake 4-16 (13) after the seat

Before using the child seat \times , please be sure to read.

1

Interior 2

1



74P10031

(1) the front passenger seat SRS air bag 3-41 (2) air conditioning, heater

...... 5-2 (3) instrument panel center tray 5-59 (4) audio - - - -

- 5-19 (5) selector lever (automatic car) · 4-18

The selector lever (automatic gear shift car) 4-28 (6) steering audio

switch 5-36 (7) driver's seat SRS air bag · · · · · 3-41

Horn switch 3-93 (8) door mirror angle adjustment switch
Door mirror storage switch \cdots 3-25 (9) power window switch \cdots
···· 3-19 (10) flares
5-60 (12) shopping hook (instrument panel) 5 63 (13) center
lower pocket
opener 5-52

Driver's seat around

1



74P10041

switch 3-30 (9) driver's seat heater	switch 3-30 (10) accessory socket
······ 5-64 (11) paddle shift switch ·	······ 4-31 (12) tilt steering
········ 3-28 (13) VIEW switch	5-41 (14) radar brake
support (RBS)	

4-49 (17) the optical axis adjustment dial (halogen model) 3-90

Warning lights and display lights



74P10070

- If the warning light stays on or flashing, abnormality of the vehicle or the system will be considered. Over the next referenced well you read, please accept the inspection Suzuki service factory.
 - → 3-72 page (see how the warning light and display light)
- X mark of warning lights and display lights, the engine switch It is normal for the lights when you. (Initial lighting of the "water temperature warning light / low water temperature indicator light" will light up in red.) If it does not, please have it inspected by Suzuki service factory.

•"Water temperature warning light (red) / low water temperature indicator (blue)" has you switch the display at the lighting color.

- The idling stop system vehicles, there is a specific lighting conditions.
 - → 4-63 page (idling stop system)

Warning light		color	Warning light name	
(1)		ж re	ed brake warning	յ light
(2)	×.		Red seat	belt warning lamp
(3)		<u>ж</u> R	ed	SRS air bag warning light
(Four)			Orange fuel lev	rel warning light
(Five)	(ABS)	ж о	range ABS warr	ing light (equipped by type)
(6)	۲ ۲ ۲	∦ rec	water temperature w	rarning light
(7)		ж о	range auto-level	ing warning light (Equipped by type)
(8)	٢	ж о	range engine wa	rning light
(9)	!	× 0	range power ste	ering warning light

	Warning light		color	Warning light name
(Ten)		∦ re	d oil pressure wa	rning light
(11)	- +	≫ re	ed charge warnir	ng light
(12)	\bigcirc	X 0	range transmiss	ion warning light (Automatic car auto gear shift car)
(13)		ж о	range immobiliz	er warning light (Keyless push start system equipped vehicles)
(14)			Red and a h	alf door warning light
(15)			White Black	Mobile remote control battery warning light (keyless push start system equipped vehicles)
(16)		ж о	range brake sys	tem warning light (Equipped by type)
(17)			Orange brake	request indicator (Auto gear shift car)

	Indicator light			Indicator name
(18)			White Black	Selector lever position display (Automatic car auto gear shift car)
(19)	Ε		White Black	Gear position display (Auto gear shift car)
(20)	 		Green direction indicator indicator	
(twenty one)	≣D		Blue head	dlights upward (high beam) indicator

	Indicator light		color	Indicator name
(twenty two)	S		Black S (s	sport) mode display (Automatic car)
(twenty three)	D		White Black	D (drive) mode display (Auto gear shift car)
(twenty four)	Μ		White Black	M (manual) mode display (Auto gear shift car)
(twenty five)	P OFF	% o	range ESP ® OF	F indicator (equipped by type)
(26)		∦ or	ange ESP ® Actu	ation indicator lamp (equipped by type)
(27)			Blue low wat	er temperature indicator
(28)			Green pu	sh indicator (Keyless push start system equipped vehicles)
(29)	ACC		Orange ACC in	dicator light (Keyless push start system equipped vehicles)
(30)	ON		Orange IG ON	l indicator (Keyless push start system equipped vehicles)
(31)	(A)	ж g	reen idling stop	ndicator (Equipped by type)
(32)	(A) OFF	<u></u> % 0	range idling stop	system OFF indicator (Equipped by type)
(33)			Red secu	rity alarm indicator
(34)	ECO	ж g	reen eco drive ir	idicator (Equipped by type)

	Indicator light		color	Indicator name
(35)	off	ж о	range radar brał	te support (RBS) OFF indicator light (Equipped by type)
(36)	→	ж о	range radar brał	te support (RBS) actuation indicator lamp (Equipped by type)
(37)	扪		Green fog	lights indicator (equipped by type)

Key



64L10100

1

Key	3-2 door
3-4 keyless entry	3-8 mobile remote
control ·······························	sh start system · · · · · · 4-5
engine Kakekata	

Luggage compartment



74P10050

(1) floor board
(3) tire puncture emergency repair set · · · · · · 7-5 (4) jack bar

When the warning buzzer is sounding

In addition to the table below, when the next function is in operation will be announced at the buzzer.

- Retreat when the left and right confirmation support (equipment by type)
 - \rightarrow 5-46 page (backward when the left and right confirmation support function)

All cars common

When	Buzzer sound m	eter	Cause and Solution
When you open one of the doors	Indoor buzzer • Copy, copy, (About 10 seconds)	Flashes at 2-second inter	 Security alarm of the alarm has been activated. By one of the following actions we can stop in the middle of the alarm. To the engine switch ON Unlocking with keyless entry or request switch (equipped by type) → 3-16 page (security alarm)
Engine scan <u>Acme</u> Ji <u>ON</u> When you	Indoor buzzer • Copy, copy, (4 times)	About 8 seconds blinks rapidly	 Alarm security alarm indicates that operated at the time of parking. Please check the inside of the car or not stolen. → 3-16 page (security alarm)
Engine scan <u>Acme</u> Blood <u>ON</u> When	Indoor buzzer • pawn (Once)	Lighting	The remaining amount of the fuel is low. Please be Sumiya crab refueling. → 3-74 page (fuel level warning light)
Running	Indoor buzzer • Copy, copy, (About 95 seconds)	Flashing	The driver is not wearing a seat belt. And stop in a safe place, please wear a belt. → 3-37 page (Seat belt warning buzzer)
	Indoor buzzer Pipipi', Pipipi', 	Lighting (red)	 Parking brake has not been released. Be sure to release the parking brake. → 4-16 page (parking brake solution Dividing forgotten warning buzzer)
	Indoor buzzer • pawn (Once)	Lighting	 One of the door is not completely closed. And stop in a safe place, please completely closed. → 3-79 page (half door warning light)
It came and opened the driver's door	Indoor buzzer • Pi	-	Headlights and car width lamp is lit. Please turn off the these. → 3-88 page (Light forgetting to turn off the warning buzzer)

Passenger type vehicles only

When	Buzzer sound m	eter	Cause and Solution
Running	 Indoor buzzer Phi, Phi (About 95 seconds) 	×	The passenger in the front passenger seat is not wearing a seat belt. Please wear a belt. → 3-37 page
		Flashing	(Seat belt warning buzzer)

Automatic car or auto gear shift car

When	Buzzer sound m	eter	Cause and Solution
Stopping in / in recession	Indoor buzzer • Copy, copy,	RR	 In the case of automatic car, it comes in the select lever. Check the position of the select lever <u>Te</u> Please give me. → 4-22 page ((reverse) Resitive Deployment warning buzzer) In the case of auto gear shift car, the transmission gear is located in the R. Check the position of the select lever. → 4-36 page ((reverse) Resitive Deployment warning buzzer)

Auto gear shift vehicles only

When	Buzzer sound m	eter	Cause and Solution
engine <u>Switch</u> Ji <u>START</u> Wher you	Indoor buzzer • Pipipipipi		De the select lever, brake Medal <u>The depressed</u> The Meide engine switch <u>START</u> I was in. Stepping on the brake pedal, please retry the operation of the engine switch.
		Lighting	 → 3-80 page (brake request Lee Indicator) → 4-9 page (Kakekata of the engine)
		Lighting X: No. Flashing (representative example)	Select lever Or The engine switch in the other START P Decided to It was. And the selector lever or, by stepping oth the brake pedal, please repeat the operation of the engine switch. → 3-80 page (brake request Lee Indicator) → 4-9 page (Kakekata of the engine)
When you operate the select lever	Indoor buzzer • Beep, beep, (About 1 second)	Lighting	Vehicle, such as when to repeat the forward and backward is in motion Iteiru state, Bradenton <u>Key</u> Step on the pedal <u>1</u> From the select lever Ide, or it wintrot operatent from completely Betop stepping on Burekipe Dar, please repeat the operation of selectors Trevor.
		N Flashing	 → 3-80 page (brake request Lee Indicator) → 4-29 page (How to move the selector lever) → 4-41 page (retreat)
	Indoor buzzer Beep, beep, 	N Flashing	Viewing of the position of the select lever and the meter (selector lever position display or Giyapo Jishon display) is different. In that case or Masukoshi that (2 to 3 seconds) waiting select lever position display or the gear position display is not switched even if is, by stepping on the brake pedal, please retry the operation of the select lever.
		(representative exampl	 If you do not switch, please have it inspected by Suzuki service factory. → 4-29 page (How to move the selector lever)

When	Buzzer sound m	eter	Cause and Solution
While driving / stopping in	Indoor buzzer • Copy, copy,	Flashing	 Due to the following of such operations, the load it takes clutch is now in high temperature in the clutch. It has repeatedly starting and stopping at the uphill Without going through brake pedal uphill, it has stopped using the creep function It continues down the accelerator pedal while depressing the brake pedal It continues down the A Kuserupedaru while applying the parking brake And stop in a safe place, for a while to stop the engine K Please. Again, the engine switch In to, please traveling from the Mak Objurt that the flashing and the warning buzzer warning light is stopped. → 3-78 page (Transmission warning light) → 4-35 page (Transmission warning light)
Running	Indoor buzzer Beep, beep, 	N Flashing	 When the system becomes abnormal results in the following manner. Please have it inspected by Suzuki service factory. During running, can not shift even if the operation of the select lever Becomes N (Neutral) automatically when the vehicle speed falls below 10 miles / h
Line during the run	Indoor buzzer		 → 4-29 page (How to move the selector lever) Shift operation and not shift the gear position to hope
in the manual mode	• Beep, beep,	Flashing (representative example	even if in manual mode, the current gear position display flashes. Wait a little, please retry the shift operation. ^{e)} → 4-31 page (Use of manual mode type)
Padorushifu door switch (type-specific instrumentation Bei) when you operate the	Indoor buzzer Beep, beep, 	-	Not shift the gear position that you want. Please select the appropriate Giyapoji Deployment that was found in the vehicle speed.

Keyless push start system-equipped vehicles only

When	Buzzer sound meter	Cause and Solution
It came and opened the driver's door	Indoor buzzer • Copy, copy, _	It remains a key is Tsu bites engine switch. Please remove the key. → 4-15 page (Key forgetting to pull out warning buzzer)

Keyless push start system equipped vehicles only

When	Buzzer sound m	eter	Cause and Solution	
When I tried to engine	 Indoor / external buzzer Copy, copy, (About 2 seconds) 	~~ 0	Mobile remote control is not in the car, or the battery out of the remote control will be considered. Or return the remote control in the car, please place your remote control in the engine switch.	
When I closed all the doors		Flashing	 → 4-8 page (Mobile remote control is taken out of the vehicle warning) → 4-9 page (Kakekata of the engine) 	
It came and opened the driver's door	Indoor buzzer Beep, beep, 	-	 Failure or the like, the handle is not locked event opening and closing any of the door to return the engine switch to (OFF). Suzuki service factory in Sai that we have it inspected. → 4-15 page (Handle lock not working warning buzzer) 	
	Indoor buzzer Copy, copy, 		Ene_Jeans Switch is ACC Now become It is. LOCK Please to return to the (OFF). → 4-15 etc. also page (engine switch Forgotten warning buzzer)	
When you press the request switch	External buzzer Pee (About 2 seconds)	ACC ON	Engine switch ACC Or ON It has become. LOCK (OFF) Nimodo please. → 3-14 page (request switch Not Operating warning buzzer)	
		-	Mobile remote control is located inside the vehicle. Please brought out the remote control to the outside of the vehicle.	
		Lighting	One of the door is not completely closed. Please completely closed.	

When	Buzzer sound m	eter	Cause and Solution
When you press	External buzzer		One of the door is not completely closed. Please
the lock switch of	• Pee		completely closed.
a mobile remote	(About 2 seconds)	* _ *	→ 3-8 page (keyless entry)
control	() () () () () () () () () () () () () (Lighting	

Idling stop system vehicles only

→ 4-63 page (idling stop system)

When	Buzzer sound m	eter	Cause and Solution	
During the automatic stop of the er	Indoor buzzer ^{gi} p ^e Pee (Once)	Because it was a situation such as the following, the engine warestarted. After flashing, off After flashing, off - Because it was a situation such as the following, the engine warestarted. After flashing, off Because it was a situation such as the following, the engine warestarted. After flashing, off Because it was a situation such as the following, the engine warestarted. After flashing, off Because it was a situation such as the following procedure is no longer sufficient (automatic air conditioning vehicles) During the cooling the set temperature COOL side, during the heatir was changed significantly to the HOT side (Otoe conditioners vehicle) When some time has elapsed (about 2 minutes) Since the hood is open, now engine stall state (※ 2). Please deal with the following procedure. (firmly put the parking brake, It is restarted by operating the select lever That → 4-9 page (Kakekata of the engine)		
	Indoor buzzer • Copy, copy,			

% by the contents of a detected abnormal, there are times when the buzzer does not sound. % comes to 2 engine

stall state, following a warning light in addition to the above will light up.

- Engine warning lights, power steering warning light, oil pressure warning light, charging warning light

 \rightarrow 1-10 page (warning light and display light)

When	Buzzer sound m	eter	Cause and Solution	
During the automatic stop of the er	Indoor buzzer ^{gi} ne Copy, copy, (5 times)		 Because you have one of the following operation, the engine was restarted automatically. Remove the driver's seat belt Open the driver's door 	
		K	Before you start, close the door, please wear a seat belt. Also, come and appear to the outside of the vehicle in advance to be sure to perform the following steps.	
		Lighting either	 ① firmly put the parking brake, Put to the select lever. ②	

Driving support function vehicles only

When	Buzzer sound m	eter	Cause and Solution	
Running	Indoor buzzer		Radar brake support (RBS) has been activated.	
	 Pipipipipi 		Do depressed strongly the brake pedal.	
			→ 4-52 page (Radar brake support (RBS))	
During stoppage of the vehicle / crawl in		Flashing	Improper start suppression function has been activated. Please Release the foot from the accelerator pedal quickly.	
			\rightarrow 4-57 page (improper start suppression function)	

Frequently Asked Questions (Q & A)

Contact us a lot, I will guide you through the FAQ.

- Opening and closing of the door
 - **Q.** Keyless entry does not work.
 - A. There is a possibility that there is a situation where keyless entry does not work.

3-8 page (Keyless Entry) Please read.

- A. When the battery of the remote control key is exhausted, please replace.
 - → 6-10 page (battery replacement of the remote control key)
- **Q.** Alarm opened the door rings.
- A. Alarm system (security alarm) has been activated.

WARNING in one of the following operation Broadcast Please stop. •

- The engine switch To ON
- · Unlocking with keyless entry or request switch (equipped by type)

For the correct handling and setting switching, 3-16 page (Security alarm) Please read.

Window glass

- **Q.** I want to take a front glass and clouding of the door glass inside.
- **A.** Balloon mouth switching dial (5-4 page) In, switch to the position to take the cloud Please give me. (Manual air conditioning)
- A. Defroster switch (5-14 page)Please use. (Automatic air conditioning)
- **Q.** I want to take a clouding of the back door glass inside.
- A. Rear defogger switch (3-94 page)Please use.

tire

- **Q.** It was punk.
- A. By punk state of, if you use a tire puncture emergency repair set
 - That is, you can emergency repairs. (Tire puncture emergency repair set vehicles)
 - \rightarrow 7-5 page (tire puncture emergency repair set)
- A. Please replace the emergency spare tire for. (Emergency spare tire vehicles)
 - → 7-2 page (punk)

It goes up battery

- **Q.** Battery is raised, the engine can not be started.
- **A.** Connect the rescue car battery and the booster cable, start the engine please.
 - \rightarrow 7-19 page (when the lead battery up)

engine oil

Q. We want to change the engine oil.

A. Please read the following items.

- → 2-36 page (when replacing the engine oil)
- → 8-1 page (service data)

Electrical equipment

Q. Headlight or brake light is no longer illuminated.

A. Please check the light bulb.

- → 7-28 page (inspection of the light bulb)
- \rightarrow 7-28 page (when replacing the light bulb)
- \rightarrow 8-4 page (capacity of the light bulb)
- **Q.** Electrical device is no longer available.

A. Please Inspect the fuse.

- → 7-23 page (when the fuse has expired)
- Q. Without fully open / fully closed in the driver's seat power window (equipped with another type) Auto became.
- **A.** The initial set of scissors narrowing prevention function of the power window is required. 3-22 page (The default way) Please read.

audio

By equipment type

- **Q.** I want to set the clock.
- **A.** Please read the following items.
 - AM / FM radio \rightarrow 5-20 page
 - cd player \rightarrow 5-22 page

MEMO	
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-
	-

2. must-read! For safe drive

Please look firm you read because it is especially important items.

Safe driving is first

Seat belt that has been installed on your car, SRS air bag system, also safety equipment such as ABS (anti-lock brake system), there is a limit to the occupant of the safety or be. As well as adhere to the legal speed limit, please try to safe driving in the conservative speed.

Before departure (check of your car)

To ensure the day-to-day inspection



Car mileage, please be carried out at an appropriate time it is determined from the use state.

→ Maintenance notebook (daily inspections)

When you notice such symptoms



▲注意

Please have it inspected by Suzuki service factory is the following cases.

- Remain after leakage of oil or liquid on the ground
- The brake fluid is insufficient
- Unusual smell, sound, there is a vibration
- Different to have the handle and brake Kino feeling is always the

Check the tire pressure

- Please regularly inspection and adjustment. Specified air pressure of this car, are attached to the opening of the driver's seat door " Pneumatic La Belle You can check in "(1).
 - → Maintenance notebook (daily inspections)



- If you travel while the air pressure is insufficient, it will cause the ends of the tire is worn. In addition, fuel consumption will be worse.
- Flat tire (165 / 55R15 75V), in the looks you must be careful so hard to understand the lack of air pressure.

▲警告

• When the air pressure is running extremely remains low, it may lead to accidents tire is unexpected and burst (rupture).



(

2

A must-read! For safe drive

- Failure to observe the specified air pressure can not be the car of the performance is sufficiently exhibited, there is a possibility that things like the following occurs, or led to the unexpected accident, there is a risk of or caused the failure.
 - Running stability is deteriorated
 - Braking distance when applying the brakes Extend the
 - It can detect the exact tire rotation speed
 Gone, the next function is not working
 properly

• ABS (equipped by type) • ESP
 (By type equipment) radar brake support (RBS) (equipped with another type), improper start suppressing function (another type equipment) Emergency stop Shea

Gunaru (ESS) (equipped by type)

 In 4WD vehicles, the performance is enough Not only can not be exhibited, adversely affect the driving dynamic system parts

About Battery

This car is equipped with the following battery.

- Lead battery (all models Common)
 It has been used in the car of the power supply.
- Lithium-ion battery (energy charge vehicles only)
 It has been used to supply electricity to the car's electrical components.
 - → 4-72 page (energy charge)



(1) Lead batteries (2) Lithium-ion battery

For each battery, the next " Lead battery "and" Lithium Ion Battery "Please read the, please refer to the correct preparative treatment.

 Lead battery and lithium-ion battery will be discharged little by little. In order to prevent the battery up is, at least once a month you need to charge it on the line run more than 30 minutes continuously.

Lead battery

To check the liquid level of the lead battery When the liquid level is below the lower limit (2), please supplemented with upper (1) or the battery replenisher. If the battery fluid is insufficient, there is a Ruosore shorten the life of the battery.

→ Maintenance notebook (daily inspections)





- If the battery fluid is insufficient, heat to there is a risk of explosion.
- When connecting again to remove the battery terminals, be sure to securely tighten. If there is loose, it may cause a fire or failure.

2

注 記

Idling stop system vehicles is, because it uses a high-performance dedicated lead batteries, please observe the following things. Or protected not when the idling stop system is no longer working correctly, life of the battery may cause or shorter.

- When you replace the battery, use a battery of specified (do not use a non-designated ones)
 - → 7-21 page (lead battery When exchange)
 - → 8-2 page (service data)
- Do not take the power of electrical products from the battery terminal

Lithium Ion Battery

By equipment type

In energy charge vehicles dedicated battery, located under the front passenger seat.

- Lithium-ion battery is the inspection unnecessary.
- The exchange or the lithium-ion battery for disposal, consult your Suzuki dealer or Suzuki agency.



Improper handling of lithium-ion battery, or cause a fire or electric shock, because there is it you to be or become the cause of the failure, please observe the following things.

- Do not disassemble or remove
- Not wet with water or the like
- Not give a strong shock
- Or riding on top, I do not want to or place luggage
- Or remove the battery terminal, do not or take the power supply of electrical products from the terminal

Check also the exhaust pipe



80J011

That there are no holes or cracks in the exhaust pipe, please check earthenware time.



If the exhaust pipe is leaking, the exhaust gas will have it up for carbon monoxide poisoning from entering the vehicle. If you feel abnormal, please accept the inspection Suzuki service factory.

When you gain luggage

Overloading of luggage, will exert a negative effect on the vehicle

body and traveling.

	Maximum load capacity of	
Car model	2 passengers 4 p	bassengers
Commercial type vehi	cle 200 kg 100	kg

▲警告

• Vessel containing fuel and chemicals, Do not bring such as in the car spray cans. There is a risk of fire or explosion.



80J021

- Heavy luggage, please gained evenly so as not to bias.
 If there is than the person of the luggage, and other malicious activities that might overturn such a curve.
- Do not place anything on top of the instrument panel. Or interfere with the operation field of vision, with or moves during the starting or running, carry the risk that impede safe driving. In addition, or bought the passenger seat SRS air bag is such to operate normally in the event of an accident, with or skipped when the bulbous front passenger seat SRS air bag, there is a risk of injury.



2

▲注意

• Do not stack the luggage in the car. Not only is the field of view of the obstructed, and pop out the luggage at the sudden brake, it may lead to unexpected accident.



 When you put the animals, please care to such Limit your movement strange. Or hindering of the operation, there is a possibility that the benefit that led to unexpected accidents, such as when the sudden braking.
Shopping hook (front passenger seat)

By equipment type

 \rightarrow 5-63 page (shopping hook)

▲注意

When the luggage was subjected to hook swings, that does not interfere with driving operation, please check before traveling.

注 記

Depending on the luggage to be applied to the hooks, there is a risk that things like the following occurs.

- Luggage swings, Keru scratched or damaged the seat upholstery
- Hit the drink, which was placed on the console rear side of the drink holders, spilling a drink only product
- Chakusuru with fats and oils of the seat rail in luggage

When you put the children

Always ensure a more careful safety, let's try to conservatively safe driving speed.

Children placed on the rear seat



- As much as possible adults sit next to, please watch a Oko clients.
- Or worried about the behavior of the sudden the children and put in the front passenger seat, and by shifting was Okosamagai, it might serve to interfere with driving.
- Children's seat, please select an appropriate one for your age and physique of children.
 - → 2-8 page (child seat The use of)
 - → 3-50 page (child seat For selection)



- As children of the rear seat is not open only the door while the vehicle is running, please use the child-proof.
 - → 3-8 page

(Child-proof)

- When you put your child clients that do not require a child seat in the front passenger seat of necessity, please observe the following things.
- It goes down to the very back of the passenger seat

Sai. And is before the issue a passenger's seat, there is a danger of being strong serious injuries in the impact when the front passenger's seat SRS air bag is activated. Children Please be careful not to close the hands and feet to the moving parts of the vehicle such as the rail portion of the lower sheet. Hasa or is in there is a risk of injury or be.

Also wear a seat belt children



• Do not inspire children on top of the knee. Even if the holding firm, can not be sufficiently supported, such as when the collision, children there is a danger of being a serious injury.



80J081

- Be sure to wear a seat belt.
- Please do not use the seat belt of a single two or more people.
- If you do not properly use a seat belt, because the child is likely to suffer a serious injury, Please observe the following things.
 - Children the neck is not sitting, shed The children that Torisuwari can not be a rule, use a baby seat.
 - It took the seat belt on the neck and chin
 Or, to the children, such as or did not take to the hip, please use the tea Irudoshito and junior seat.

Depending on the type of your car, it can be used
 Type and of Ruokosama sheet, mounted
 seat position is Ri Do different. 3-50 "for the
 selection of your child is or sheet" on page
 after well you read, please select the
 appropriate for your child's age and
 physique.



Not Asobase in the seat belt



80J028



Please Do not such Asobase the children in the seat belt. When you are playing by, for example, winding a belt on the body, there is a danger of being a serious injury such as suffocation. If an emergency, please cut the belt with a pair of scissors. To have One to the use of children for seat

- In the case of commercial type vehicles, rear-facing child seat, such as a baby seat can not be used in any of the seats.
- In the case of passenger type vehicles, rear-facing child seat, such as a baby seat, to be used in the front passenger seat is not possible. Please be attached to the rear seat.
- Child seat and junior sheet but can be mounted in the passenger seat, passenger type vehicles, for safety, please be attached to the rear seat.
- Children's seat, please select an appropriate one for your age and physique of children.
 - → 3-50 page (child seat For selection)
- On both sides of the front passenger's seat sun visor, it has been affixed a warning label only to show the prohibitions in the case of the assistant's seat SRS air bag equipped vehicles mounting the Oko of or for the seat. Before using the child seat, 2-30 page of" Warning labels on the front passenger's seat SRS air bag Please be sure to read ".
- The passenger type vehicles, you can attach the following types of your child (s) for the seat. (The commercial type vehicles you can install only type of fixing in the seat belt.)
 - Of the type to be fixed by the seat belt Children's seat
 - → 3-56 page (fixed by the seat belt of the child ren for the sheet)
 - ISOFIX type of child seat
 - → 3-58 page (fixed ISOFIX corresponding your child (s) for the seat)

- Depending on the type of child seat, there is a properly mounted such casting in this car. Prior to use, carefully read the instruction manual that came with the children for a seat, please check for such attachment methods and handling physician.
- The children's seat, we recommend the Suzuki genuine. For more details, please consult to the scan Suzuki dealer or Suzuki agency.
- Even if you are using a children's seat, is to ensure safety of children is limited. Speed is in the low-key, please try to safe driving.

▲警告

- The front passenger seat, please do not install the filtrate facing child seat after, such as a baby seat.
 When the swell is the front passenger seat SRS air bag, it applied a strong shock to the back of the child seat, subject to serious injury life-threatening Otherwise, there is.
- Forced When inserting child sheet and a junior seat in the front passenger seat, under the most behind the passenger seat up, please forward the attachment.



80J027

 Before you travel, children's seat is reliably fixed, rattling, make sure that there is no such slack.

A must-read! For safe drive

- Do not tilt the back of the sheet, fitted with a child seat. Or not the seat is properly secured for children, body, etc. is Dari slipped under the seat belt when the collision, there is a Re morning sickness subjected to serious injury.
- If you receive a shock strong in children for the seat in the event of an accident, even if there is no abnormality on the surface Do not re-use. There may not be enough onset volatilization performance in case of emergency.



Children's seat, either attach to take to have such Itoki but firmly seat use, please be housed in the luggage compartment. If left in the room remains removed from the sheet, there is a risk that hits the occupant and those, such as when the brakes are applied.

Opening and closing of the door or window, Adjustment of the sheet is performed by the adult

Not to pinch the child's limbs and neck, again an adult he will perform the opening and closing adjustment.



▲警告

Power windows (equipped with another type), sea urchin by children does not operate on their own, please use the window lock switch.

→ 3-20 page (Window lock switch)

Not issued the face and hands from the window



▲ 警告

Children Please note sea urchin'm not out of the hands or face. Or received a serious injury in a sudden brake, there is a fall the benefit fear. In addition, there is a danger of being a serious injury, such as when those outside the car.

When away from the car

▲警告

When away from the car, please do not leave children alone in the car.

- In mischief of children, there is a risk of accident, such as starting and fire of the car.
- Under the scorching sun of the car becomes a high temperature and can cause Oko-sama is applied to heat stroke. Even with the air conditioning, Please Do not such leave only children in the car.



Do not put in the luggage compartment of the children



▲警告

Luggage compartment does not have a structure where people ride. Please do not place the children. To unexpected accidents in such sudden braking there is a tuna want fear. During a stop on the road as well, please do not Asobase the children in the luggage compartment.

Sitting in the driver's seat

Handle, seat, adjustment of the mirror before traveling





- Adjustment of the steering wheel adjustment (equipped by type) and sheet while driving, do not the regulation of the room mirror and door mirror. Or accidentally handle operation, or a previous how inadvertently, there is a possibility that the lead therefore it unexpected.
 - → 3-28 page

(Tilt steering)

- → 3-28 page (front seat)
- → 3-24 page (room mirror)
- → 3-24 page (door mirror)
- Do not tilt more than necessary the backrest. Headrest and seat belt

Door can not exert its original function.

▲ 警告

- Please wear a seat belt correctly before traveling.
- Please let me wear a seat belt in the passenger everyone in the front passenger seat and the rear seat.
 - \rightarrow 3-35 page (seat belt)



Seat belt is worn correctly



No not place an object near the foot of the driver's seat





Please Do not leave empty cans and feet. It carries the risk that lead to unexpected accident can no longer pedal operation.

Proper use of a floor mat in the car



▲警告

Because it may lead to an unexpected accident hinders the pedal operation, please observe the following things.

- Do not use a floor mat that do not meet the shape of the feet
- Not laid on top of the floor mat
- Floor mat is securely fixed in such a fixture



% driver's seat side of the floor (under the carpet)
 To do this, there is a hole for attaching the fixture that comes with the Suzuki genuine floor mat.

- √m アドバイス

We recommend that you use a Suzuki genuine Furoama' door of the car only.

If you want to apply the engine

Not leave the engine running at ventilation is poor



80J010

▲警告

- Such as in a garage, and hold multiplied by the engine where ventilation is poor, there is a risk of carbon monoxide poisoning.
- In the state multiplied by the engine, it does not leave open the backdoor. Exhaust gas will penetrate into the vehicle.
- When the smell of exhaust gas is in the car, all of the window is fully opened, air conditioners, switch the switch inside and outside air of the heater to the outside air introduction, and ventilation in the strength of the fan. When ventilation and even smell that there is no consumption For example, be sure to receive promptly checked by Suzuki service factory.

Not the engine has started through a

window



Sit in the driver's seat, please start the engine the brake pedal from the Nde Stepping.

▲警告

Please Do not the engine has started through a window.

There is a Re morning sickness lead to unexpected accident.

 \rightarrow 4-9 page (Kakekata of the engine)

When traveling

To start from a close look around



▲注意

- Please be whether we start to firmly check the perimeter of safety.
- Rearview mirror and back-eye camera (by type equipment) just can not be sure Akira An rear of is sufficiently. When you make retreat rear of the car, please check the rear with my own eyes down from the car.

Racing and sudden acceleration of immediately after the start of the engine, not the sudden acceleration



For the eco-driving, racing and Kyuhatsu advance, please do not sudden acceleration.

- → 2-37 page
 - (Let's eco-driving)

注 記

Since immediately after the start of the engine is not warmed up,

racing and sudden acceleration, sudden acceleration Then, it will

be the cause of the engine failure.

Not taken care to etc. mobile phones and navigation



▲警告

- The driver, please do not operate the automobile telephone of a mobile phone while driving. Distracted by the operation of the phone, there is a possibility that the lead therefore it unexpected.
- Driver, do not view the TV while driving, please do not operate the etc. navigation and audio. There is a risk that lead to an unexpected accident in front carelessness.

Not operating a switch to put your hand into the handle





Will interfere with the steering wheel operation, it will be the cause of the accident unexpected I think.

Not running while carrying a foot on the brake pedal



You can wear faster brake parts, brake device is or overheating, there is a possibility that the effectiveness is poor. Not running while carrying a foot on the clutch pedal





Rishite the clutch is overheated or wear quickly, there is a Re morning sickness lead to unexpected accident.

Longer than necessary, please do not do a half-clutch operation.

It is not in neutral while driving



▲ 注意

Other than an emergency, please do not put in neutral the Chenjire bar or select lever while driving. Engine brake is not effective at all

Because, it may cause an unexpected accident.

What would you do in this case?

- When the warning lamp is lit?
 Please refer to the treatment is stopped immediately safe place.
 - → 1-10 page (warning light and display light)
- If you received a strong shock to the floor?

Stopped immediately safe place, do not leak brake fluid and fuel, please check whether there is an abnormality in, such as the exhaust pipe. When an abnormality is found, please contact your Suzuki dealer or Suzuki agency.

- When the tire is suddenly punctured?
 Firmly grip the steering wheel, and drop gradually speed carefully over the brake, be sure to stop in a safe place.
 - → 7-2 page (punk)
- When the brake pedal feel heavy?

The car, equipped with a brake booster to reduce the force to step on the brake pedal by utilizing the negative pressure of the engine. When the negative pressure of the engine is reduced, you may feel heavy when I stepped on the brake pedal, but this is not a malfunction. Please stepped strongly pedal as it is.

To use the engine brake is a long downhill

Please in a combination of engine brake (X) is a long downhill. Release the foot from the accelerator pedal, in accordance with the traveling speed, do the following.

Manual car

It will shift down a gear by one speed.

4-17 page

(Operation of the change lever)

CVT vehicle

S (sport) Modosui Tsu Luke to the switch to ON, and Shifutoda down to the select lever

4-18 page

(Operation of the select lever)

Auto gear shift car

The select lever from in the (manual mode), and Shifutodau down to the appropriate gear position by operating the lever or Padorushi shift switch (equipped by type).

4-28 page

(Operation of the select lever)

※ The engine brake, A during travel

To Ima that the braking effect that occurs when you release the foot from Kuserupedaru. Engine brake takes effect well etc. slow Giyaho.



80J1003



If you continue down the brake pedal, brake device is overheating there is a possibility that the brake is not whether the effect.

When the cross-wind is strong



72.120330

On the outlet and bridges of the tunnel, such as when too as a large truck, it may crosswind the accepted by the car is flowed laterally or to. Firm handle not panic grip Ri, please rebuild the course gradually slowed down.

A must-read! For safe drive

Run slowly on a slippery road surface





Wet road surface or icy road, in such snowy road, sudden acceleration, sudden acceleration, sudden braking, Do sudden handle, not the driver to get the "sudden" such as sudden engine brake. Otherwise, there is a lead to slip accident.

Not pass through at high speed puddle



▲ 注意

Traveling on a puddle or wet road surface at high speed Then, between the tire and the road surface can water of the film, it may become a state in which the tire is floating. This is referred to as Haidoropu training phenomenon, there is a possibility that the steering wheel and the brakes can lead to unexpected accidents become ineffective at all.

Atoyaarai was traveling on a puddle After the car confirm the effectiveness of the brake



- Stepping several times blanking Rekipedaru at a low speed from make sure the perimeter of safety, please make sure the effectiveness of the brake.
- When the effectiveness of the brakes is poor, stepping lightly Breakfast Rekipedaru repeated at a low speed until the effectiveness is restored, please dry the wetness of the brake system.

Flooding location is not running



Should when traveling on a flooded location, while checking the effectiveness of the brake and stop in a safe place, or Suzuki dealer, please contact the Suzuki agency. Also, please have it inspected, such as the following items.

- Braking effectiveness
- Engine, transmission, changes in the amount of oil and protein, such as de Farensharu (if the oil is cloudy, water has been contaminated because it is required OIL exchange)
- Bearings, lubrication defects such as joint

注 記

Flooded places and was, please do not line run deep puddles. Engine stall, of electric instrumentation products short, cause, such as engine damage.

When you stack (stuck) is

- In such as mud and sand, and the drive wheels is called a stack that can not be escaped Check rolling.
- When repeating the forward and backward is because a driving device is may be damaged, <u>Consider the following:</u> please.
 - <u>Automatic car</u> The select Access from securely put the lever <u>Go stepping lightly Le</u> Sai.
 - <u>Auto gear shift car</u> The select A lever, or certainly put to display in the reference (selector lever position display or the gear position display) is please stepping lightly check and whether we accelerator that it is 1 or R.

- When you can not escape be performed several times Is, please stop the operation.

- Making it easier to escape and put a stone or wood under the tires.
- ESP

 In the vehicles, it will Tokigaa traction
 Control is not suitable for escape. In such a case,
 ESP

Please refer to the Torakusho down control to the state of deactivated by operating the OFF switch.

→ 4-47 page

(ESP ® Handling of vehicles)

▲警告

Before you try to escape, please make sure to check the surrounding safety. It carries the risk of causing an accident and momentum good rather than starting.

A must-read! For safe drive



Do not idle the tire at high speed. Tire is damaged by overheating abnormally, the drive device may cause or damage.



When you park

Te firmly Ritokake the parking brake

- When you park on a flat place
 - While stepping on the brake pedal, firmly put the parking brake.
 - → 4-16 page
 (Operation of the parking brake)



(1) parking brake lever

1

2 Automatic car auto gear shift car
Put in the select lever.
→ 4-18 page
(Operation of the select lever)
→ 4-28 page
(Operation of the select lever)
Manual car Is, the change lever
It is entering into R (Reverse) or 1 speed.
→ 4-17 page
(Operation of the change lever)
 Slowly release the foot from the brake pedal,
please make sure that you do not Ugokidasa
the car.
▲注意
 Even when you park for a little while on a flat
place, for safety, the select lever Or placed in,
please put the change lever to R or 1 speed.
• When Dy Apply the parking broke at the time of cold
• When Ru Apply the parking brake at the time of cold,
there you have it you can no longer be canceled and
freeze. Avoid the slope, please be parked on a flat
surface.

→ 6-17 page

(Parking brake)

When you park on a slope

 $\left|\frac{1}{2}\right|$, Is the same operation as when you park in a flat place

• Manual car It is, in the downhill Cheng The Jireba R (reverse), please put it in the first speed uphill.

2

3

The tire was fixed in such as wheel stop and stone of commercially available products, please do not Ugokidasa the car.

▲警告

Steep the slope Do not park. Such as the car unattended starts to move, think There can lead to unexpected accident.

There is that the cooling fan after the engine stopped (radiator fan) to create dynamic

If the engine coolant temperature is high, the cooling fan in the engine Lou-time even after stopping the engine (radiator fan) will continue to rotate, but this is not a fault. When the temperature of the cooling water drops, automatically fan will stop.



Do not approach the running fan. Included hands and hair, such as clothing is wound And Murrell, there is a risk of injury.

When you move the car over the engine



Please not attempt to move the car in inertia by using the slope. Become strong force is required at the time to go through the trees and brake pedal turn the handle, there is a risk of an unexpected accident.

Do not nap while the engine running



▲警告

- Exhaust gas at ambient conditions and wind direction to penetrate into the car, there is a Re emesis carbon monoxide poisoning.
- Unconsciously move the selector lever and shift lever, and Dari depress the Akuserupeda Lumpur, there is a risk of an unexpected accident.
- If you hold down the accelerator pedal unconsciously, there is a risk of fire and overheat the engine or exhaust pipe.

Not park near Although flammable





Dried grass, waste paper, please do not stop the car in the vicinity of combustible materials, such as plywood. Since the exhaust pipe and the exhaust gas reaches a high temperature, there is a risk of fire.

Lock the door when you leave the car to stop the engine



When away from the car in a little while, do not leave the cash and valuables in the car. There is a risk of theft.



Please Do not such away from the car while the engine running. It seems such as a fire or theft <u>There can lead to unexpected accident</u>. Do not leave etc. personal computer and mobile phone in the car

Attari to theft, there is a Re morning sickness or to failure due to moisture or humidity or temperature changes.

Do not leave, such as writers and glasses



▲警告

- When you park under the scorching sun, the Writer and spray cans in the car, plastic products (glasses or card, CD case, etc.) Please do not leave or carbonated beverage cans. Since the car reaches a high temperature, there is a risk of causing fire due to spontaneous combustion or explosion of writers and spray cans, glasses, cards, deformation and cracking, such as a CD case, the rupture of the carbonated beverage cans.
- Or the writer Yasu play cans operation portion is exposed put in, such as a glove box or glove compartment, please was such Ide If you keep dropping in the gap of the floor and seat. When you move the the trees and sheet shoved the luggage, there is a possibility that the lead gas is ejected into the fire.

When refueling

5-52 page (fuel oil supply port)

Watch out for fire

2



Please observe the following things.

- Please stop the engine.
- During refueling Please close the door and windows.
- Gasoline is due to the highly flammable, is the fire should be prohibited, such as tobacco.

When refueling in a self-stand



Please observe the following: Always when to refuel in a self-stand.

· Before opening the fuel cap, touch a metal part of the vehicle body or refueling aircraft, please remove the body of static electricity (X). And are charged with static electricity on the body, to ignite the fuel in the fire flower due to the discharge, there is a Re emesis burns.

Also, please do not return to the car during refueling. There is a possibility to charge again.

- The fuel filler opening, Do not bring someone other than the person who was subjected to static electricity removal.
 - ※ When the air is dry, the body in many Static electricity will be charged. In addition, when you dress in layers, static electricity is generated by friction of the fiber. The country dry season is careful.
- · Fuel cap is loosened slowly, and open the cap when it stops the sound of air escaping. Suddenly the pressure in the open Celtic fuel tank is suddenly missing, there is a risk of blowing out the fuel.
- Do inserted securely to Toko filtration to stop the refueling nozzle to the filler opening. If you do not insert the nozzle to ensure, there is a possibility that the fuel Fukikoboreru.
- Please pull it firmly until Toko furnace stops the lever of the fueling nozzle.

 After the automatic stop of the fuel supply nozzle (Otosu top) function is activated, please exit the refueling. If the sum adoptive refueling after an automatic stop, there is a possibility that the overflow fuel.



* Depending on the refueling machine, stop automatically at an early stage

- It may stop function can not be refueling in operation. Please follow the instructions of the stand employee.
- Be careful not to spill any fuel. If spilled, please wipe off with a dry cloth Tadachiniyawa. There can lead to unexpected accidents such as fire. In addition, if it is allowed to stand, paint stains, discoloration, and cause for cracks.
- After refueling, the refueling nozzle back to ensure that the original position, please firmly close the fuel cap. When the cap is not securely closed, or leakage of fuel, there is a risk of fire or occur.
- Fuel contains substances harmful to the human body. Please do not inhale the vaporized fuel.
- In addition, please observe the precautions that have been posted on the stand.

Other than unleaded gasoline is not used

注 記

Leaded gasoline or poor quality gasoline, other fuels (alcohol-based, etc. light oil) When you use the, engine and fuel

It has an adverse effect on the piping system .

The automatic car When driving

The automatic car there is a note on the specific **operation. 4-18 page of**" Oh Tomachikku car "Also fired were read together, please refer to the correct handling.

It is described as "automatic car" in this book <u>×</u> If it is, it shows the "CVT vehicle".

Be aware of the creep phenomenon

When you are stopped by multiplying the engine, select lever PN Entered into other than Being, also move the car slowly not step on the accelerator pedal. This is called a creep phenomenon.



- A select lever |<u>PN</u> | Input in addition to the When you are, please firmly stepping on the brake pedal.
- Such as at the time immediately after the start of the engine and air conditioning working, it may creep phenomenon becomes stronger. Please step on a firm brake pedal in particular.

– √m アドバイス ------

CVT vehicle also has creep phenomenon.

R (Reverse) position warning

When put to the select lever sounds a warning buzzer in the room, will inform to the driver that contains select lever is in.

- 에까 アドバイス ―――

 $|\underline{\mathbf{R}}|$ (Reverse) position warning buzzer is not intended for making known the retraction of the car to the outside of the vehicle of the person.

Note the erroneous application of the pedal



If the wrong step on the accelerator pedal and the brake pedal, you shy tuna in unexpected accident.

In order to prevent the erroneous application of the pedal, stepping in actually foot the accelerator pedal and Breakfast Rekipedaru before subjecting the engine, please check the position.

Brake pedal is stepping in the right foot



(1) Brake pedal (2) the accelerator pedal

Appropriate brake operation in the left foot is not possible. Brake pedal, please put the habits to take in the right foot.

When you operate the select lever

 Such as when to repeat the forward and backward, you may forget that you have put in the select lever.
 After the car <u>Retreat</u>

Is after is, please put a habit to $p\mu \mathbf{R} \mathbf{n}$ color \mathbf{N} immediately.

 Sutoki repeat the forward and backward crosscut, etc., please operate the Serre Kutoreba from completely stopped.



Please do not operate the selector Kutoreba while you step on the accelerator pedal. It carries the risk of causing an accident and sudden acceleration. Position of the select lever is confirmed by eye

During start-up and drop-off, at Re time of moving forward, please check with Byes that you have entered at the time of recession

When away from the car





Ideku such away from the car while the engine running I Sai. You should select lever is And contains in addition to there is a possibility that the car by itself begins to move. Also, in Dari depress the accelerator pedal or move the selector lever by mistake when you get into the car, there is a risk of sudden acceleration unexpected or be.

Auto gear shift car When driving

The automatic gear shift car There is a note on the specific operation. 4-28 page of" Oh Togiyashifuto car "Even-out, read it together, please refer to the correct handling.

Be aware of the creep function

 It stops over the engine <u>Te</u> Come and there, select PN lever other than

It contains, at the same time as you release the brake pedal, even if rather stepped on the accelerator pedal moves the car slowly. This is called a creep function.

- When the next, such as, creep function can not work.
 - Driver's door is open
 - And stepping on the brake pedal
 - And the parking brake
 - It has been shifted to the more than two-speed

注意

Input in addition to the

- A select lever PN When you are, please firmly stepping on the brake pedal.
- At the time immediately after the start of the engine and air conditioner operation, it may creep function becomes stronger. Please step on a firm brake pedal in particular.

- ₀िे **アドバイス** —

Or transmission warning light is lit, there is a case where creep function does not work when you are or blink or be.

→ 3-78 page (Transmission warning light)

R (Reverse) position warning

When put to the select lever sounds a warning buzzer in the room, will inform to the driver that contains select lever is in.

- ๗゚゚゚゚゚ ゚゚゚゚゚゚゚゚ アドバイス ――――

 $\left|\frac{\mathbf{R}}{\mathbf{R}}\right|$ (Reverse) position warning buzzer is not intended for making known the retraction of the car to the outside of the vehicle of the person.

Note the erroneous application of the pedal



If the wrong step on the accelerator pedal and the brake pedal, you shy tuna in unexpected accident.

注 記

Please do not step on both the accelerator pedal and the brake pedal at the same time. Clutch damage or cause to be or heat.

In order to prevent the erroneous application of the pedal, stepping in actually foot the accelerator pedal and Breakfast Rekipedaru before subjecting the engine, please check the position.

Brake pedal is stepping in the right foot



(1) Brake pedal (2) the accelerator pedal

Appropriate brake operation in the left foot is not possible. Brake pedal, please put the habits to take in the right foot.

When you operate the select lever

Such as when to repeat the advance and retreat, <u>Se</u>
 Sometimes forget that **Da** Rekutoreba, or to p **R** here

<u>To</u>. Before the car<u>Susumu</u> The after was, immediately $\left| \underline{D} \right|$ Or put in dialor, after render the put in color immediately, please wear a habit to ensure that the selector lever position display in the meter is set to N.

 Sutoki repeat the forward and backward crosscut, etc., from the completely stop stepping on the brake pedal, to operate the select lever, the display of the meter (selector lever position display or formic ya position display) is advancing when one, please make sure that you have made to the R at the time of recession.

- When you operate the select lever, flashing select lever position display is, if the warning buzzer sounded, it shifted to the display position and within meters of the select lever (select lever position display or formic ya position display) will not occur. When you do not switch even wait a little (2 to 3 seconds) as it is, please repeat the operation of the select lever stepped on blanking Rekipedaru.
- If the display of the position and within meters of the select lever is different, display in the meter shows the location of the correct gear.

▲警告

Please do not operate the selector Kutoreba while you step on the accelerator pedal. It carries the risk of causing an accident and sudden acceleration.

Visually check the display of the position and the meter of the select lever

During start-up and drop-off $\underline{\mathbf{R}}$, When moving $\underline{\mathbf{D}}$ forward or $\underline{\mathbf{M}}$ and was place $\underline{\mathbf{R}}$ a time of recession, the display of the meter (select lever position display or gear position Display) Please make sure that the P, 1 or R.

When away from the car



▲警告

Please Do not such away from the car while the engine running. You should select lever And contains in addition to, there is a possibility that starts to move Kurumagahi fort or be. In addition, to Dari depressed accession Serupedaru move the selector lever by mistake when you get into the car, there is a risk of sudden acceleration unexpected I think. The description of the other auto gear shift car

In addition to the, the auto gear shift car there is a specific function and method of operation. Please read firmly under Symbol of reference destination.

- When the warning buzzer is sounding
 - → 1-19 page

(Auto gear shift vehicles only)

- Warning lights and display lights
 - → 1-10 page (warning light and display light)
 - → 3-78 page

(Transmission warning light)

→ 3-80 page

(Brake system warning light)

- → 3-80 page (brake Riku es Theft indicator)
- → 3-81 page (indicator)
- Operation of the select lever
 - → 4-28 page (of the select lever The function of each position)
 - → 4-29 page
 (How to move the selector lever)
- Characteristics of auto gear shift car
 - → 4-34 page

(Characteristic of auto gear shift car)

- Way of operation of the automatic gear shift car
 - → 4-37 page (Auto gear shift How to drive a car)

The SRS air bag car When driving

In order to exhibit the effect of the SRS air bag system, 3-41 page of" SRS air bag "Also Ki had you read together, please refer to the correct handling.

Seat belt must be worn



51K0007

▲警告

SRS air bag system is not intended to replace the seat belt. In conjunction with the seat belt, it is an auxiliary restraint system of seat belts to exert its effect. Therefore, even if a car SRS air bag system is equipped with, please wear a seat belt without fail.

Seating posture

Because there is a Re strong shock emesis by the driver and front passenger SRS airbags that inflate in an instant, the driver and the front passenger seat of the passenger, sitting deep in the seat, please take lightly the back to back leaning. Also, please adjust the position of the seat so as not too much out in front of the seat.





To handle and instrument panel, or closer to, such as the face and chest, please do not put a foot. With a strong impact when the SRS air bag is activated, there is a danger of being a serious injury. In order to function properly the SRS air bag system



66K20540

2

▲警告

- Replace the handle, put a sticker on the pad portion of the handle, paint the color, please do not remodeling, such as covered with a cover.
- The air bag housing portion and its surroundings, please do not painted the color or put a sticker. In addition, Aku Sesari and fragrances, or place or install a such as ETC on-board unit and portable car navigation systems, please do not interest that was leaning against and umbrella.
- Please do not install and A on the front glass and room mirror Kusesari (except for the Suzuki genuine products).

Warning label about the passenger's seat SRS air bag

On both sides of the front passenger's seat sun visor, it has been attached the following warning label. This label shows the prohibitions and the influence that given to the children for the seat, on Installing a child seat when activated front passenger seat SRS air bag. This If you are installing a child seat in the front passenger seat of the car, Ri Do not carefully read the description and reference destination of the item of warning labels, please properly installed.



72M00150

Description of warning labels

The meaning of the symbol mark symbol mark				
	In the front passenger seat of the front passenger seat SRS air bag equipped vehicles, fitted with a child seat in the rear filter orientation, and prohibits placing a child passenger seat SRS air bag is inflated, strong in children for the seat you			
	and children come back towards opposition for more information indicating that the attack is applied, the instructions to read instruction manual (this document)			
	 → 2-8 page (for the use of seat for Oko-sama) → 3-50 page (you The selection of child clients Sheet) 			



The front passenger seat, please do not install the filtrate facing child seat after, such as a baby seat. When the swell is the front passenger seat SRS air bag, it applied a strong shock to the back of the child seat, subject to serious injury life-threatening Otherwise, there is.

When you drive a turbo car

The turbo car there is a note of peculiar. Read the following content, please refer to the correct handling.

Handling of turbo car

The turbo, is a precision device to draw a large horsepower than normal engine. Turbines in turbo unit (blade) is, by ultra-high speed by the pressure of the exhaust gas, and feeding a large amount of compressed air to the engine. Turbo unit comprising a turbine becomes high temperature of 700 ° C., cooled and lubricating has been performed by the engine oil.

In order to prevent the failure of the turbo unit, please observe the following of this.

- Engine oil, oil filter, please regularly exchange.
 Continuing the continuous running of the degraded oil, lubrication and cooling is not properly carried out in the turbo unit will be solid adhesive and cause abnormal sound of the turbine bearing portion.
 - → 2-36 page (engine oil
 When exchange)

A must-read! For safe drive

 Immediately after high-speed driving or immediately after traveling uphill, do not stop the engine immediately.

It performs idling luck rolling according to the following table, please stop the engine from to cool the turbo equipment, which reached a high temperature.

The engine is stopped just before the Driving situation	Measure of idling time
High-speed driving, hill-climbing about	t 1 minute (※) city, the
general running of the suburban	Unnecessary

- ※ equipped with idling stop system By car, because near the turbo device predetermined temperature when the engine is automatically stopped, idling is not required.
- When the engine is cold, please do not empty department lyrics and sudden acceleration.

注 記

If you do properly dealt with in accordance with said, it will be the cause of failure or damage to the turbo unit.

When you drive a 4WD vehicle

The 4WD vehicles there is a note on the specific operation. Please refer to the correct handling.

Traveling in mind the situation of the road surface

▲ 注意

4WD vehicles, snow-covered road, steep slope, sandy, but to demonstrate the driving performance the tire is excellent in the slippery road surface, such as mud, not perfect. Also, off-road (all-terrain), not a rally private car. Please observe the following things.

- Such as sand or mud, please do not continuously running in the place where the tire is easy to empty rolling.
- Braking performance is not there is a difference etc.
 jumped ho compared with 2WD cars. Please take a sufficient following distance to travel on a slippery road surface. Accelerator, handle, the operation of the brakes, please carefully carried out in the same manner and 2WD cars.
- Crossing not running and water running Do.



80J042

Note also such a thing

Match, fire of tobacco is certainly extinguish



▲警告 (1)

- Match, fire of tobacco is sure to put out, ashtray, which was charged with cigarette butts (sold separately), please completely closed.
- Or overtighten was the cigarette butts in the ashtray (sold separately), please do not put a flammable such as paper.

Note when subjected to inspection

ESP ® If you put the vehicles in the tester, ESP ® By

operating the OFF switch, please in the state of operation stop the following functions (OFF).

→ 4-49 page

(ESP ® OFF switch)

- Traction control and to a data stability control
- Radar brake support (RBS)
- Improper start suppression function

For more information, please consult your Suzuki dealer or Suzuki agency.

- (Im アドバイス

Do not exert too much pressure on the exterior parts



Spoiler, Do not apply strong force rear bumper, such as to unfold the side cart <u>Please. There is a risk of damage.</u>

Note, such as in the step



The following cases, there is a possibility that the bumper or the vehicle bottom is damaged or be.

Please be careful.

- There is a step such as a shoulder ride put to the location
- The running of the rut or depression, and the like road

To those who use such as implantable cardiac pacemaker

Keyless push start system vehicles

▲警告

- If you are using an implantable cardiac pacemakers and implantable cardioverter defibrillator (ICD) is in the range keyless push start system vehicles with each transmitter (see figure below) within about 22 cm, implantable cardiac pacemakers and please do implantable cardioverter defibrillator (ICD) does not approach. Radio waves may affect the operation of implanted cardiac pacemakers and planted included cardioverter defibrillator (ICD).
- Persons who use a medical electrical devices other than implanted cardiac pacemakers and implantable cardioverter defibrillator (ICD), the cases radio waves keyless push start system equipped vehicle affect the operation of the medical Ryoyo electrical equipment a certain order, please check the influence to such as medical electrical equipment manufacturers.
- For more information, please contact your Suzuki dealer or Suzuki agency.



(1) front seat door vehicle exterior transmitter

(3) luggage compartment transmitter

(2) the vehicle interior transmitter

(4) back door vehicle exterior transmitter

It is not tamper



64L20170

▲警告

- Ri was attached to the parts that are not suitable for this car, please do not the engine adjustment and wiring of the own way. Or causing think cliff there is no fire or an accident, you or might be or become tampering.
- Radio, navigation, audio, installation of electrical products, such as ETC on-board unit, when you remove it, please consult your Suzuki dealer or Suzuki agency. In addition, Ri took the power of electrical products from the battery terminal, please not place or connect the ground wire directly. Or interfere with the work of electronic parts, fire, failure, there is a risk of or causing such as battery up.
- Wheel, wheel nut Do not use other than the specified Suzuki genuine. Such as the wheel is out in the nut is loose while the vehicle is running, it may lead to unexpected accident. In addition, fuel consumption and running stability has deteriorated

Ri, you or the cause of the failure.

注 記

In discharge headlights vehicles, auto leveling function when the following modifications (automatic optical axis adjusting function) There may not operate normally.

- Remodeling of the suspension (the hardness of the vehicle height and support the scan pension change)
- Mounting of other than the specified size tires and WHEEL

Mounting of parts, when you remove, repair is

▲警告 (1)

SRS air bag, seat belt pre-tensioners, and tampering with parts that affect the function, or to operate when there is no thought cliff, it may or may not operate properly when needed. The following cases will have a negative impact on the system. Prior to the Suzuki dealer or consult your Suzuki agency.

- Removal of the handle, Handoruma despite repairs, such as
- Around the instrument panel, repair of repair and electrical wiring in the vicinity of the center console
- Attachment, such as audio equipment
- Painted sheet metal you and repair of peripheral dashboard
- Exchange and repair around the seat of the front seat
- Repair around the center pillar

Watch out for mounting of accessories





Please do not attach the accessories to the window glass. Or interfere with the field of vision accessories and absorption machine is, there is a risk that sucker to or cause a fire in the work of the lenses. In addition, when the SRS air bag is activated, there is a risk of injury flying accessories.

When spilled, such as drinks



Do not apply water or the like in the car, please do not spill etc. drink. Components, such as fails or next, there is a risk of or cause a fire. In the unlikely event that spilled like drink, please receive promptly checked by Suzuki service factory.

- · SRS air bag system
- Navigation or audio
- Switch, electrical components, such as wiring
- Moving parts, such as the select lever, seat belt buckle

When you change the engine oil

- To regularly exchange
- In standard usage, the engine for oil are 10,000
 km (Turbo cars 5,000 km) Each, or 6 months Exchanged
 with Dochi Raka earlier of each, engine oil filter 10,000
 km Please be replaced each time.
- When used in harsh conditions (severe conditioners down), you need early exchange than the standard case.
 - Maintenance notes

注記

Please observe the replacement time. Degraded oil and clogged filters, you may cause engine failure and abnormal noise. For exchange, please only with my name you to the Suzuki dealer or Suzuki agency.



A must-read! For safe drive

Standard / viscosity of engine oil

Because fuel for which performance through the engine oil to be used depends, the following table 1, please use the oil satisfying the Table 2, respectively. Oil, it is recommended that you use Suzuki genuine for oil.

→ 8-1 page (service data)

table 1

Table 2

No standard	l turbo car turbo c	ar
SAE viscosity	0W-20	F) M 00
(※ 3)	5W-30	5W-30

※ 1 The API standard, the American Petroleum Institute

It represents the quality grade of engine oil-defined standard. X The 2 ILSAC standard, international lubricant standard

Of the authentication committee automotive engine oil of a standard that defines, it indicates that the performance such as fuel economy and durability based on the API standard is a better oil.

※ 3 The SAE viscosity, constant the viscosity of the lubricating oil Meta is a standard.

> The numbers on the left side (the numbers stick of W) means the viscosity at low temperatures, this number indicates that there is good startup of the strong engine in the cold as small again. The numbers to the right of means the viscosity at high temperatures, strong to heat higher this number is large, it is excellent protection performance of the engine.

- ��� アドバイス —

0W-20 is an excellent oil to fuel consumption performance that are filled at the time of new cars. (No turbo car)

Let's eco-driving

- → 3-85 page
 (Eco drive indicator)
- → 3-62 page (status info Mation lamp)
- → 3-68 page (eco-driving display function)

Proper tire pressure

- The air pressure of the tires consumes a lot of low and gasoline. Please in the proper air pressure.
- Specified air pressure of this car, are attached to the opening of the driver's seat door " Pneumatic La Belle "After confirming (1), please adjust.



64L20010

Not wife unnecessary luggage

Such as fuel efficiency is tire or deterioration or wear quickly, there is a negative effect on the car.

Warm-up operation is properly

The following cases, after performing a warm-up operation of a few minutes extent from a few tens of seconds, please start traveling.

- If you did not use your car a long period of time
- When in the cryogenic (a guide -10 °C or less) in such cold climates

Me other eco-driving in the case other than the above, please start promptly traveling Once you start the engine.

注 記

Since immediately after the start of the engine is not warmed up, racing and sudden acceleration, sudden acceleration Then, it will be the cause of the engine failure.

-伽アドバイス ――

It depends on the situation, but generally by warming up, is said to consume fuel of about 160 mL at 5 minutes.

Sudden acceleration, sudden acceleration, sudden braking Not the driver to get the "sudden", etc.



Not an empty Bekasi



Only consumes the fuel, does not have any effect mower.

It travels at a gear according to the vehicle speed

Fuel economy will be worse when using the low-speed gear traveling at a high engine speed. Your Kedah again the correct gear in accordance with the traveling speed.

MEMO

3. Before driving

•	Opening and closing of the door
	Key 3-2
	door 3-4
	Keyless Entry 3-8
	Mobile remote control
•	Alarm System
	Security Alarm (alarm system) 3-16
•	Opening and closing of the window
	Power windows, 3-19
	Manual window 3-23
•	Adjustment of each part
	Room mirror
	door mirror······ 3-24
	Tilt steering 3-28
•	Adjustment of the seat
	Front seat
	Rear seat 3-31
•	Seat belt
	····· for seat belt 3-35
	How to wear a seat belt · · · · · · · · 3-37
	Handling of the seat belt and care
	Seat belt pretensioners (front seats only) 3-39
	Seat belt of shock reduction mechanism (front seat only) 3-40

Children's seat

• Meter

Look at the meter type or	3-61
Multi-information display 3-64	
Warning lights and display lights seen how ·····	

Safe driving is first

Seat belt that has been installed on your car, SRS air bag system, also safety equipment such as ABS (anti-lock brake system), there is a limit to the occupant of the safety or be. As well as adhere to the legal speed limit, please try to safe driving in the conservative speed.
Key

Or you lose your key, please be careful not to or trapped in the vehicle.



If you bring the remote control key into the aircraft, please do not press the operation button in the cabin. In addition, when you put such as the bag, please accommodated easily operation buttons, such pressed strange. When the operation button is pressed, the radio waves are transmitted, there can be damage to flight of the aircraft.

※ remote control key is used in the aircraft

There be appropriate want to electronic devices is limited.

. √m アドバイス –

- In order to prevent the theft, when you lose the key, promptly consult your Suzuki dealer or Suzuki agency.
- For the purchase of the key, consult your Suzuki dealer or Suzuki agency.

Keyless push start system-equipped vehicles

- Key comes with two.
- Key, in addition to the starting and stopping of the engine, and then use the locking and unlocking of the door.



64L30010



Such as key chain accessories, please to the minimum necessary. Or with a number of accessory, and or put a heavy object, Otherwise, there is a key that was pointing to the engine switch vibration or the like during running around.

In addition, if that has put a big accessories, there is a fear that by turning the key hit and hand knees.

→ 4-2 page (of the engine switch The function of each position)

Keyless push start system vehicles

- Keys can be used to locking and unlocking of the door, but You can not use to start and stop the engine. Please use the mobile remote control to start and stop the engine.
 - → 4-9 page (Kakekata of the engine)
- Two handheld remote controller (1), can be stored in the remote control key (2) has unlucky two.
 - → 3-11 page (mobile remote control)



(3) actuation indicator lamp

 Key stored in the remote control (2), a lock release lever (4) • Take out while pulling in the direction.



(5) conformity certification mark

*─ �*m アドバイス *-*

In the mobile remote control, sure to store the key. For example, when the battery of the remote control has to have Rutoki and failure consumption, it carries the risk that can not be locking and unlocking of the door.

Key license plate

The key number plate (2), the key number required at the time of key creation (1) has been stamped.



- Anyone other than the customer as the key number, that is not known is, the key number plates is in a location other than the vehicle, please keep it in a safe place. Should, when you lose your key, please contact us to tell a key number to the Suzuki dealer or Suzuki agency.
- When it comes to your car to transfer it is, then for the sake of those who owned, Please pass with your car keys to Keenan bar plate.

3

door

▲警告

- When you close the door, please do not pinch your seat belts and luggage. Become a half-door state, there is a possibility that the door is open while the vehicle is running.
- In the state multiplied by the engine, it does not leave open the backdoor. Exhaust gas from entering into the vehicle, there is a risk of carbon monoxide poisoning.
- To prevent accidents, such as fire and theft, when you leave the car, please lock the stopper plate door the engine.

▲注意

- Opening and closing of the door, carried out a large person rather than the children, please be careful hands, feet, head, etc. to Hasa Manai so.
- When you open the door, please note the car from behind. Please note especially the day the wind is strong.
- When you open the back door, please completely open. If Opening is insufficient, it closed when the unexpected, there is a risk only is.
- When the engine is at stake, please do not open and close the back door directly behind the exhaust pipe. There is a Re emesis, such as burns.

-ۥſmアドバイス —

- Security by the set state and the door of the Opening of the alarm, there are times when the alarm is activated.
- → 3-16 page
 - (Security alarm)

 In the case of auto gear shift car, when I opened the driver's door, there is a case where the operation sound than the body can be heard is not a malfunction.

Locking and unlocking from the outside of the vehicle by key operation

- → 3-8 page (keyless entry)
- → 3-11 page (mobile remote control)
- Driver's door

Insert the key turning toward the front of the car and locked, to unlock can Turn to the back direction.



back door

Insert the key into the driver's seat door, lock and turn the car forward, you can unlock Turn to the back direction.

• When you open the back door, Kaijogo, but a pull the door handle (1) to the front and lift Luo door.



When closing the back door

Cut with a door, the last by hand from the outside, and press with a little momentum.



▲ 注意

To prevent damage or malfunction of Danpasu tape (2) that support the back door, please observe the following things. Scan tape is or not move smoothly, when I opened the backdoor, there is a risk of or can no longer be maintained.

- Or to scratch the rod portion of the stay (the rod portion of the sliding when the door is opening and closing), mud and plastic pieces, please do not to adhere foreign matter such as tape.
- Or multiplied by the hand to the stay, please do not put things.



Locking and unlocking of from the inside of the vehicle

Front seat door, rear door

Locking to the lock lever (1) the locking side, close the door (car forward), you can unlock and to unlocking side (behind the direction of the car).



小 アドバイス ―

Kaijoji, red be displayed with some seeing the lock lever. Please as a guide.

back door

When the back door in a malfunction or lead battery up can not be unlocked, please have it inspected in Suzukisa screw factory. When urgent, please unlock the following procedure.



<u>2</u>

3

By, for example, defeat the backrest of the rear seat, to ensure the working space.

3-32 page

(How to defeat of the backrest)

Disconnect the back door of the trim (1).

• Nine clips are fixed (2), remove it pry with a flathead screwdriver (commercially available).



And bring can pull the lever (3) in the trim inside, and unlocked. When locked, you press down on the lever.



74P30060

注意

When the lever operation does not touch the edges of the holes around the back door Please give me. There is a risk of injury.

Locking you do not use the key

ふう アドバイス -

- "Locking you do not use the key When the "the key is make sure it is in hand. It carries the risk Komu close the key.
- In the case of keyless push start system vehicles, in the following situations, " Locking you do not use the key There is a case that "can not be.

ACC Or

- In the mobile remote control car is there



3-14 closed page (mobile remote control Write prevention function)

Front seat door

Lock lever (1) in the direction of the arrow in the following figure, you can lock and close the door while pulling the door handle (2).



74P30070

The rear seat door

Lock lever (1) in the direction of the arrow in the following figure, you can lock and close the door.



Power door lock by key or lock lever operation

- → 3-8 page (keyless entry)
- → 3-11 page (mobile remote control)

When the locking and unlocking the driver's door key or the lock lever (1) in operation, also locking and unlocking at the same time the passenger seat / rear seat / back door.



74P30090

3



74P30100

┌── ଐ╖ アドバイス *─*

In the case of keyless push start system unit 備車, when any of the doors are open, the case can not be locked with a lock clever manipulation of the key or the driver's door you will there.

3-14 closed page (mobile remote control Write prevention function) Door lock release function

If the SRS air bag in a collision is activated, automatically release all of the door lock.

√m アドバイス —

Even when the air bag is activated, if the wiring or the motor itself of the door lock motor is damaged, the door lock release function does not work.

Locking and unlocking by the child-proof

Rear door you can not open from the inside of the vehicle. Please use in order to prevent the door erroneous open due to children.

- The lever (1) on the rear seat door LOCK
 In the position of (open not), Masu closed Me the door. It does not open the door from the inside of the vehicle.
- It is possible to open the door from the outside.



√m アドバイス ·

In the unlikely event that opened from the inside of the vehicle, please for your use the outside of the door handle out a hand through the window. (Passenger type vehicles only)

Keyless Entry

Within a range of about 2 m from the car, and press the operation part of the remote control key, you can locking and unlocking all the doors.

• When you lock, check whether it is locked by pulling the door handle.



To prevent accidents, such as fire and theft, when you leave the car, please lock the door to stop the engine.

注 記

The remote control key, has a built-in precision electronic components. In order to prevent the failure of electronic components, please observe the following things.

- Not put in place such that the high temperatures, such as on top of the instrument panel
- By, for example, is dropped, it does not bear Oh strong impact
- Or a wash, does not or placed in water

- Working distance of the keyless entry, might change under the influence of ambient. In the location or, such as strong radio waves are generated, there is a lkoto keyless entry, such work.
- When away from the car in a little while, please do not leave cash or valuables in the car. There is a risk of theft.
- If you can not be locked, unlock the door with the remote control key, please refer to the facilities lock and unlocking keys.

- When the keyless entry does not operate at the correct distance, consumption of the battery it will gills considered.
- → 6-10 page (Battery replacement of the remote control key)
- When you operate the remote control key more than necessary, it accelerated the consumption of the battery.
- The purchase of remote control key, for the registration of the PIN code, please consult your Suzuki dealer or Suzuki agency.

Keyless push start system-equipped vehicles



(1) Remote control key (2) the operation unit

- ۥſm アドバイス –

- When something does, does not work is keyless entry.
 - If any of the door is open,

It can not be locked. (Unlocking is you can)

- Insert the key into the engine switch There Nde
- In one vehicle, you can register until four remote-control key.

Keyless push start system vehicles



 Remote control key (portable remote control) (2)
 operation unit (locking switch) (3) operation unit (unlock switch) (4) actuation indicator lamp

── √m アドバイス ───

- When something does, does not work is keyless entry.
 - If any of the door is open,

It can not be locked. (Unlocking is you can) outside buzzer will sound between the "copy" and about two seconds.

-<u>Ene</u> Jin switch



• In one vehicle, you can register up to four remote-control key (mobile remote control).

3

Answer-back function

This function is to inform the locking and unlocking of the door by the keyless entry.

Answer-back	Initial setting (Factory) during the sy		witch setting		
function	Lock (locł	Unlock	Lock (locł	Unlock	
	(unlock)	(unlock)	
Emergency	Flashing	2			
flashing lights	once	flashes			
Interior lights (switch DOOR		About	2	About	
position)		lighting 1	seftastnes	lighting 1	5 sec

- If you want to turn on or blink the operation at the same time as the chamber lights keyless entry, and the interior light switch in DOOR position.
- After the interior light comes on about 15 seconds, it turns off while gradually dimmed.
 - → 5-57 page (interior lights)
- In the case of keyless push start system unit 備車, it will also be external buzzer.

Answer-back function	Initial setting (Factory) during the sy		witch setting	
	Lock (locł		Lock (lock	
	(unlock)	(unlock)
External	Once	2 times		
buzzer	blowing	blowing		

- ଐm アドバイス -

- For information about setting the answer back function switching (customize), please consult the Suzuki dealer or Suzuki agency.
- Keyless push start system equipped vehicles, even when the facilities tablets and unlocking with request switch, answer backed function is activated.
 Additionally, the following cues can be customized separately.
 - If by the very flashing lights / interior lights Drawing
 - Signaled by external buzzer

Timer lock function

onds

For theft prevention, is automatically ability to lock the door.

- After unlocking with keyless entry and automatically locking want the door to when you did not open any of the doors within about 30 seconds.
- When the timer lock function is activated, the security alarm is automatically set. (No alarm mode except for)
 - → 3-16 page

(Security alarm)

Keyless push start system unit 備車, even when you unlock the request switch, timer lock function is working.

Portable remote control

By equipment type

When all the doors are closed, before pressing the requests switch in the seat door or back door, mobile remote control in possession starts communication with the vehicle and the radio waves, and verification can take locking and the solution of the door tablets will be possible.

In addition, it has the following features to the other.

- Keyless Entry
 - → 3-8 page (keyless entry)
- Switching startup and power by engine switch
 - → 4-5 page (keyless push scan Start system)
- Immobilizer (vehicle anti-theft device)
 - → 4-4 page
 - (Immobilizer system)

注 記

Radio waves mobile remote control for outgoing, it may affect the wireless communication devices such as mobile phones and other remote control or be.

Mobile remote control or a request switch more than necessary, please do not the operation of the engine switch.

- ᠭᡢ アドバイス ――

- Mobile remote control is in possession of the driver, please be managed. Please do not leave your remote control in the car.
- In order to prevent the theft, when you lose your mobile phone remote control, as soon as possible please consult the Suzuki dealer or Suzuki agency.
- Mobile remote control when you communicate with the vehicle, we use the susceptible weak electric wave the external influences. In the following such a use for the environment, it may not operate normally.

- Close to the TV tower and power plants, broadcast stations
 There is equipment that generates strong electromagnetic radiation or noise, etc.
- Mobile phones, wireless communication, such as radio

In possession together, such as the equipment and notebook computers

- Contact mobile remote control and made of metal Or have been, are or covered
- Other vehicles of the keyless entry near And but is used
- Parked in metered parking

(Because there is a wave of influence for vehicle detection)

Two handheld remote controller (1), can be stored in the remote control key (2) it is now with two.



(3) actuation indicator lamp

 Key stored in the remote control (2), a lock release lever (4) • Take out while pulling in the direction.



(5) conformity certification mark

▲ 注意

Cellular decomposition of the remote control (except when the battery exchange) and repair, Do not remodeling. Fire or electric shock, there is a risk of injury. In addition, it might be punished by the law.

注 記

In the mobile remote control, it has built-in precision electronic components. In order to prevent the failure of electronic components, please observe the following things.

- Not put in place such that the high temperatures, such as on top of the instrument panel
- By, for example, is dropped, it does not bear Oh strong impact
- Or a wash, does not or placed in water
- Not Ke with a such as key chain magnetized
- Do not place in the vicinity of the equipment that was magnetized such as a television or audio
- Ri was placed in the vicinity of the electro-medical equipment (such as microwave therapy equipment and low-frequency treatment device), not or receiving treatment while wearing

-√m アドバイス ------

- Elimination of conformity certification mark, please do not tampering. It may be punished by law.
- In the mobile remote control, please store the key. For example, when you or failure when the battery of the remote control are exhausted, this may result in you being unable to locking and unlocking of the door.
- In one vehicle, you can register until four mobile remote control.
- Battery life depends on usage, but is about 2 years.
 - → 6-10 page

(Battery replacement of the remote control key)

- Mobile remote control, it has the receiving operation at all times in order to communicate with the vehicle. When you continue to receive the radio waves strong, you may want to significantly deplete the battery power. (Such as when placed near the appliances to send a strong radio waves such as a television or a personal computer)
- The purchase of a mobile remote control, for the registration of personal identification code, was Suzuki dealer or consult your Suzuki agency.

Mobile remote control battery warning light



70K122

Located on the meter panel.

- Battery of portable remote control <u>OFF</u> When the record is close, the handle down gin switch Turn <u>ON</u> about 15 seconds when it is in. Battery exchange sac example, please reset the warning light.
 - → 1-10 page (warning light and display light)
 - → 6-10 page

(Battery replacement of the remote control key)

- ๗m アドバイス ――

When the set switch the (customized), you can not light. For switch settings, consult your Suzuki dealer or Suzuki agency.

Locking and unlocking of the door by the request switch

When all the doors are closed, where equity to have a mobile remote control " Operating range of the request switch "(3-14 page And has entered the see), each time you press the request switchers switch, you can locking and unlocking all the doors.

• When you lock, check whether it is locked by pulling the door handle.



(1) request switch of the front seat door (2) back door request switch of

▲警告

To prevent accidents, such as fire and theft, when you leave the car, please lock the stop door the engine.

−√m アドバイス −

• When something does, it does not operate the request switch.

- Open one of the doors Tei That

- Ene ジンスイッチが ACC Or ON When

- When the locking and unlocking of the door at the request switch, answer back function and timer lock function is activated.
 - → 3-10 page

(Answer-back function)

→ 3-10 page

(Timer lock function)

• When away from the car in a little while, please do not leave cash or valuables in the car. There is a risk of theft.

The operating range of the request switch (outside)

It is within around about 80 cm in a semi-spherical from the front seat door or the back door near the request switch.



82K266

- √m アドバイス -

- "Operating range of the request switch It is in possession of a mobile remote control ", to be in the following situations the remote control is not detected, you may request the switch does not work.
 - The battery of the mobile remote control is not exhausted
 - Strong radio waves or noise mobile remote control
 I have received of influence
 - Contact mobile remote control and made of metal Or have been, are or covered
 - Too close portable remote control on the door ing
 - Or near high mobile remote control of the ground
 Attari in position, with or met, such as in the ass of the pocket, away from requests switch
- If there is a spare mobile remote control in the car, the remote control is detected, requests the switch you may not be operating properly.

Request switch not working warning buzzer

When something does become about two seconds outside the vehicle buzzer is "peak", warns you that the request switch is not working.

<u>D</u> Down Jin switch

ON In the state, closed all the doors, the request switch Push When was

ACC

Or

- The engine switch
 LOCK
 (OFF)

 After you in, when you press the requests switch in the following situations:
- It has left behind a mobile remote control in the car
- It is open any of the doors
 - → 3-79 page (half door warning light)

The engine switch



Brought out a portable remote control to the outside of the vehicle and, after confirming that the door of all were completely closed, please press the request switch again.

Prevention function confinement mobile remote control

" Locking you do not use the key "(3-6 page In see), is the ability to prevent the Uno Shima crowded close the mobile remote control.

 In a state in which the mobile remote control was left behind in the vehicle, "Locking you do not use the key If you attempt to lock all the doors in ", automatically all the doors are unlocked.

- ᠭᡢ アドバイス _____

- "Locking you do not use the key When the ", please check whether the mobile remote control in hand.
 There is a confinement Muosore the remote control.
- <u>D</u> Down Jin switch
- ACC

Or

ON When the, regardless of the position of the portable remote control, prevention function confinement mobile remote control is activated.

 When not in or connected when the lead battery is up to the full, prevention function confinement mobile remote control does not work.

The detection range of the request switch not working warning buzzer / mobile remote control closed narrowing prevention function (car)

" The car of the detection range "(1) is a passenger compartment with the exception of such as on top of the instrument panel and luggage compartment



- √m アドバイス ------

- "The car of the detection range Even if there is a mobile remote control to ", the remote control is not detected to be in the following situations, you might prevention function confinement requests switch not working warning buzzer or a portable remote control does not work.
 - The battery of the mobile remote control are exhausted
 - Strong radio waves or noise mobile remote control I have received of influence
 - Contact mobile remote control and made of metal

Or have been, are or covered

- Where Ya the mobile remote control recessed

Such as in storage space

→ 5-59 page

(Instrument panel storage space)

→ 5-60 page

(Drink holder)

→ 5-62 page

(Other equipment)

- Mobile remote control of the instrument panel A front or sun visor, on the floor
- "The car of the detection range Even if there is no mobile remote control ", to be in the following situations are detected remote control, it might prevention function is activated confinement not working warning buzzer or a portable remote control request switch.
 - Even if there is a mobile remote control to the outside of the vehicle. It is too close to the door
 - On and load a mobile remote control of the instrument panel In the room

Security alarm (Alarm system)

Security alarm, and to lock the door in the request switch on the keyless scan entry or keyless push start-system vehicles, it will be set after about 20 seconds.

In the set state, keyless entry or is unlocked with anything other than the request switch (X), and Ru opened one of the doors, it tells the abnormality in the ambient operating alarm.

- The factory, < Alarm mode > It has become. In any < No alarm mode Please switch to>.
 - → 3-18 page (How to switch the mode setting)
- When operated erroneously alarm
 - \rightarrow 3-17 page (how to stop the alarm)

- ᠭᡢ アドバイス ――

- Security alarm is a function of generating an alarm under certain conditions. Function to prevent intrusion into the room does not have.
- During the set of alarm, please unlock the door always in the keyless entry or requests switch.
 When you unlock the door using the key, the alarm is working.
- And when you lend the car, when those who do not know the security alarm is driving, or well describes work motion, the alarm < No alarm mode Please switch to>. Operating the alarm by mistake, it will be a nuisance to the surroundings.
- Even if you set the alarm, Do not leave cash or valuables in the car. There is a risk of theft.

How to set the security alarm (alarm mode)

Please to lock the door in the keyless entry or requests switch. Security alarm indicator (1) blinks rapidly, the alarm will be set after about 20 seconds.

Set in the security alarm indicator will flash at about 2 second intervals.





- ��� アドバイス ────

- In order to prevent the operation unexpected of alarm, please do not set the alarm when there are still people in the car. The car of the person is unlocking the lock lever, an alarm even when you open one of the doors is activated.
- When you lock all the doors in the key or the lock lever, the alarm will not be set.
- When the timer lock function is activated, the alarm is automatically set. (No alarm mode Except for the time)
 - → 3-10 page

(Timer lock function)

How the release of the security alarm

Please to unlock the door keyless entry or requests switch. Alarm is released, security alarm indicator will be turned off.

How to stop the alarm

When operated false alarms, you can stop in the middle of the warning by the following do one.

ON

- The engine switch To
- Unlocking with keyless entry or request switch (equipped by type)

- √m アドバイス -----

- Even if you stop the alarm, and lock the door with a key-less entry or request switch, the alarm will be re-set state after about 20 seconds.
- Remove the lead battery terminal in the alarm set state or alarm activation state, alarm will stop.
 However, when you connect the battery terminals again, the alarm will be activated.
- Alarm even when completed, and opened one of the doors without the release of the alarm, and the alarm is working again.

If the alarm has been activated at the time of parking

Alarm due to theft<u>But</u> If you operate, the handle down gin switch If you, security **Davi** indicator flashes in small increments between about 8 seconds, you Ri sounding room buzzer four times. Please check the inside of the car or not stolen.

Security alarm mode

< Alarm mode > And < No alarm mode > There are two modes. The operation of the alarm is as follows.

< Alarm mode > (Factory) together and very flashing indicator light flashes for about 40 seconds, will sound in the room buzzer for about 10 seconds intermittently. Upon completion of sounds indoor buzzer, horn will sound for about 30 seconds intermittently. Work Dochu also blinks security alarm indicator.

< No alarm mode > Alarm does not work.

How to switch the mode setting

In a state in which the security alarm is released, please switch in the next procedure.

<u>1</u>

2

Sit in the driver's seat, all the door Make sure that the waiting closed.

- If any of the doors are open, semi-door warning light will illuminate.
 - → 3-79 page (half door warning light)
- The lock lever (1) to unlock side (behind the direction of the car). And the Raitosui' switch to the position of OFF (2).





- The light switch of the above diagram is a typical example. It depends on the type of your car.
 - → 3-87 page (light switch)

Please be completed within 15 seconds.

<u>3</u> In addition to the position of the light Switch eagle, to return to the position of OFF. 4 carried out back and forth operation of this.



Four The lock lever (1) and the locking side (the car forward), to return to the unlocking side (behind Direction of the car). This operation 3 will perform round-trip.



When performing the procedure, the mode setting will change in the order in the following table. In addition, you can check the set state by the number of times of setting confirmation buzzer.



<u>3</u> Or not performed operation until the correct color, when you may not be within 15 seconds, the mode setting is switched Warazu, it does not sound setting confirmation buzzer. Please try again from the beginning.

Power windows

By equipment type

Engine switch At the time of, when you operate the power window switch (1), you can open and close the window.



 Switch of the above diagram is a typical example. It depends on the type of your car.

▲警告

- Power windows will open and close with a strong force. Please be careful not to pinch your hand or neck when closing.
- Please do not operate the power window switch and put your hands through the window. There is a risk that sandwich the hands and neck.

▲注意

When you open and close the window glass, please do not touch the glass. There is a winding write Murrell fear.



Because of the lead battery protection, please open and close the window when you are suffering from the engine.

When the housing is open only the rear seat window while the vehicle is running, a sound such as squeezing the ear may occur. This is a cormorant phenomenon Do not also to the change in air pressure around the window that is open, but this is not a malfunction. In the mouth, such as empty bottles, it is the same as the phenomenon in which sound is heard when the blows from the side. If you want to reduce this sound while opening the rear window is, there is a method such as the following.

- Front seat window also open.
- Ru changing the degree of opening of the rear seat window. For example, the window is a semi-open if fully open.

Window lock switch

Driver's seat de Ania That of the window Rocks switch

Lock When you press the side, passenger's seat /

You will not be able to open and close the rear window.

 When you release the lock <u>Can</u> Is, the window lock switch <u>Release</u> Press the side.



 Switch of the above diagram is a typical example. It depends on the type of your car.

▲警告

Please do not operate the power window switcher switch for children. Once your child is or is accidentally operate, there is a risk of serious injury. And we have put the child <u>Huang</u>, The window lock switch

Please.

- 。fm アドバイス -

Even when the window lock switch is in the position the position of the driver's seat window can be opened and closed.

Open and close in the driver's seat

You can open and close the window of each seat in the driver's seat.

 You open and close only while you are working with a window switch. The hand from the switch away strike, window will stop at that position. (Except for the auto Organization of the driver's seat window)



(1) driver's seat window switch

(With auto-mechanism) (2) the front passenger seat window switch (3) the right rear seat window switch (4) left rear seat window switch

 Switch of the above diagram is a typical example. It depends on the type of your car.

- Driver's seat window of the auto mechanism If you strongly operated the driver's seat window switch to fully open automatically even if you release the switch or hand from the auto mechanism is activated (Otodau down) or fully closed (auto-up). When you want to stop in the middle, do lightly in the direction of the operation the direction opposite.
- Depending on the type of car, there is no auto-up Organization is.
- Ofudi Rei timer function of the driver's seat window

Auto-up mechanism vehicles

LOCK

 operation seat Window is , D Njinsu Switch

 The For Nthe position
 ACC
 Or

Even after you (OFF), it is capable of opening and closing within 30 seconds.

– √m アドバイス ——

- In less than 30 seconds, and close to open the driver's door can not open and close the driver's seat window.
- While capable of opening and closing of the driver's seat window, the character of "AUTO" of the driver's seat window switch is on.

Prevention mechanism narrowing scissors

Auto-up mechanism vehicles

As a safety device in the driver's seat window, there is a prevention mechanism narrowing scissors. (The O-up mechanism non-equipped vehicles, there is no prevention mechanism narrowing scissors.)

 When to operate the auto mechanism is closed automatically, and that written more than predetermined load to the window by, for example, interleave the foreign matter, the direction is reversed to move the window, and stops a little open. (Overload detection method)

▲警告

Shape and hardness of the foreign matter is sandwiched, it is not overloaded detected by pinched Rekata might prevention mechanism narrowing scissors do not operate. Since there is a Re hyperemesis to receive a serious injury, please perform the open-close operation with extreme caution.



Prevention mechanism narrowing scissors, does not work in a state of continued increase can pull the switch. In addition, just before the closing as possible, there are areas that can not be detected scissors included. Tsuketekuda Sai careful not to pinch your etc. finger.

— ᠿ アドバイス ------

- A malfunction of the window, you may narrowing scissors prevention mechanism is activated, it can not be closed automatically. In this case, and hold up can pull the driver's seat window switch, you can be completely closed.
- Closing in automatic the window and rough road while the vehicle is running, shock or load is applied to the Wynn dough, prevention Organization narrowing scissors might be activated.

When the initial setting of the prevention mechanism narrowing scissors is required

Auto-up mechanism vehicles

The following cases, when the driver's seat window is closed automatically with not open automatically, prevention mechanism narrowing scissors will be no work. "The default way Read it to you ", please perform the initial configuration.

- When you remove the terminal of the lead battery
- When a lead battery up has occurred
- When you replace the lead battery
 - → 7-21 page (exchange the lead battery When conversion is)
- When you inspect and replace the fuse
 - → 7-23 page

3

(When the fuse has expired)



Prevention narrowing scissors mechanism is, please be sure to initial setting. In the initial setting is complete or, prevention mechanism narrowing scissors does not work island.

·ۥſ┉*アドバイス ―*

Even if the driver's seat window is no longer also can also be closed to open automatically, please perform the initial setting.

The default way

Please be performed in the following steps the initial setting of the prevention mechanism narrowing scissors.

Auto-up mechanism vehicles

1 Start the engine.



2 Continued on up pulling the driver's seat window switch, completely closed or to a window.

Four

As it continues pulling on the up more than 2 seconds to switch.

Five

Driver's seat window Make sure now can be automatically opened and closed.

 If even after repeated steps - many times the driver's seat window can not be automatically opened and closed, abnormality of the system will be considered. Sure to receive a check in the Suzuki service factory.

The front passenger seat, open and close in the rear seat

You can open and close only window of the user's desk.

- You open and close only while you are working with a window switch (1). When you release the hand from the switch, the window will stop at that position.
- When you are carrying a child, driver's seat

Of the door The window lock switch

- Lock Please in the position.
- → 3-20 page (Window lock switch)

3-22



Switch of the above diagram is a typical example. It depends on the type of your car.

ふ アドバイス –

When the window lock switch is in the position it danchot open and close the front passenger seat / rear seat Wynn dough.

Manual window

By equipment type

- Driver's seat, the front passenger seat, open and close in the rear seat For example, the window is a semi-open if fully open.
- You open and close by turning the handle on the door.
 - Closing direction reversed in left and right side of the vehicle Become.



- 3
- It does not open seat window after the commercial type vehicles.



Opening and closing of the window, please rather than carried out an adult, such a child. When the mistake your child clients to open and close, it pinched the body, such as limbs and neck assembly may result in serious injury.

- ۥᡗ┉ アドバイス ――

When the housing is open only the rear seat window while the vehicle is running, a sound such as squeezing the ear may occur. This is a cormorant phenomenon Do not also to the change in air pressure around the window that is open, but this is not a malfunction. In the mouth, such as empty bottles, it is the same as the phenomenon in which sound is heard when the blows from the side. If you want to reduce this sound while opening the rear window is, there is a method such as the following.

- Front seat window also open.
- Ru changing the degree of opening of the rear seat window.



After adjustment, please return the left and right selector switch to the position of neutrality.

3

Store

For example, when you park in a narrow place, you can defeat the Doami error behind the direction of the car.



- Door mirror of the above diagram is a typical example. It depends on the type of your car.

▲ 注意

- Please do not drive while defeated the door mirror. Can not the back of the check, there is a risk of accident.
- Door mirror has overhang from the vehicle body. Please be careful not to rely on the door mirror to the outside of the vehicle of a person or thing.

注 記

Electric storage door mirror instrumentation $\underline{\texttt{mp}}$ in the case of, <u>Ene</u> Jin switch $|\underline{ACC}|$ Or $|\underline{ON}|$ When in the position, please do not move the door mirror by hand. It will be the cause of the failure. Door mirror storage switch



You can use when.

Engine switch

• Each time you press the storage switch, switched to the position of storage and normal.



• Storage switch is in the normal position, the forward Doami error is car <u>Fall</u> And when to <u>, D</u>

The down Jin switchACCOrONWhen it is in, it will fall down toward the front of the doormirror is further car. When you return the Doami error tothe original state, please refer to the one-time storageoperation.

▲ 注意

- To move the door mirror, please note the following of this. Ri was injured, mirror will cause or to damage.
 - To the people and things I around the door mirror

To squid confirmation

- Do not touch the moving door mirror

▲注意

• When storing the door mirror in the storage switch, please do not back the door mirror to its normal position by hand. Because of the door mirror fixing is incomplete, there is a possibility that the move is Doami error in vibration or running wind during running. In that case, press the switch to the normal position, please be sure to secure the door mirror.

3

注 記

Cold at the time, such as door mirror is frozen, make sure whether it is possible to be moved by hand, please perform the operation of the storage switch. And repeat the operation while frozen, will be the cause of the failure.

→ 6-15 page (freezing of the door mirror)

- √m アドバイス *-*

 The door mirror by hand
 Move and , The engine

 switch
 ACC
 Or It was
 ON

 Occasionally, you may door mirror begins to move.

Remote storage mirror

By equipment type

When the door mirror storage switch is in the normal position, in conjunction with the operation of the lock and the engine switch on the door, the door mirrors automatically switches to store a normal position.

- When you lock the door at the request switch or Kiresue Suntory, it is automatically stored in the door mirror.
 - → 3-8 page (keyless entry)
 - → 3-11 page (mobile remote control)

- To its normal position <u>Modo</u> Sutoki is , The engine switch <u>ACC</u> Or on the is <u>CalN</u>d
 It is.
- The factory has been set to operate. Optionally again that we switch to stop.
 - → 3-26 page (remote storage mirror
 Of how the switching of stop-working)

注 記

Cold at the time, such as door mirror is frozen, please stop the function of the remote storage mirror. When the return Ri-click the operation while frozen, will be the cause of the failure.

→ 6-15 page (freezing of the door mirror)

-√m アドバイス —

- With facilities lock the door with a key or a lock lever, door mirror does not automatically store.
- To the position of the door mirror storage switch is

stored is there Time, e Down Jin switch

ACC Or

ON When you

To, door mirror does not return automatically to the normal position.

- When the timer lock function is activated, de-amylase will be automatically stored.
 - → 3-10 page

(Timer lock function)

 Stop-operation of the remote storage mirror switch of <u>Only</u> It was

Engine switch



In the state in the position, please switch in the next procedure.

1

Sit in the driver's seat, all the door Make sure that the waiting closed.

 If any of the doors are open, semi-door warning light will illuminate.

→ 3-79 page (half door warning light)

3-26

2

The lock lever (1) to unlock side (behind the direction of the car).



☆ a series of steps from to the next,

Please be completed within 15 seconds.

3 The lock lever (1) and the locking side (the car forward), to return to the unlocking side (behind Direction of the car). This 4 performs round-trip operations.



Press the operation unit of the portable remote control three times or be.

Four

- The operation unit is fine in either of the lock / unlock Rocks switch.
- Set during the switching, locking and unlocking of the door even if you press the operation unit is not performed.



72M20305

3

(2) the operation unit (lock switch) (3)operation unit (unlock switch)

When performing the procedure, the configuration of the remote storage mirror is will switch in the order in the following table. In addition, you can check the set state depending on the number of times of setting confirmation buzzer.



 <u>3</u> Or not peedformed operation until the correct color, when you may not be within 15 seconds, the setting is not switched, it does not sound setting confirmation buzzer. Please try again from the beginning.

Door mirror heater switch

By equipment type

Door mirror heater works in conjunction with the Riyadefo' guard.

→ 3-94 page

(Rear defogger switch)





Please do not put a cushion between the backrest and back. Not only do not take the correct driving posture, the effect of the seat belts and head restraints might not be sufficiently exhibited.

Adjustment of the front and rear position

It raised the slide lever (1) or or, move the seat back and forth.



74P30210

• Sheet of the above diagram is a typical example. It depends on the car of the type.

▲警告

Do not place objects under the seat. What is caught, there is a risk that the next Yonako occurs.

- · Sheet is not fixed
- Damage to the lithium-ion battery Ru passenger seat under the near of the energy charge vehicles
 - → 2-3 page

(For battery)

Angle adjustment of the backrest

- When the defeat to the rear, while pulling up the reclining lever (1), and press lightly with the back.
- When the cause forward, a little to float the back, Masu top up pulling the reclining lever.



 Sheet of the above diagram is a typical example. It depends on the car of the type.

▲警告

Do not tilt more than necessary the backrest. Seat belt and SRS airbag Gushisutemu is not the original effect exhibit can.

▲注意

When you operate the reclining lever away from the backrest, it may backrest fall forward up Ki caused suddenly or

It is. Please operate along with a hand or the like.

3