


## A/C Evaporator Temperature Sensor Test

1. [Remove the evaporator core and the evaporator temperature sensor.](#)
2. Dip the sensor in ice water, and measure the resistance between its terminals.
3. Then pour warm water on the sensor, and check for a change in resistance.

### EVAPORATOR TEMPERATURE SENSOR

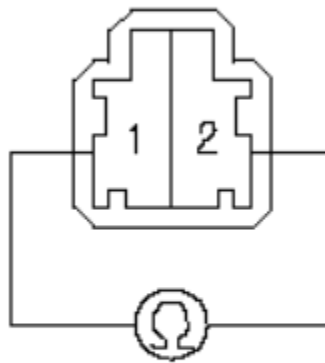

Terminal side of male terminals

4. Compare the resistance readings with the specifications shown in the graph; the resistance should be within the specifications.
5. If the resistance is not as specified, [replace the evaporator temperature sensor.](#)

