




Vezei


Owner's manual

Quick Guide	█
Safe drive	█
How to read the meter	█
Operation of part	█
Audio	█
Operation	█
Maintenance	█
In the case of the unlikely event	█
Material	█
Index	█

Visual Table of Contents

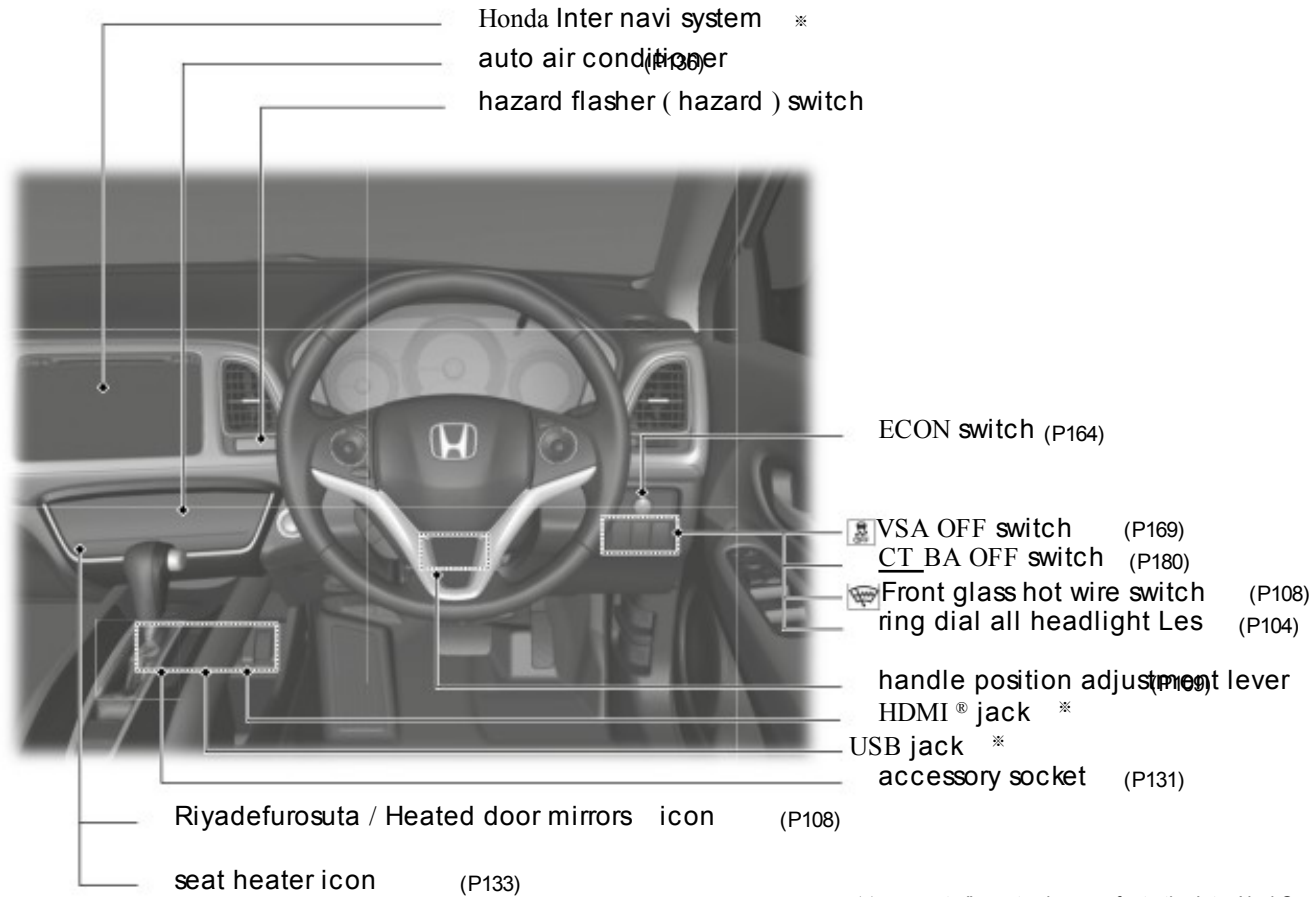


*: separate "Honda please refer to the Inter Navi System".

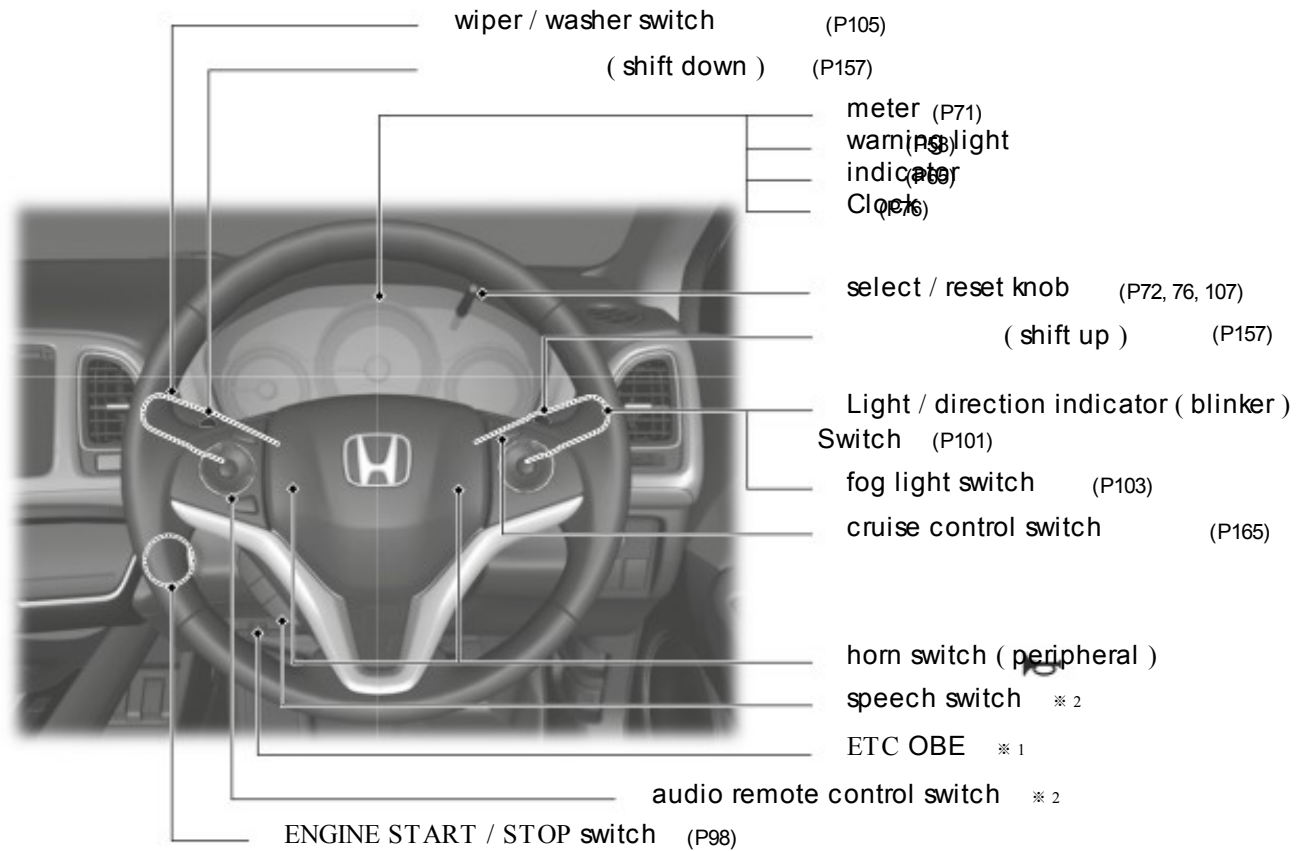


※ 1: separate " ETC please refer to the OBE. "
 ※ 2: separate " Honda please refer to the Inter Navi System ".

By type and options, this " " attaches when the equipment is different. One

Visual Table of Contents

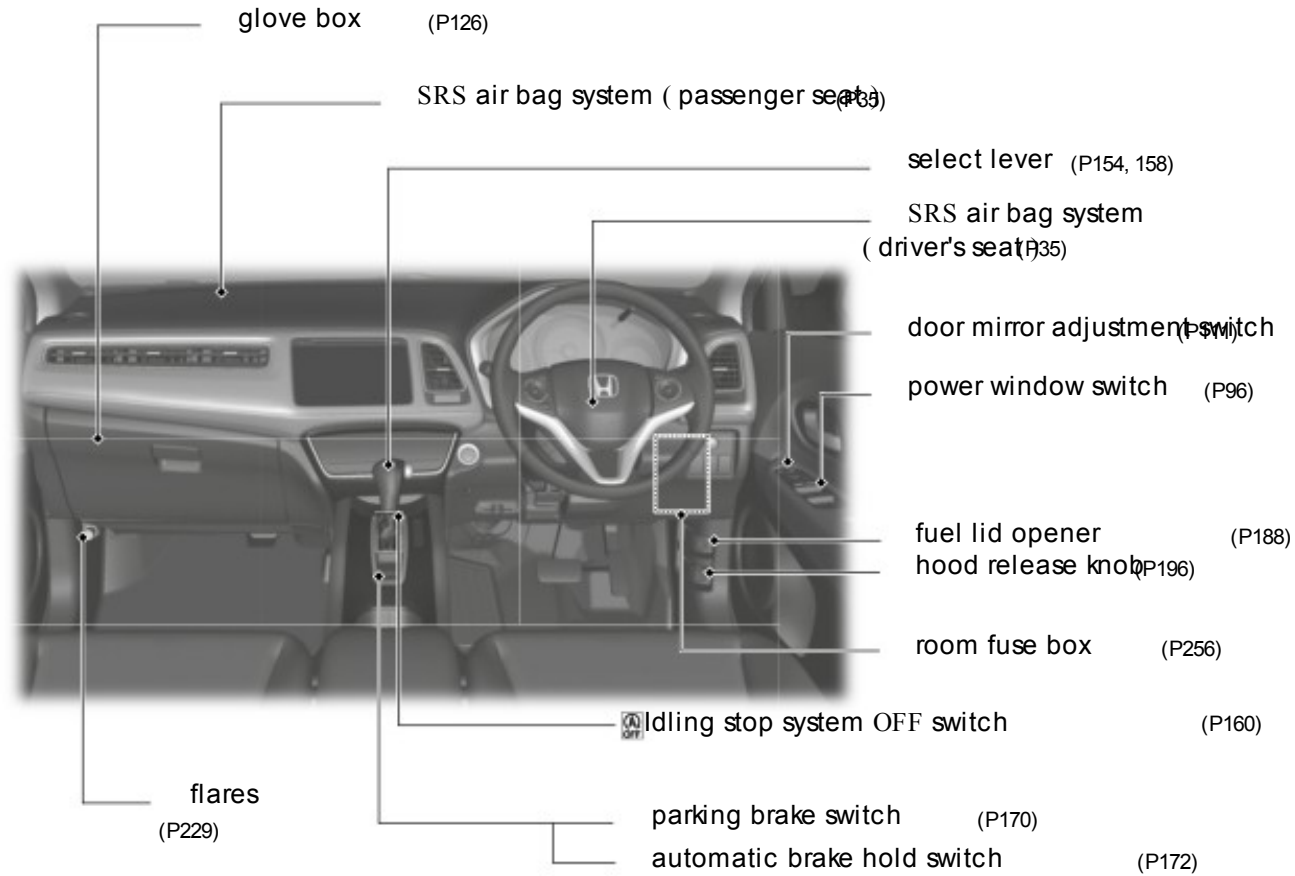


Two

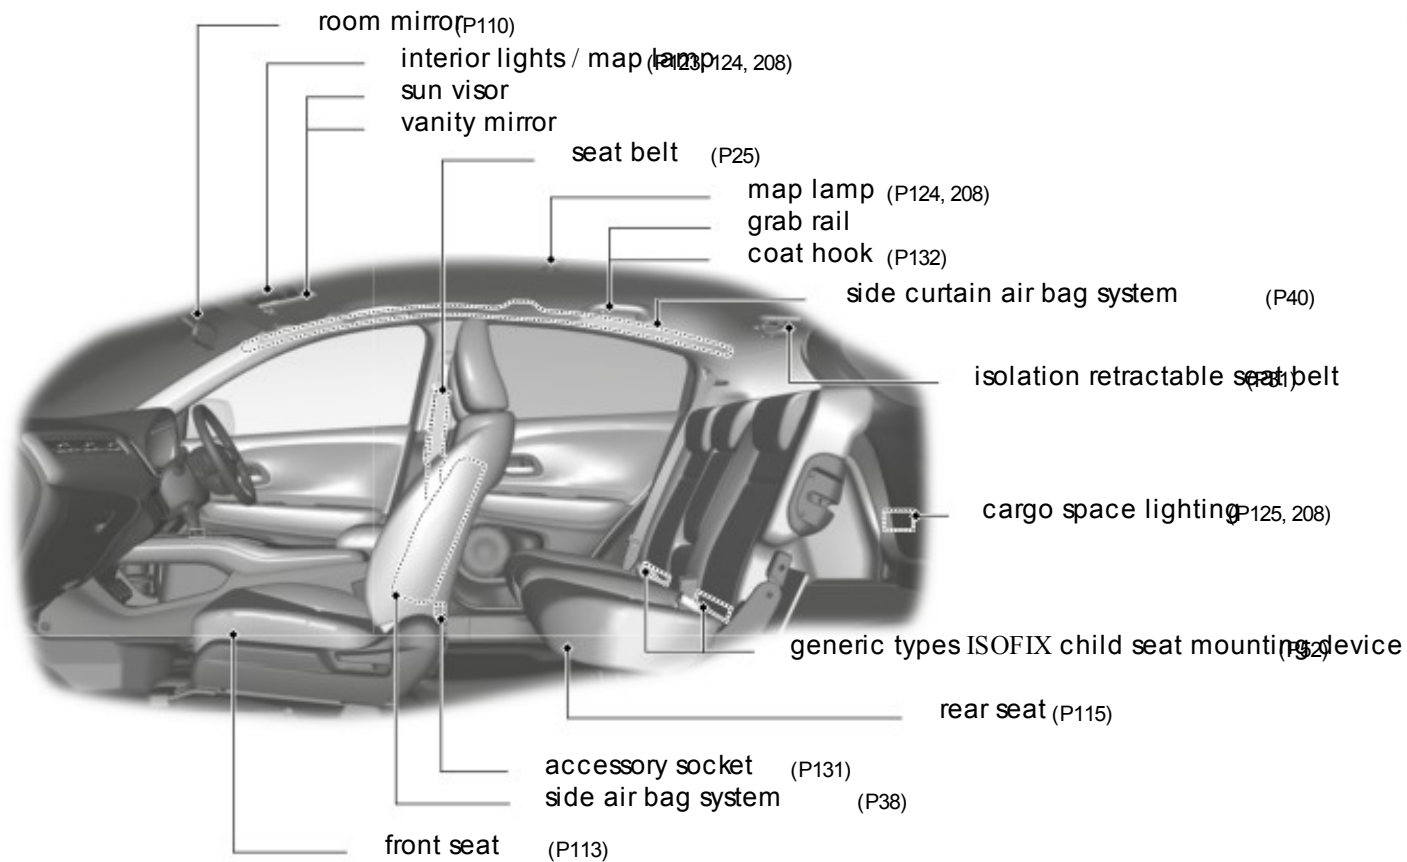

By type and options, this " " attaches when the equipment is different. Three

Visual Table of Contents

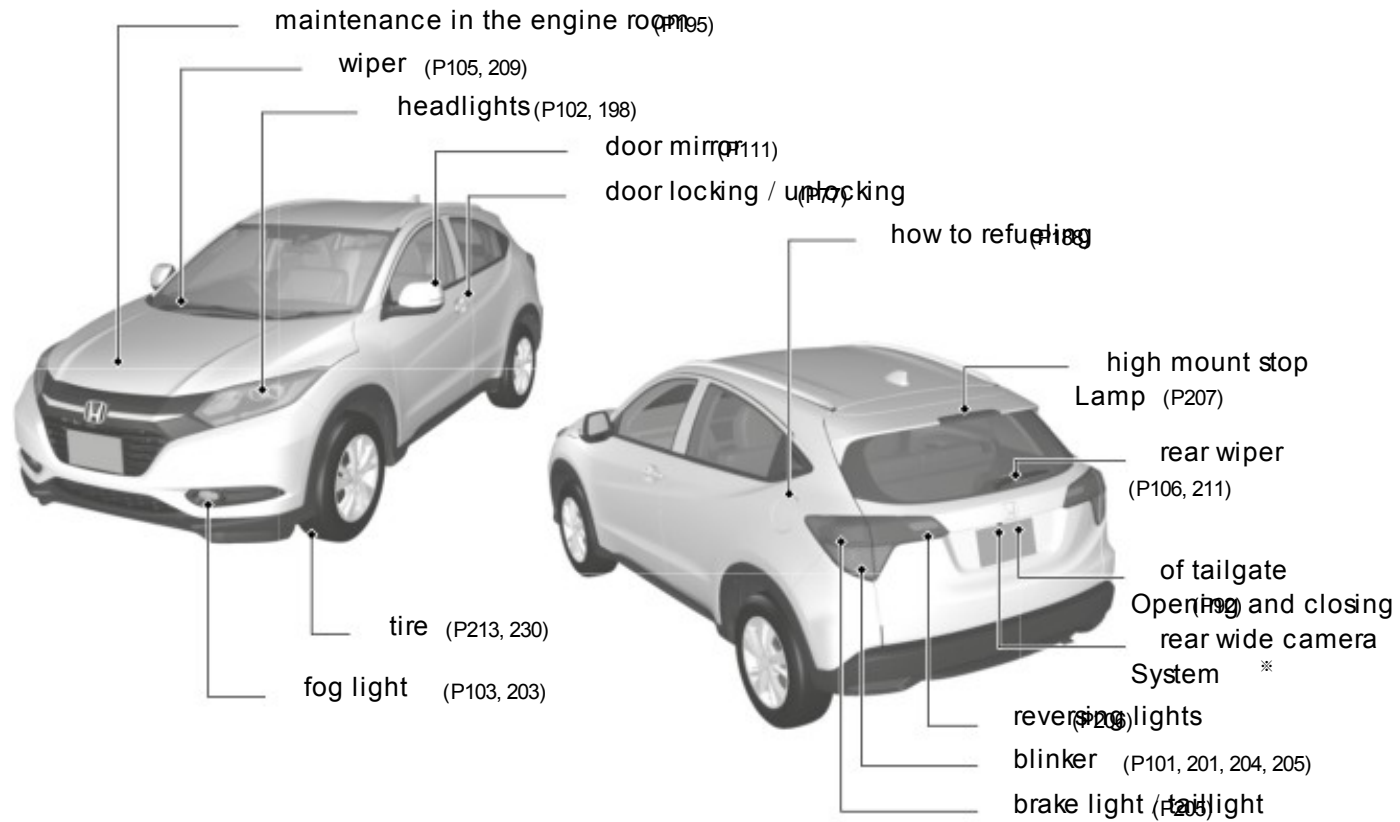

※: separate " Honda please refer to the Inter Navi System ".

Eco Assist System

Ambient meter

- I will display the status of the operation. Depending on the state of the driving operation, The color of the meter will change.
 - The color of the meter
 - Green : fuel saving state
 - Light green : a gradual acceleration and deceleration state
 - White : rapid acceleration / deceleration state
- The brake pedal, the operation method of the accelerator pedal, the mail
- The color of the ter will change.
- change of meter color of normal time
 - Power mode is OFF points ambient meter mode
 - When it is lit, select / and meter reset knob
 - I can change the color.
 - Select / color will change each time you press the reset knob.
 - White * → blue → purple → Pink → red → amber → yellow
- *: factory settings



ECON indicator

- ECON mode is ON Lights when the Will.



ECON switch (P164)



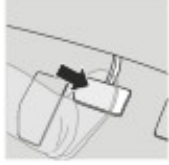

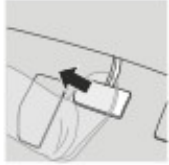

- If you press the switch, ECON mode is ON in it becomes fuel-saving control the island in accordance with driving conditions



By type and options, this " " attaches when the equipment is different. Five

Idling stop system

In order to improve fuel economy, it is a system that you can stop idling by the following procedure, the engine is automatically restarted.
 When you're idling, idling stop indicator of the meter (green) lights up. (P160)

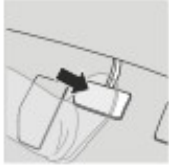Running condition	Operation	State of the engine after the operation
Deceleration	The step on the brake pedal and parked. 	 During engine operation
Stop	I keep stepping on the brake pedal. 	 Idling stop during
Takeoff	I release the brake pedal. 	 Engine is automatically restarted

Safe drive


(P22)



- seat belt in the correct driving posture
Please wear the door.
- The seat belt also certainly to passenger wearing.
- Pregnant women can compress the abdomen wearing the seat belt so that there is no harm to iodine.

Confirmation before starting the operation (P23)

- position of the front seat, headless before driving
The adjustment position-circling or the handle, the angle of the mirror such as You.

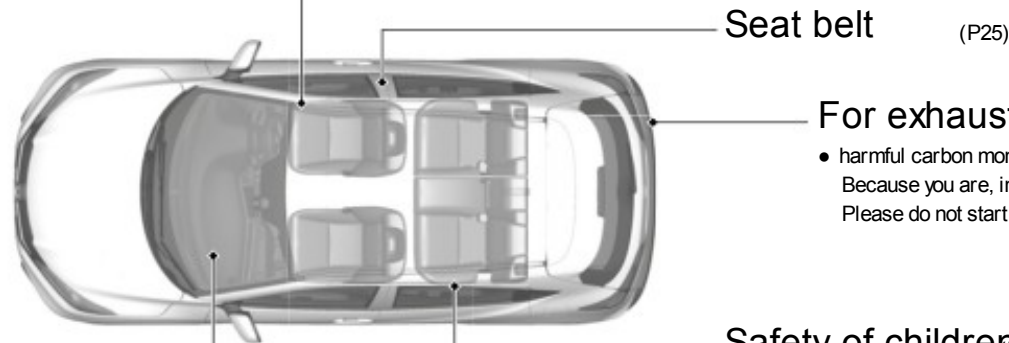

Seat belt (P25)

For exhaust gas (P56)

- harmful carbon monoxide contained in the exhaust gas of a car
Because you are, in an enclosed area such as a garage
Please do not start the engine.

Safety of children (P44)

- I can not wear a seat belt correctly
When you put the small children,
It should use your child seat
Have. For the safety of children, and tea
In order to attach to the rear seat
Please be only.



Air-bag (P35)

















- in the event of a collision of the event, I will mitigate the impact of the occupant.
In order, the air bag is equipped.


Seve

How to read the meter




Warning light indicator meter (P65) (P71)

Warning light / indicator

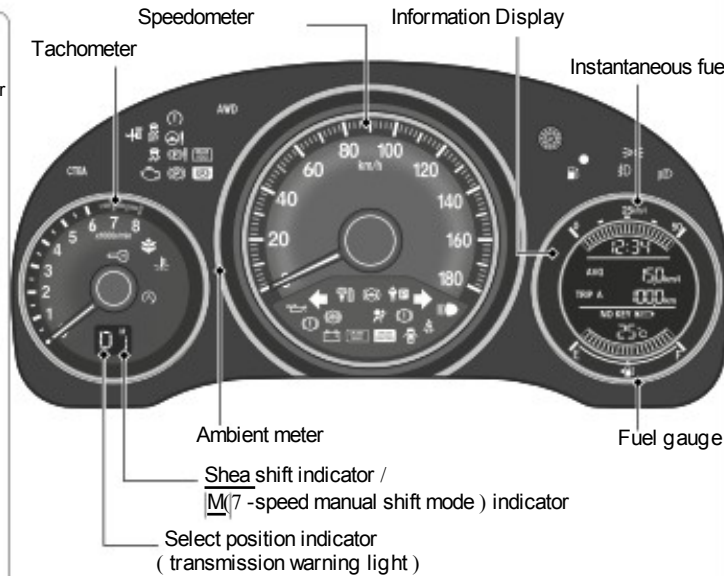


-  EPS system warning light
-  Security Alarm System operation indicator
-  Honda smart key System warning light
-  VSA OFF warning light
-  VSA warning light
-  AWD AWD system warning light
-  Automatic brake Hold system indicator
-  Automatic brake Hold indicator
-  Auto Light Control warning light
-  ECON indicator
-  PGM-FI warning light
-  Low water temperature indicator (blue)
-  High water temperature warning light (red)
-  Oil pressure warning light
-  Charge warning light
-  Select position Move warning light




 
















Light indicator

 -  High beam indicator
-  Fog lights indicator
-  Lights indicator

Warning light / indicator

-  Idling stop System warning light (orange)
-  Idling stop Indicator (green)
-  Starter system warning light

 Warning light / indicator


-  Direction indicator / hazard flasher
-  Cruise main indicator
-  Cruise control Indicator
-  Air bag system warning light
-  Immobilizer system Indicator light
-  Seat belt non-wear warning light
-  Door / tailgate opening and closing Warning light
-  Fuel level warning light
-  ABS warning light
-  Brake warning light (red)
-  Brake system warning light (Orange)
-  Electronic control parking Brake system warning light
-  Electronic control parking Brake warning light
-  Honda smart key Low battery warning light
-  Honda taking away smart key Warning light
-  Brake pedal depression shortage indicator
-  Handle operation indicator
-  City brake active System indicator

Eight

Operation of each part (P75)

I adjust the time (P76)

Honda Inter navi system vehicles without

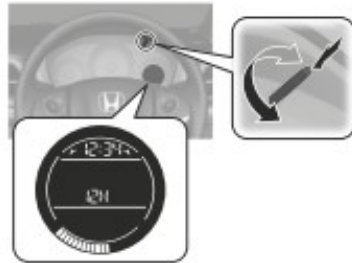

Honda Inter navi system vehicles

Honda watch Inter navigation system vehicles
Is, are you we use the information from the satellite
At, time adjustment is not required.


ENGINE START / STOP Switch (P98)

When you press the switch, the power mode is off river
You Ri.




Winker (P101)

Direction indicator (turn signal) switch

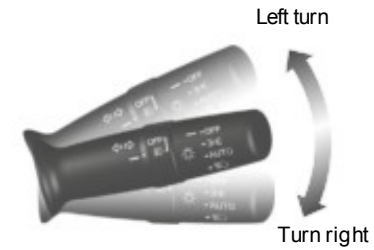

Light (P102)

Light Switch

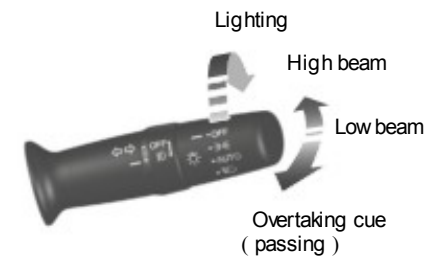

By type and options, this " " attaches when the equipment is different. Nine

Wiper (P105)


Wiper / washer switch



- OFF stop
- INT intermittent (when rainfall is less)
- LO slow (when the normal rainfall)
- HI high speed (when a lot of rainfall)


Door mirror (P111)

- power mode is ON when the mode, Doami I can adjust the angle or storage of error.

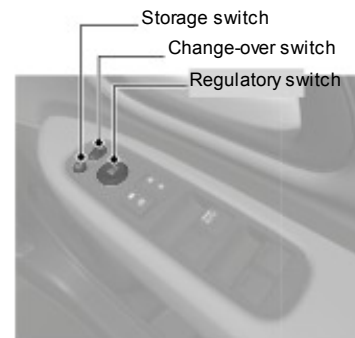

Power window (P96)

- power mode is ON when the mode, Wynn I can open and close of the dough.

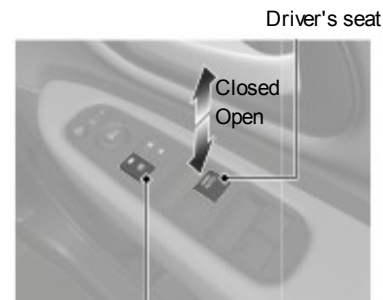

Power window lock button

- ON window of the driver's seat other than the non-operating
- OFF window all working

Adjustment of the handle position (P109)


- Pull up the handle position adjustment lever, Han I will adjust the position of the dollar.



Tailgate

(P92)


- tailgate, tailgate open graphics
You open it and press the switch.

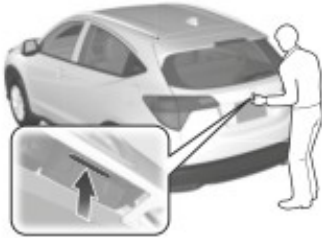

In the driver's door handle Unlocking

(P85)


- the driver's seat door, facilities and pull the handle on the inside
Door opens, even if you lock.

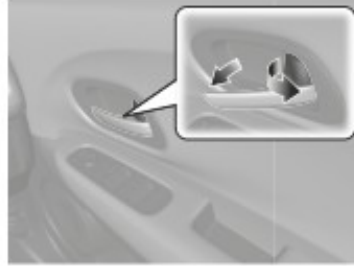

Elev

Air conditioner

- **AUTO** When you press, automatic air conditioning is activated.
- **ON/OFF** When you press, it will stop.
- To take a clouding of the front glass, **A /** I press.

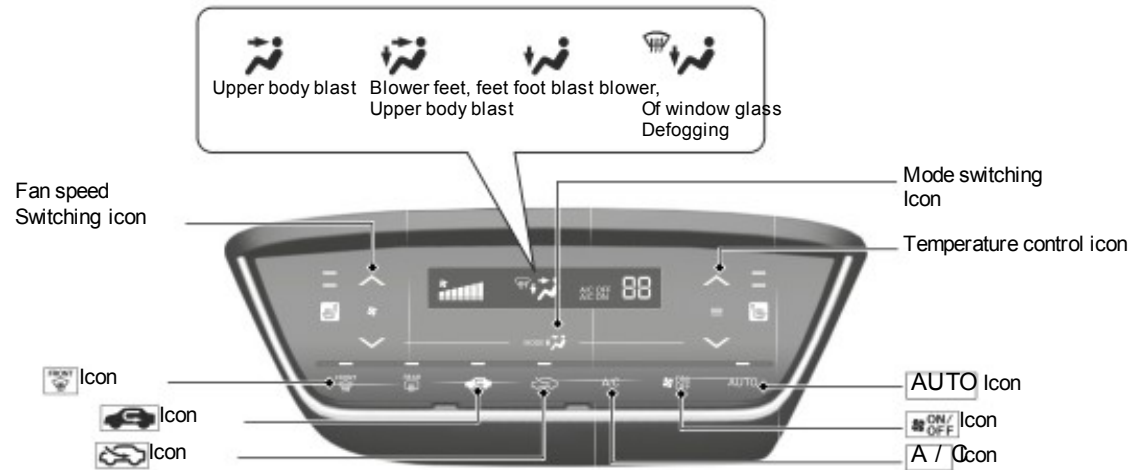

Operation



Automatic car

(P154, 158)

- the selector lever **P** Put in, start the engine while stepping on the brake.

Select lever

Operation of the select lever

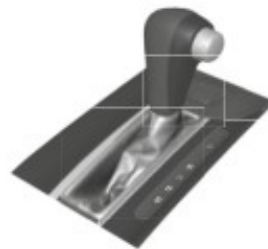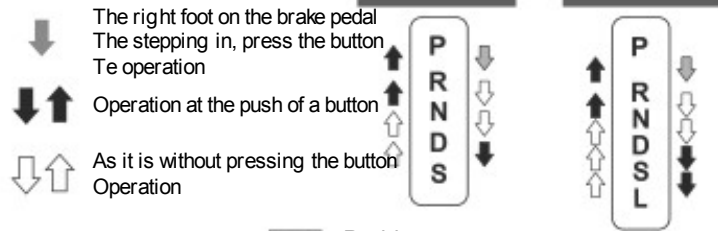

- P** Parking
Starting the engine or parking
- R** Reverse
The retreat a car
- N** Neutral
Idling state
- D** Drive
• normal running
• temporarily 7-speed manual shift mode
And when you want to
- S** Drive (S)
• When traveling downhill and uphill
• 7-speed manual shift mode When you want to
- L** Low
When strong engine braking is required

7-speed manual shift mode

- Pull the shift switch without releasing their hands from the steering wheel, the shift operation freely

The select lever **S** When the

- Pulling the shift switch on the handle, 7 to speed manual shift mode Will. **M**(7-speed manual shift mode) indicator is lit, Shift indicator Gear position is displayed on the indicator.

The select lever **D** When the

- Pulling the shift switch on the handle, a temporary 7-speed manual shift It becomes mode. Gear position is displayed on the shift indicator.


M Indicator light

- shift switch
(shift down)

+ shift switch
(shift up)



Shift indicator

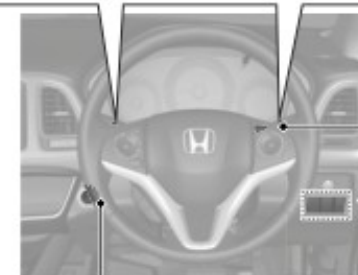



CRUISE
Switch

VSA OFF
Switch

ENGINE START / STOP

By type and options, this " " attaches when the equipment is different.

VSA (P168)

- VSA and, suppressing the change in the behavior of rapid vehicle. It is a device that you are trying to.
- VSA stop (OFF) To state,  The I press the buzzer until a "beep". Re-Time, use it (ON) to the  The Department and the "beep" the I press Heather until you hear.
- automatically when you start the engine VSA is ON you will.

CRUISE switch


(P165)

- Cruise control, such as highway When driving at a constant speed, the accelerator pedal Stepping It is a device that maintain a constant speed even if the monarch.
- cruise control and use a Lumpur when not for Is, for safety CRUISE Press the OFF Please set to.

I put gasoline (P188)


Specified fuel : regular unleaded gasoline
Regular Bio-mixed gasoline (E10 / ETBE22)
Tank capacity : 40 liters

- a** Pull the fuel lid opener, open the fuel lid.

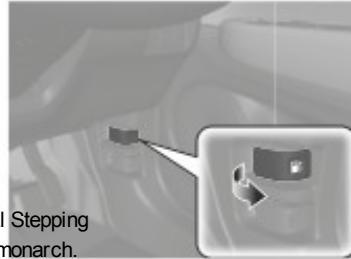


- b** Turn the knob slowly
I open the cap.

- c** or the holder of the cap
Kick

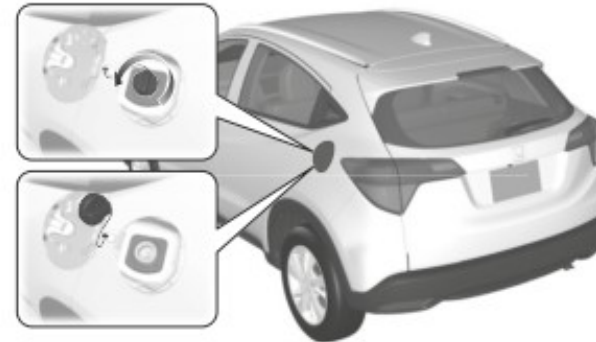

Maintenance

(P192)

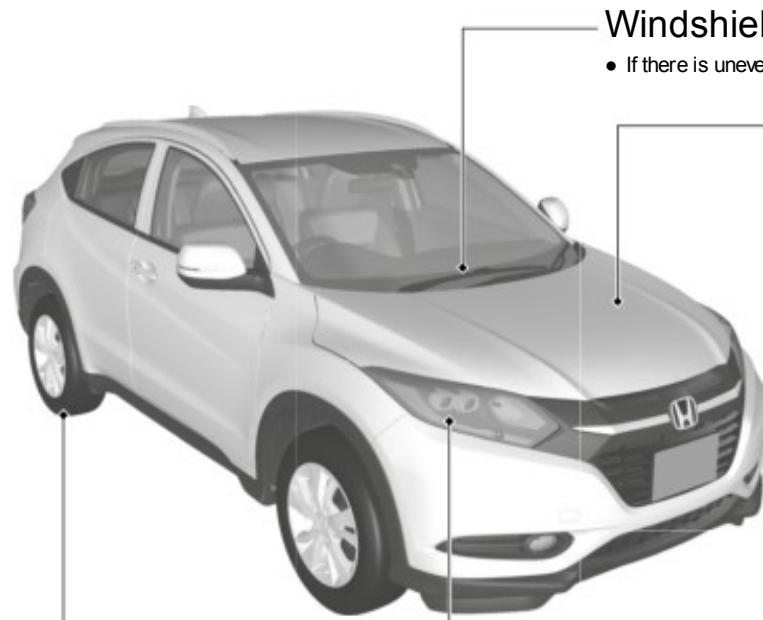

Windshield wiper blade

- If there is uneven wipe, replace the wiper blade rubber.


Engine room

(P195, 197, 248)

- I do supply cooling water, the washer fluid.
- I will check the battery.

a I pull the hood release knob on the driver's seat feet.

Bonnet release knob

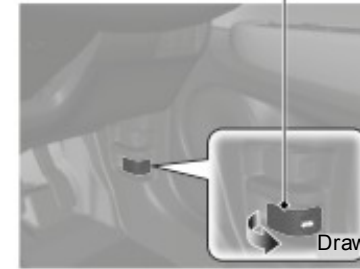

b to open the hood by pressing the lever.



Tire

(P213)

- I inspect tire, the wheel.
- In the snowfall region, snow tires, You need tire chains.

Light

(P198, 227)

- headlight, fog light bulbs, tape
Line replacement or inspection of such Ruraito bulb
There are.
- information about replacing the light bulb, "Maintenance"
Please refer to the.
- For information about replacing the fuse, and place of the event "
Please refer to the "in the case. (P260)

By type and options, this " " attaches when the equipment is different. Fifteen

In the case of the unlikely event

Punctured (P230)

- stop in a safe place, in the puncture repair kit And emergency repair.



Warning light is lit (P249)

- Check the details and follow the instruction manual Please.




Engine does not start (P242)

- I thought the battery up. Rescue vehicles And start the engine by using the battery You.



I was blown fuse (P253)

- The fuse box in the engine room and the room Nests. Take the fuse is blown You recombination.

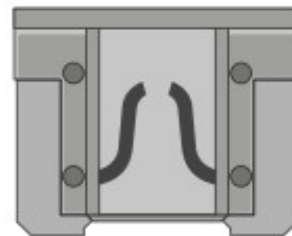

Overheats (P248)

- and stop in a safe place, no steam out Please open the bonnet if.



I want to tow (P261)


- Please ask the professional always. The cease Pictorial 4 when it is towed while grounding the wheel , Please follow the instruction manual.



When this is


Q ENGINE START / STOP wamo of Soil **OFF** Accessories from mode It is not the Mode

A • handle or not locked ? While turning to the left or right handle, ENGINE START / STOP and press the Have.



Q ENGINE START / STOP wamo of Soil **OFF** not a mode

A • the select lever **P** It became a position other than Do not you ?




Q Once you've stepped on the brake pedal I was rattling and vibration

A When I stepped on the brake pedal, the pedal is Kotogaa wiggle You Ri. This ABS not a malfunction phenomenon when is operating. As it is, please continue to depress the brake pedal strongly.

Q Rear door can not be opened from the inside of the vehicle

A • the position of the locking Do not you become ? Open from outside the rear seat door, Child The position of unlocking the knob of the proof , Please.

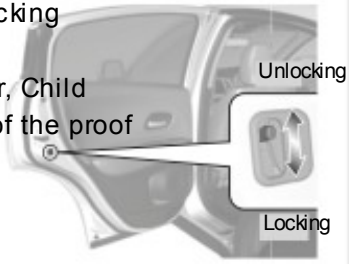

Q And unlock the door with keyless entry. It is locked to such should have been

A

- keyless entry, Honda Smart
- After you unlocked with a key, about 30 Sat in seconds
- If it fails and A, the tailgate
- Will be locked again automatically.



Q Buzzer sounds and opened the driver's door. That

A

- the power mode OFF Do not have the other modes ?
- Do not forgetting to turn off the light ?
- If you open the driver's door to stop idling during "Pippi~tsu Beep ... I will be. "

Q Buzzer comes to traveling

A

- Do you wear a seat belt passenger seat and the driver's seat ?

Q And press the parking brake switch. Parking brake is released even to Can not

A

- Are you operate the switch by stepping on the brake pedal ?

Q And the parking even stepped on the accelerator pedal. Do not be released in the automatic brake. Have

A

- Do you wear a driver's seat belt ?
- Do not forget to select lever, **[P]**, **[N]** Do you become other than ?

Q Metallic When you press the brake while driving. Friction such to

A

- There is a risk that is used to limit the brake pad is worn
- You. Honda please have it inspected at the dealer.

Q The pre-to regular gasoline car specific. Premiums (high-octane) gasoline use. Is it okay to ?

A

- You can also want to use your premium gasoline, but this place
- It does not if, engine performance the original change significantly.

View Safety

The way around "that there is a possibility of other people and the the as described using the display of the following. Along with, I have been described in the following display. These No is important At, please read firmly.

d	If you do not follow the instructions, death or serious Those that lead to injury Na
w	If you do not follow the instructions, death or serious Things that can lead to injury Na
c	If you do not follow the instructions, mosquitoes injured That there is a potential

Other displays

Advice
advice and to prevent that the car may be damaged or malfunction, environment
What you need to observe for consideration to.

For service diagnostic recording device

The car computer for controlling the system is installed
It has been, and record data as the contents of the next.

- fault diagnosis information of the airbag system
- Information about the operation of the air bag
- State of the power transmission mechanism
- operating conditions

Honda and Honda third party who has commissioned, data that has been recorded

Diagnosis and technical Honda for research and development of the vehicle, get,

You may want to use.

In addition, voice and video conversations, etc. are not recorded.

Disclosure of data

Honda and Honda third party who has commissioned, the data that
has been acquired,
Never, except in the following cases, disclosure to third parties, to
provide.

- If there is consent of the user or owner of the car
 - If you are based on the request that the court order, etc.,
enforceable
 - For performing statistical processing, so that it can not be a
specific car or user
- When providing the research institutes, the data processed

Table of contents

2 safe drive P.22				Safe drive P.22
For safe drive at 23	Seat belt 25	Air bag 35	Safety of children 44	
Risk of exhaust gas 56				
2 How to read instrument P.57				How to read instrument P.57
Indicator and warning lights 58	Information and display meter 71			
2 operation of each part P.75				Operation of each part P.75
Time settings 76	Door lock 77	Tailgate 92	Security system 94	
Window 96	Switch of the handle around 98	Mirror class 110		
Sheet 113	Interior lights / Indoor Equipment 123	Air conditioning 135		
2 audio P.142				Audio P.142
Audio equipment 143				
2 operation P.144				Operation P.144
Before the operation and 145	Operation 147	Brake 170	Parked 185	
Rear wide camera system 187	Lubrication 188	Remodeling and accessories 191		
2 maintenance P.192				Maintenance P.192
Before maintenance 193	Engine room 195	Bulb 198	Wiper 209	
Tire 213	Keyless entry / Honda smart key 218	Caring for air conditioning 220		
Cleaning 222				
2 In the case of emergency and P.228				In the case of an unlikely event P.228
Tools, flares 229	Pump 230	Jack 240	Engine does not start 242	
Jump Start 245	Select lever does not move 247	Overheating 248		
Warning lamp lights up / blinks 248	Use 253	Towing 261		
Tailgate does not open 264				
2 documents P.266				Materials P.266
Specifications 267				Index P.269

Please note that in some cases due to changes, such as the specifications of the car, vehicle does not match the contents of this book.

Safe drive

In this chapter, important information necessary for safe driving has been described.
Please read carefully before you start driving, and to ensure the safety of the passenger and driver
Please.

For safe drive	23	Safety of children	44
Seat belt		Safety of infants	45
For seat belt	25	Safety of older children	54
Wearing of seat belts	28	Risk of the exhaust gas	
Inspection of the seat belt	34	For carbon monoxide	56
Air-bag			
Type of air bag	35		
SRS air bag	35		
Side air bag	38		
Side curtain air bag	Forty		
Air bag system warning light	42		
Cleaning the air bag	43		

22

: by type and options, equipment is different.

Checklist for safety

For safe drive, please check the following items before driving.

- Door, tailgate or are completely closed ?
 - u that all doors, the tailgate is closed completely, it is locked correctly
Please check the.
2 locked in the car / unlocking P.85
- Are you adjust the seat position to a position comfortable to drive ?
 - u so that they take a driving posture correct, continue to the adjustment of the headrest and the seat position
Please.
2 front seat P.113
- Also seat passenger, or are adjusted to safety is maintained ?
 - u please lower the seat to the position as far as possible from the dashboard.
2 front seat P.113
- All occupants or wearing the seat belt correctly ?
 - u I will make sure that all passengers and the driver is wearing a seat belt correctly
Please.
2 seatbelt P.28
- Such as an air bag system warning light has not lit ?
 - u Please read in advance a description of the air bag, such as the location of the seat
Please adjust the.
2 airbag P.35
- In order to protect the safety of children, to wear a seat belt or child seat
Dolphins ?
 - u If the children are passengers, Chai depending on the height, weight and age of children
Please do to ensure safety, such as seat belt and Rudoshito.
2 safety of children P.44

1 Checklist for safety

Door / tailgate open warning light is lit

If door not completely closed, the tail

There is a gate.

The re-tighten again correctly door, the tailgate

, Please. "Door / tailgate open warning light "is

It is turned off and will return to the normal state.

2 door / tailgate open warning light P.61

Cheap
All
I
Do
La
Lee
Break

I continued on next page

23

- When you park on a slope, the parking brake, the select lever
Are you ?

 To

Cheap
All
I
Do
La
Lee
Breakfast

u has the effect to the Chock the tire further.
2 shift operation page 154 , 158

Seat belt

For seat belt

Seat belt, a safety device to ensure safety by fixing the body to the seat is.

■ three-point seat belt

It expands and contracts according to the movement of the body, strong belt and isoshocked locks automatically Be.

Three-point seat belt is equipped with all seats.

■ wear a seat belt

Upon wearing of seat belts, please be aware of the following.

- in the correct driving position, the driver must wear a seat belt
- Wear a seat belt be sure to passenger
- When you put a small child that can not wear the seat belt correctly, it always Use the child seat
- 1 the seat belt of this 2 are not used in more than
- Do not attach the slack in such a clothespin and clip on the belt

1 for seat belt

W

All occupants are properly Always wear seat belt
To shocked locks automatically
If you do not wear a seat belt properly, air
Bag be equipped, and upon impact
You can receive a serious injury, death in the
worst case
There is a possibility that it may lead to.

To maintain the correct posture while riding.
If you do not sit in the correct position, when you
crash
Risk of being injured in will be higher.

It had an accident in the state of wearing a seat belt
When, Honda received a check in the dealer, and belt
But if you are not damaged or does not work correctly
, Please replace the belt.

Cheap
All
Do
La
Lee
Breakf

I continued on next page

25

■ seat belt reminder

Cheap
All
I
Do
La
Lee
Breakfast



The power mode ON or when the mode, run
When the line, a sheet of the driver's seat and the assistant driver's seat
Seatbelt Mai until you wear a belt
Nda is activated, you know your in the warning light and buzzer
Will not.


1 seat belt reminder

- do not wear a front passenger seat belt or the driver's seat
When the vehicle travels on, the buzzer stops when the stop
You. Furthermore, a certain period of time even when the
buzzer is traveling when it exceeds.
- When you place your and luggage in the passenger's seat,
the buzzer sounds warning light flashes by detecting the
weight cause.
- cookie or place those petite and child in the front passenger
seat. The use of such tion, an occupant sensor
May not operate properly without detection.
- the select lever When placed in the retreat position
Since the chime of 置警 report device is, Shitobe
Warning buzzer of belt non-wear will not be heard.

■ seat belt pretensioners

For greater safety, the seat belt pre-tensioning the front seat
I am equipped with a toner.

Seat belt pretensioners, and sides before a certain direction more shocked from
It is a device that draws seat belt automatically and that, to enhance the constraint effect.

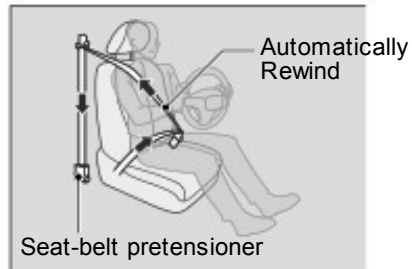

1 seat belt pretensioners

C

Removal of the device, minute pull seat belt
And will not be such a solution.
It will cause failure or malfunction.

Seat belt pretensioners, working once
Then, it can not be used.
The seat belt pretensioner by the collision
Air bag system warning light is lit when activated
Will.
When the collision, Honda receives inspected dealer,
Please replace the case of working already.

SRS seatbelt pre-tensioning and air bag
Toner does not work at the same time necessarily.

Side curtain air bag equipped vehicle
By the collision from the side, the seat belt Purite
Nshona is activated.



Cheap
All
I
Do
La
Lee
Break

: by type and options, equipment is different.

Wearing of seat belts

■ three-point seat belt

Cheap
All
I
Do
La
Lee
Breakfast

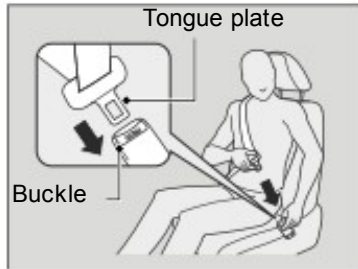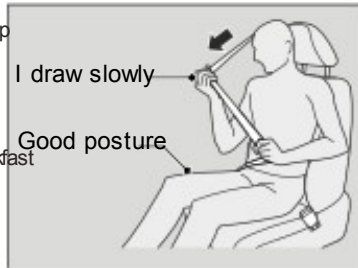

1. I sit in the seat with the right attitude.
2. I draw slowly seat belt.

3. I insert the tongue plate into the buckle.
 - u At this time, scratched and twist the belt
 - I note the Riganai so.

One wearing a seat belt

C

Or through the bottom of the arm, shoulder belt in
 No back of the neck
 If you do not wear a seat belt correctly, the
 original function of a collision or the like, it does not
 Day. It is not possible to perform its functions.

Hit the armrest to the seat belt when worn
 Not apply.


Function of the seat belt in the exercise at the
 time of the event
 scratches, fear bear serious injury There
 Be.

To remove the seat belt, and red of the buckle
 Of PRESS Please press.

At that time, the base so that the belt is fully retracted
 Please have your hands on the belt.


Order to function well the seat belt, back
 Foreign matter in the interior of the automatic winding up device
 Please do not put.

The Do not disassemble the seat belt, remodel
 Have. There is a possibility that it may not operate properly.

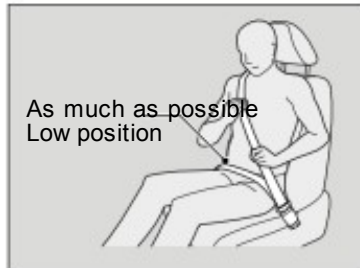

4. as low as possible the position of the hip, the belt
I fit as consuming.
5. Pull the belt buckle is fixed
I want to confirm that is.


The rubber buckle of the seat belt of the rear seat
Please do not remove from the band.
Buckle and Sea at the time of such seating arrangements a
You may fall under the cushions.

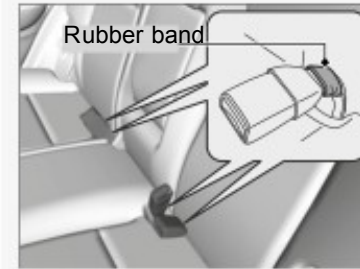

Cheap
All
Do
La
Lee
Break

■ height adjustment of the shoulder anchor

Cheap
All
I
Do
La
Lee
Breakfast

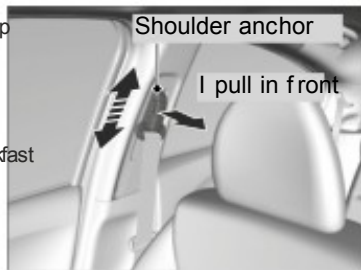

Seat belt in the front seat, the sitting height
At the same time, adjusting the height of the shoulder anchor
Please to section.

1. piled the release button of the shoulder anchor
Nde, pulling, and up and down the anchor
I move on.
2. Release the release button at the appropriate
I will fix the Dah anchor.



1 height adjustment of the shoulder anchor

C
After adjusting, shoulder anchor Kata surely
I Check that the component is constant.

For added safety, the shoulder belt from the shoulder to the
chest
Please make sure that you are taking.

With the Seat belt the neck, adjust by lowering
Please.

■ isolation retractable seat belt

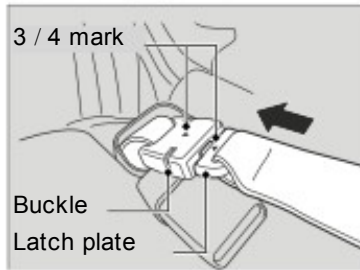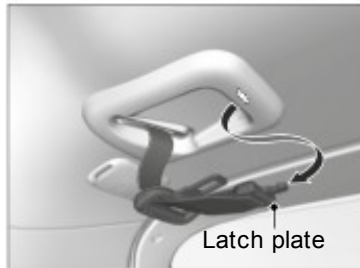


1. latch the seat belt from the fixed part of the ceiling I remove the plate.

2. Pull out the latch plate, 3 mark with I plugged into the buckle is. u of the latch plate 4 and buckle mark Of 3 Insert the combined mark.

3. I sit in the seat with the right attitude.
4. Grasp the tongue plate, pull slowly Put out.


1 separated retractable seat belt

When to separate and houses the seat belt, Tan The Gupureto 3 buckle is marked Is inserted into the groove of the lens, disconnect the latch Plate.

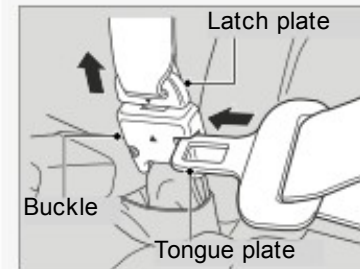

Cheap All Do La Lee Breakf

I continued on next page

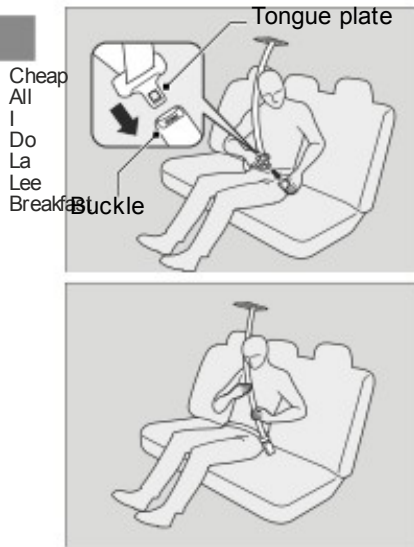


5. I insert the tongue plate into the buckle.
 - u At this time, scratched and twist the belt
 - I note the Riganai so.

6. either as low as possible the position of the hip belt
Fit to mow.
7. Pull the belt buckle is fixed
I want to confirm that is.

■ how the seat belt wearing of pregnant

When you are pregnant is to passenger or driver, in order to protect the baby and Please wear a three-point seat belts at all times.

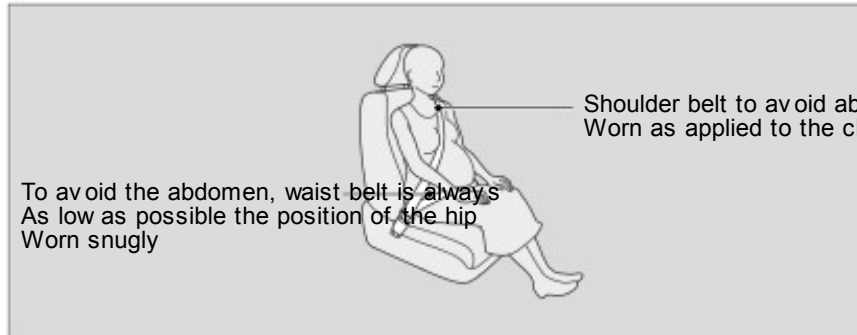

1 way of seat belt wearing of pregnant

C

Seat belt during pregnancy , check with a doctor To. When an emergency , and squeezed the abdomen, chest and shoulder, you may be subject to.

Cheap All Do La Break

Pregnant women are sure to note the following points:
 Have. The front air bag in the event of collision Therefore, the hazards involved and baby himself injured Of insurance will be reduced.

- The causing the upper body, interfere with driving when you drive reduce as much as possible behind the sheet in the range
- when you sit in the passenger seat, the seat as much as possible power back


Inspection of the seat belt

In order to safe use of seat belt, you should be doing regular inspections Have. Check point of inspection are as follows.


- full to pull out the belt of all, fray, crack, sear, and Setsu pickpocket
- Whether there is ?
- buckle or be securely fixed ?
- belt is either wound up smoothly ?

Cheap
All
I
Do
La
Lee
Breakfast

Anchor point of the seat belt

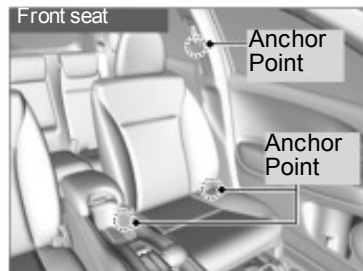

When replacing the seat belt, shown in Fig. It should be using the anchor point is Have. The three-point seat belt in the front seat Has been used.

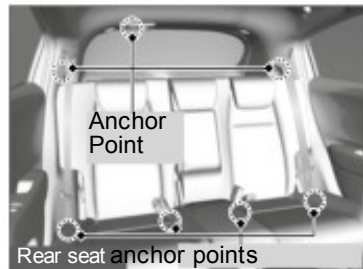

It used the three-point seat belts in the rear seat Has been.

1 inspection of the seat belt

If the belt is not taken up smoothly, base it sure that the belt is not dirty Have.

The wound smoothly belt is dirty

There is no case. First, there is dirt on the belt

Please make sure no. How Dropping the dirt

You may return the original hunger.

Belt is not damaged and does not operate correctly If, please replace the belt.

Air-bag

Type of air bag

The air bag, power mode is ON received the shock caused by the collision is the body of the mode
 The bulge and kicking, driver and lets mitigate the shock experienced by the passenger
 There are the following types of the air bag, varies depending on the operating co
 You.

- SRS air bag : forward air bag in the front seat
- Side airbags : horizontal direction airbags front seat
- side curtain air bag : air bag attached to the ceiling on both sides of the window

SRS air bag

I am attached to the driver seat and the passenger seat. By the collision from the previous direction, SRS airbag
 You can mitigate the impact to the head and chest of the passenger's seat and the driver's seat.

SRS: sub-flops re main emissions data Lumpur Les graphics To Le Yi down To She graphics te -time (Supplemental Restraint System)stands for, meaning of auxiliary restraint seat belt.

■ location

The center of the steering wheel, passenger side to the dashboard driver's side SRS airbag is stored
 Has been. Both " SRS AIRBAG are displayed as ".

■ Mechanism of working

SRS airbag to operate, when it collided with the forward shock above a certain
 Be. At this time, the sensor detects a sudden deceleration due to impact, control Y of
 The passenger seat and the driver's seat by the action of knit SRS air bag inflates.

W

Seat belt is always in the air bag equipped
 vehicles.

Airbag cis to reduce impact
 In tem, it is an auxiliary restraint of a seat belt.

Even an air bag system vehicles, the 必
 And be sure to wear a seat belt correctly without

Have. If you do not wear a seat belt, collision
 Effect of the airbag is not

Danger of serious injury or death is high
 graphics te -time (Supplemental Restraint

C

Immediately after the air bag is inflated, in
 Do not touch.

Components of the air bag is is hot
 To prevent injury , an unexpected eyes, such as
 THERE are.

Air bag inflates at a very fast rate.

By contact with the air bag, scratches, burns,
 Is subject and bruises.


Cheap
 All
 I
 Do
 La
 Lee
 Break

: by type and options, equipment is different.

I continued on next page

SRS operation of the air bag

Cheap
All
I
Do
La
Lee
Breakfast

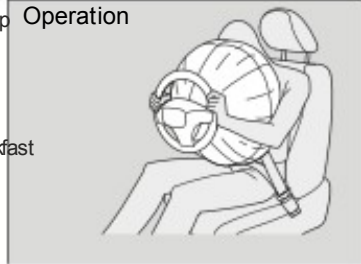

When the collision from the front direction, the
Restraining the torso and lower body of employees
But I will protect the chest and head.

Obstructs the driver's view, the steering
Out of the way, SRS airbag Rise
I deflated immediately after beating.

SRS air bag will operate in the following cases.

- 20 ~ 30 km/h at a speed of more than, and true to the concrete wall that has been fixed very thick
Equal to or upon impact from the front, when impacted more
- about the front left and front right of the vehicle 30 when subjected to a strong impact from the direction of the degrees of less
Those that can absorb the shock (one that modified as guardrail or car) field having some with the
Case, the vehicle speed when operating will be higher.

You may in the following cases, and operates when it receives a strong impact to the vehicle bottom.

- when it collided with the projection of the ground or curb
- when it fell into a deep hole and groove
- When you fell from a high place

1 SRS operation of the air bag

W

Head or with a hand on the instrument panel
Do not ride in the state in which close the chest
and when the air bag inflates, receive a strong
there is a risk of sustaining serious injury only .

C

Instrument panel and top handle
To, you can put a sticker was placed things
Not Rishi
SRS air bag is no longer functioning properly
Ri even placed when the air bag is inflated
Original that the driver and passengers to the
injury of flying
when the air bag inflates, flour dances in the air
There is a thing.
This powder is harmless, temporary in some cases
You may experience a feeling of discomfort to.
After confirming the safety, please come out to the outside of the
vehicle immediately.

In the following cases, SRS there is that the air bag is not working.

- collision utility pole, to such as standing trees
- The dive to such as a truck
- collision from an oblique direction collision or partial

Absorption degree of the impact will vary depending on the site of the body, and the magnitude of the damage state. SRS operation of the air bag does not necessarily match.

Place, such as the following and collision at low speed that can protect an occupant in the seat belt only. It does not work because there is no effect if, of occupant protection.

- collision from the lateral direction
- collision from the rear
- overthrow or overturn

Circumstances of the accident, in some form, SRS there is that the air bag is activated.

1 SRS operation of the air bag

C

SRS degradation of the air bag is not removed. Improper handling and cause of the malfunction or failure

If the body is able to absorb enough shock, system does not work.

- Cheap
- All
- De
- La
- Lee
- Break

Side air bag

It is the air bag on the outside of the backrest of the front seat. By the collision from the side, Air bag inflates, I will mitigate the impact on the chest of the passenger of the front passenger seat and the driver.


Cheap
All
I
Do
La
Lee
Breakfast

location



Back out of the seat for both the driver's seat, passenger seat
It is stored in the side.
Both " SIDE AIRBAG has been display ed. "

Mechanism of working

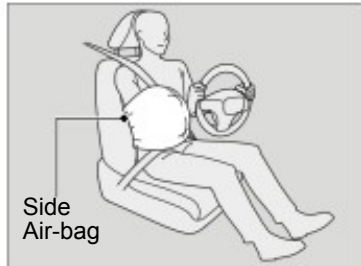

Side air bag, about 30km/ h speed above
Car equivalent to the vehicle has collision from the side in degrees
Equal to or come, when impacted more
Side airbags for the driver's seat or the passenger seat
I will bulge.

If it is a collision from the oblique side of the vehicle, the vehicle speed when the side air bag is activated I will be higher.

C

Take and accessories in and around the door
You can put, it is not or place things.
Or not working correctly, and these operation
There is that thing fly .

The excessive force or shock to the side air bag
was instructed.

Side air bag is only activated side shocked
Will.
Side air bag for the collision from the side
In order to operate, operates only side band shocked
Be. Also, if the passenger side was shocked,
Side air even when no occupant in the passenger side
Bag is activated.
the side in degrees

Side air bag, wear a seat belt
When it is deep in sheet causing the upper body
It demonstrates a protective effect on the tree.
In order to maintain the protective effect of the side air bag
In, seat belts should be worn correctly
Have.

Side air bag, depending on seat cover
side will not be activated properly.
Seat cover is mounted near to the front seat
The standing Honda , please contact your dealer.

■ operating conditions

You may in the following cases, and operates when it receives a strong impact to the vehicle bottom

- when it collided with the projection of the ground or curb
- when it fell into a deep hole and groove
- When you fell from a high place

Cases such as the following, you may side air bag is not working.

- collision to the side of the passenger other than in the vicinity

Side air bag is adapted to operate by the magnitude of the shock experienced by the crew

Since you have, the operation of the side air bag and the magnitude of the damage state of the vehicle not necessarily coincide. Does not.

It does not work in the following cases, since there is no effect of occupant protection and crash at low speed.

- head-on collision
- collision from the rear
- overthrow or overturn

Circumstances of the accident, in some form, it may side air bag is activated.

1 side air bag

the vehicle bottom

C

It is not leaning on the door.

Required hands and face in the storage unit of the side air bag to rise to over.

Passenger in the rear seat, was also back in the front seat

It does not suffer from Les.

When the side air bag inflates, a strong shock state of the vehicle not necessarily coincide

Decomposition of the side air bag, remove such powder.

Improper handling and cause of the malfunction or failure

when the air bag inflates, flour dances in the air. There is a thing.

This powder is harmless, temporary in some cases. You may experience a feeling of discomfort to.

Once you are satisfied with your safety, it's going out to the outside of the vehicle immediately

Cheap
All
I
Dq
La
Lee
Breakf

: by type and options, equipment is different.


Side curtain air bag

It is the air bag in the ceiling portion of the window side. By the collision from the side, the air bag rises and will mitigate the impact to the head of the occupant.

Cheap
All
I
Do
La
Lee
Breakfast

location

Side curtain air bag housing portion

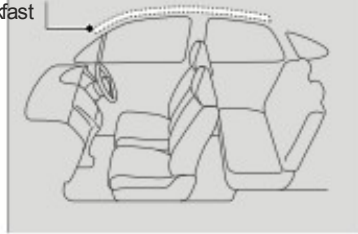

The ceiling of the window side in both the driver and passenger sides are stored. Both " SIDE CURTAIN AIRBAG displayed " Has been.

side curtain air bag

C

Side curtain air bag is working properly. You cannot fly during operation because it is not a thing, I will note the following.


- windshield, door glass, Freon
- Each pillar around Ta king Pictures center, of
- Do not install and accessories to
- Do not apply anything on the grab rail
- It was also pointed or heavy objects on coat hddks not multiplied by the

Side curtain airbag side shocked
I will work only.
Side curtain air bag collision from the side
In order to operate on only the side that shocked
Will operate. In addition, the passenger side was shocked
If the difference even when no occupant in the passenger side
I do curtain air bag is activated.

Side curtain airbags, seat belt
Perched deep in sheet causing the upper body to wear
It demonstrates the protective effect when you are.
Maintain the protective effect of the side curtain air bag
To, to wear the seat belt correctly
Please.

Forty : by type and options, equipment is different.

■ Mechanism of working

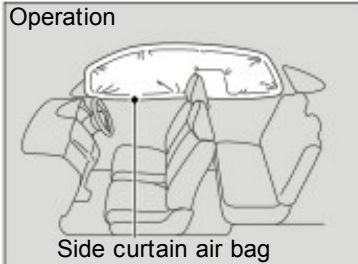

Side curtain air bag to operate
 Can collide from the side impact above a certain
 It is time was. The difference between the passenger side or the driver's side
 I do curtain air bag inflates.

■ operating conditions
 Operating conditions of the side curtain air bag,
 It is under the same conditions as side air bag.
 2 operating conditions P.39

■ working at the time of the collision from the front direction
 Collision from the previous direction, the force above a certain level is applied in the transverse direction, SRS Rise from the air bag
 Side curtain air bag on the side needed after I do will bulge.

1 side curtain air bag

C

An impact to the side curtain air bag housing
 Not apply.
 Scratched or are attached to the housing portion,
 Hiwara
 Sai.
 Decomposition of the side curtain air bag, remove
 You do not teeth.
 Improper handling and cause of the malfunction or
 failure

Cheap
 All
 I
 Do
 La
 Break

: by type and options, equipment is different.

Air bag system warning light

The Shirasema a warning light, and abnormalities of the seat belt pretensioner and air bag system warning light Be.

Cheap
All
I
Do
La
Lee
Breakfast

■ air bag system warning light



■ the power mode ON when it was in mode
The power mode ON When you mode, air
Bag system warning light will illuminate for a few seconds, consumption
It is normal that if the lights.

■ When an abnormality occurs
Pretensioner or air bag system
I will light when there is an abnormality in the system.

W

Do not ignore the air bag system warning light. If you ignore the air bag system warning light, Air bag systems, pretensioners Shea System, does not function correctly, received a There is a risk of death or Ketari.

If the air bag system warning light is illuminated As soon Honda received a check in the dealer, Please.

Air bag system warning light is illuminated when the state
Is, Honda please have it inspected at the dealer.
The power mode ON and air when you mode
even if the bag system warning light does not light up,
Pretensioner or air bag system
There is a possibility that there is an abnormality in the system.
Immediately Honda is sure to have it inspected by dealer
Have.

Cleaning the air bag

The air bag system, it does not require maintenance, replacement parts necessary also There Does not. However, if the following Honda please have it inspected at the dealer.

- air bag is activated, when the bulging

Airbag was activated once, together with related parts and other control unit

There is a need to replace always.

Similarly , seat belt pretensioners and also exchange a new one if you have activated once

You need to be converted.

1 air bag is activated, when the bulging

The Do not re-use of air bag-related parts
Sai.

Cheap
All
I
Do
La
Lee
Break

Safety of children

In order to protect the safety of children

When the children to ride, check the following notes, and to ensure the safety of children to protect the safety of children, Please.

Cheap
All
I
Do
La
Lee
Breakfast



• I put in the rear seat Children

- u When you put in the passenger seat the children, accidentally Behavior or anxious, and stomach switches I to interfere with driving, such as shifting of was Carry the risk. Further, SRS when the air bag inflates, stro It is dangerous because there is a shock.

• I to wear a seat belt always for children

- u You can suffer from children, please do not put on the knee. The payments in the event of a collision It is dangerous can not be obtained. The seat belt for children in the correct way wear Please have a.

• I use a child seat in infants

- u When you put a baby, you can use the child seat always.

• It is not out hands or face, things from window

- u so that, such as pause or when traveling, children are not issued hands or face, and things from the window Please note. It is dangerous there is a risk of an accident by the obstacle that unexpected.

• Adults always perform the operation door, window, such as sheet

- u it can cause serious injury, door, window, Sea for children Please do not let the operations such as and.

• When you leave the car and exits the children

- u Please do not leave the car only children. In particular, the interior of the scorching sun in the high temperature It is dangerous to be. In addition, by the mischief of children, starting the car, fire, etc. There is a possibility that it may lead to an unexpected accident.

W

installed in the rear seat child seat.
When installed in the front passenger seat SRS air bag inflates when they were, received serious injuries cause death.

W

AIRBAG

Protected by an operable air bag front of the seat
The sheet is, backward child
Please do not install absolutely sheet.
In response to a critical failure children or death,
Carry the risk


Why should not ride in the passenger seat the child is good
You are as follows.

- children can ride correctly on the seat of the passenger seat
Otherwise, SRS and heavy when the air bag is inflated
There is a possibility that the injury large
- side air bag system equipped vehicles, your child is
Part of the body between the operating range of the side air bag
Once in, when the side air bag is inflated
There is a fear that the bear serious injury to

Safety of infants

■ child seat of infant

Infants do not sit neck, fixed correctly the child seat of the infant, was placed , Please.

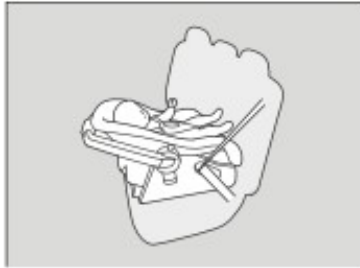

■ installation of the child seat in the rear-facing

Location

Please be installed in the rear seat.

It's recommended, set to the seat directly behind the front passenger seat

Is the location. In that case, it is not carrying a person in the passenger seat

I go out as much as possible before the seat of the passenger seat

Please.

1 child seat of infant

W

The forward-looking in the rear-facing child seat

I do not use Te.

Upon impact from the front and when used in the

positive is a possibility that infants bear a serious

injury

the passenger seat

the passenger seat

Child seat in the rear-facing set in the passenger

seat position.

The passenger seat SRS when the airbag is

inflated, the air bag on the back of the child seat

Per, infant death or suffered a serious injury

There is a risk of death or.

Cheap
All
Do
La
The
Break

I continued on next page

■ child seat of infant

infant child seat range specified by the manufacturer is, Child of prospective

Were fixed correctly the sheet, please put.

Cheap
All
I
Do
La
Lee
Breakfast



- location of the child seat forward-looking passenger seat forward
- It is recommended to use a ground to the rear seat.

1 child seat of infant

W

The installation of a child seat in the front passenger seat forward

The installation of a child seat in the front passenger seat forward

Of, if the passenger seat is not too out of row before the head of the infant in the event of a collision to receive a strong impact in the air bag to kick, he died or suffered serious injury. There is a possibility that the benefit.

The Child of the Sea forward in the passenger seat when installing the door, it is possible to seat the passenger installed by lowering behind only that.

■ How to select the child seat

When buying a child seat, seat belt fixed type Child Sea
General-purpose or To ISOFIX Please choose a child seat.
Seat belt fixed type child seat, solid seat with a seat belt
And constant.
Generic types ISOFIX child seat, rear seat outside 2 lower that come with seat
Mounting is easy to fix with top tether Anchorage and Anchorage
Be.

■ conditions of the child seat selection

In order for the child seat to exert appropriate protective effect, the following 3 satisfy the conditions of one
You must have plus.

- the difference between the type for the child that the child seat is guided to the list
It is a view
- that this is what was in the car seat to install the child seat
- it is preferable that the child seat is suitable for the safety standards
UN-ECE R44 I would recommend a child seat that conforms to.

1 How to select the child seat

Generic types ISOFIX child seat mounting
Is easy.
Generic types ISOFIX child seat mounting
By the simplicity, improper installation cause
Which has been developed to reduce the injury occurring
Is.

Honda is pleased to offer child seat of genuine
There are. Purchase, at the time of your Honda sales
Please consult the shop.

Cheap
All
I
Do
La
Be
Break

I continued on next page

■ about the child seat to be fixed with seat belt

Child seat of various types are available for this car, but all of Thailand Flop does not mean that it is appropriate.

By referring to the following table, can be used in any child seat seating position of each

Please select either.

■ measure of selection

Refer to the instruction manual that came with your child seat for details.

Belt Fixed Type Child seat Weight category	Seat position		
	Front seat Passenger seat	Outside seat	Rear seat Middle seat
Group 0 ~ 10kg	X	U	U
Group 0 + ~ 13kg	X	U	U
Group I 9kg ~ 18kg	UF *	U	U
Group II 15kg ~ 25kg	UF *	U	U
Group III 22kg ~ 36kg	UF *	U	U

Explanation of Symbols

- U : a general-purpose (universal) can be installed child seat.
- : UF generic types (universal) can be installed in a positive child seat.
- X : You can not install a child seat.
- ※ : be adjusted into a locked position in the foremost seat back.


1 for the child seat to be fixed with seat belt

In the safety standards of the United Nations on the child seat Some UN-ECE R44 child that it is compliant with The sheet, and a mechanism to fix the seat belt Comes.

When you purchase a child seat, weight Group Please choose the one that matches the loop.

U and UF in the child seat, the UN-ECE R44 to manual authorization and display it UNIVERSAL (general-purpose) There are also those that are guided.

EC approval display (example)

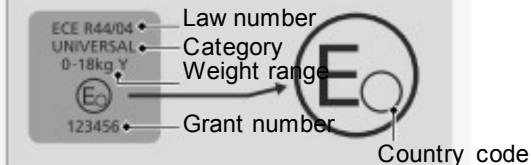

Generic types ISOFIX child seat other than Chai When using Rudoshito, the type of sheet By the direction of the mounting and fixing bracket (locking Clip) may become necessary.

Handling instructions that come with the child seat for more information please see the book.

■ General-purpose ISOFIX child seat for

Rear seat outside of the car 2 in the seat, a general-purpose ISOFIX install a child seat
It is equipped with top tether and lower Anchorage Anchorage for kicking.
By referring to the table on the next page, in the seated position of each, use Which child seat
Please select to see if it can iodine.

One general-purpose ISOFIX child seat for

Honda is pleased to offer child seat of genuine
There are. Purchase, at the time of your Honda sales
Please consult the shop.
Which child seat

Cheap
All
I
Do
La
Lee
Breakf

I continued on next page

■ measure of selection

Refer to the instruction manual that came with your child seat for details.

General-purpose ISOFIX Child seat	Weight category	Size Grade	Fixture	Seat position		
				Front seat Passenger	Rear seat Outside seat	Rear seat Middle seat
Garry-cot		F	ISO / L1	-	X	-
		G	ISO / L2	-	X	-
Group 0	~ 10kg	E	ISO / R1	-	X	-
		E	ISO / R1	-	IL	-
Group 0 +	~ 13kg	D	ISO / R2	-	X	-
		C	ISO / R3	-	X	-
		D	ISO / R2	-	X	-
Group I	9kg ~ 18kg	C	ISO / R3	-	X	-
		B	ISO / F2	-	IUF	-
		B1	ISO / F2X	-	IUF	-
		A	ISO / F3	-	IUF	-
Group II	15kg ~ 25kg	-	-	-	X	-
Group III	22kg ~ 36kg	-	-	-	X	-

Explanation of Symbols

- IL : Honda Baby ISOFIX , Honda Neo ISOFIX child seat mounting is possible.
- IUF : IUF general-purpose (Universal) ISOFIX can be installed in a positive child seat is.
- X : ISOFIX You can not install a child seat.

Fifty

One general-purpose ISOFIX child seat for


When you purchase a child seat, ISOFIX Please choose the one that matches the size grade.

Fixture	Children The magnitude of	Of use Direction	Shape, Size
ISO / L1	Infant	Left	Bed-type
ISO / L2	Infant	Right	Bed-type
ISO / R1	Infant	Rear	-
ISO / R2	Infant	Rear	Small size
ISO / R3	Infant	Rear	Large
ISO / F2	Infant	Before	Low type
ISO / F2X	Infant	Before	Low type
ISO / F3	Infant	Before	Total height


IL The UN-ECE R44 was fit in, Honda Baby ISOFIX or ISOFIX Neo child seat You can install. Purchase Honda , please contact your dealer.

IUF The child seat, UN-ECE R44 certification In the instruction manual and variable display UNIVERSAL ISOFIX are guided.

EC approval display (example)

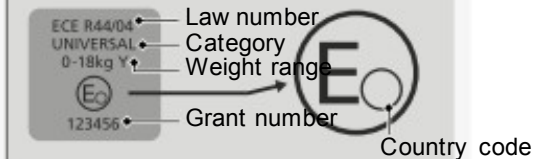

■ mounting of the seat belt

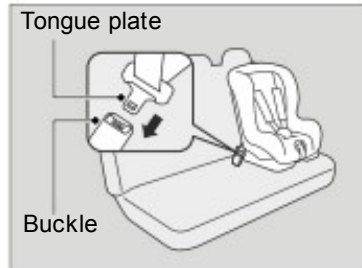

1. backrest of the rear seat is, the position of t
It is confirmed that it is.
2 adjustment of the backrest P.115
2. I put the seat the child seat.
3. was passed through the child seat the seat belt,
I insert the tongue plate into the buckle.
u At this time, the buckle is "click"
And just push properly until you hear
Sai.
4. in the instruction manual that came with your child seat
So I install.
5. Shake back and forth left and right child seat,
Make sure that it is firmly fixed.

1 mounting of the seat belt

C

Child seat is securely fixed
I will verify.

If it is not fixed securely, and brake opposition
Child seat pops out, such as when the collision
There is likely to be, subject to injury.

The instruction manual that came with your child seat
Please read.

The seat belt according to the type of child seat
Fixing bracket for fixing the (locking clip) is必
It becomes important.

Cheap
All
I
Do
La
Be
Break

■ Removing the child seat

Remove the buckle, and pull it out of the child seat and seat belt.

I continued on next page


■ generic types ISOFIX child seat mounting of

Generic types ISOFIX child seat, rear seat outside 2 can be installed in the seat.

The child seat, fixed with top tether and lower Anchorage

You.

Cheap
All
I
Do
La
Lee
Breakfast

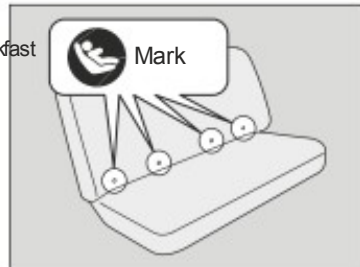

1. Kararo break of the sheet at the bottom of the mark
I will check the Aan College.

2. backrest of the rear seat is, the position of the front
It is confirmed that it is.

2 adjustment of the backrest P.115

3. while pressing the knob, the most headrest
I down to the bottom.

4. was placed in a seat child seat, Chai
Russia according to the instruction manual of
I attached to Aan College.

u at the time of installation, seat belt and foreign matter
Such as Na is bitten to the lower Anchorage
Please set to prevent.



One general-purpose ISOFIX child seat mounting of

C

Rear seat to check whether it is fixed securely
To.
If it is not fixed securely, and brake opposition
The Chai together with the seat, such as when the
collision that Rudoshito movement, injured
There are.

The lower Anchorage neighborhood and Shitobe or
foreign matter
I want to check whether there is biting the belt.
Chai When caught a seat belt or foreign matter
Doshito is not securely fastened, well as some
other brake
There is a possibility that it may issue, subject to
injury.
Child seat is securely fixed
I will verify.
Rudoshito
If it is not fixed securely, and brake opposition
Child seat pops out, such as when the collision
There is likely to be, subject to injury.


Generic types ISOFIX child seat, Shitobe
You do not need to be fixed at fault.
The instruction manual that came with your child seat
Please read.

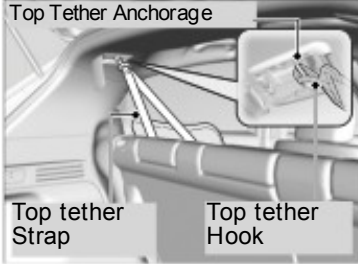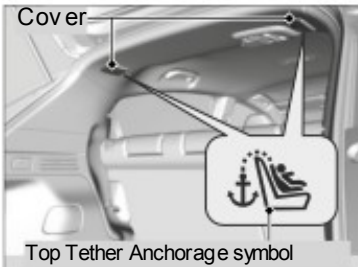

- 5. I open the cover.
- 6. Top tether anchor the top tether hook to the ledge, and tighten the strap. Please be careful not to Gillet.
- 7. Shake back and forth left and right child seat, Make sure that it is firmly fixed.

One general-purpose ISOFIX child seat mounting of

When installing a child seat, Sea I will move as shown in the figure of the seatbelt buckle Please.

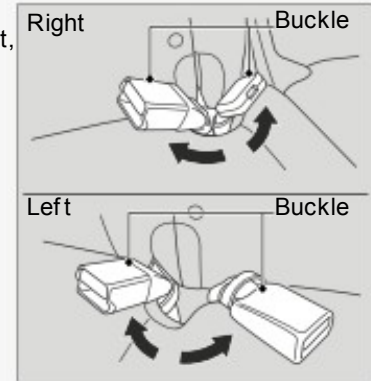

C

There is no top tether Anchorage symbol The hook, use the top tether strap Please do not.

Cheap
All
I
Do
La
Lee
Break

Safety of older children

■ about the use of seat

Children beyond the conditions of use of infant car seat, placed on the rear seat

Cheap
All
I
Do
La
Lee
Breakfast

Please let me wear a three-point seat belt. The sit deep into the child seat


Then, if you do not fit any one in the confirmation of the following items, the use of Junior sheet is required.



■ confirmation item

- knee of children unreasonable at the front of the seat
Are you bent Ku ?
- shoulder belt or between the arm and neck of children
If they bought ?
- is in a position waist belt is low, the children
Are you touching the thighs ?
- while riding, you can either be sitting comfortably?

■ For junior seat

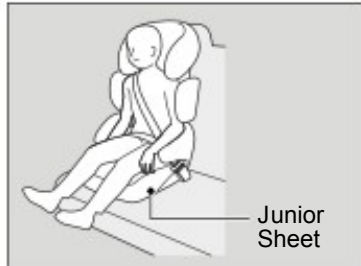

You can not use the three-point seat belt, junior Children that it is necessary to use a Ashito is, Used by installing the rear seat the junior seat Please to iodine.
For safety reasons, children of junior seat Check or are in the range that is suitable for use Please.

1 safety of children large

W

Do not place in the passenger seat children.

When placed on the passenger seat the children,

when the bag is inflated, negative serious injury

There is Uosore.

Is unavoidable, place to put the child in the front

passenger seat backwards as much as possible, if

Use the junior seat, properly if needed

It should be let sit to wear a seat belt

Have.

If you put in the passenger seat the children unavoidably, Please strictly observe the notes on the next page.

1 for the junior seat

For mounting of the junior seat, and jewelry

Read the instruction manual that came with the Niashito,

Please properly installed.

The junior sheet, and high and low sitting height

There are. Children Shitobe properly

Please choose what you can wear a belt.

■ unavoidable, if you put in the front passenger seat for children

The children sit in a rule correct posture, such as wearing a seat belt while driving

If it is determined that safe and can protect is, even when placed on a child passenger seat, the following

Please let me ride the children observe the item.

- Carefully read this manual, and fully respect and safety instructions for the seat belt
 - I understand the
 - I down to the rearmost passenger seat
 - to cause the upper body, and sat deep in the seat, it is instructed to give the floor a foot
 - seat belt of the children in the correct position, to ensure that it is firmly fixed
 - I watch the behavior of children

Cheap
All
I
Do
La
Lee
Breakf

Risk of the exhaust gas

For carbon monoxide

Carbon monoxide is included in the exhaust gas of the car. The only to maintain properly the car.
If, never carbon monoxide to enter the vehicle.

Cheap
All
I
Do
La
Lee
Breakfast

In the following cases, if there is any leakage of exhaust gas Honda please have

■ If inspection is required

- When you feel normal exhaust sound
- When there is a possibility that the vehicle collides, the exhaust system is damaged

W

The work at risk of inhaling carbon monoxide
Avoid.
Carbon monoxide is poisonous. Sucking carbon monoxide the unconscious and writing, you died or
Carry the risk.
And work in a place that has been sealed, the carbon monoxide there at risk of inhaling
Sai.

The location of the snow cover and snowfall, and the engine was left over.
Exhaust gas is retained by the snow around
When coming into the car, in serious injury or death may lead.

An enclosed area such as a garage, carbon monoxide
There is a possibility that the original filled suddenly.
Is multiplied by the engine while closing the door of the garage
Please do not. if the door is open
Also, the engine just before the car out of the garage
Please do apply.

How to read the meter






In this chapter, warning light, indicator light and switch to be used while driving, contains information about the gauges.



Indicator and warning lights	
Warning light	58
Indicator light	65
Information display and meter	
Meter	71
Information Display	72


 


Indicator and warning lights

Warning light





Warning light	Name	Lights / situation flashing	Knowledge
	Breakfast Les over key warning light (Red)	<ul style="list-style-type: none"> the power mode ON few seconds When you have on, off After you have on, off Lights when the brake fluid amount was reduced brake system lights up when the abnormal 	<ul style="list-style-type: none"> When you light up while driving, the brake fluid immediately If you want to check, and has The based the overline it inspected at dealer. ABS even when it is turned on at the same time as the warning light, immediately it inspected at dealer. 2 brake warning light (red) is lit P.250
	Brake system warning Tsuge-to (Orange)	<ul style="list-style-type: none"> the power mode ON few seconds When you have on, off After you have on, off City brake active system is different Lights when the ordinary Automatic brake hold system -Time is when the lighting of abnormal 	<ul style="list-style-type: none"> immediately during traveling, immediately and Honda sales Please have it inspected at the shop.
	Electronic control parking Brake warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you have on, off (parking brake) After you have on, off (parking brake) Lights when you are over a tree) 	<ul style="list-style-type: none"> electronically controlled parking brake when the abnormal, electronically controlled parking brake system Warning light have to blink at the same time as the front of the parking brake does not operate There is a door.
	Electronic control parking Brake system warning Tsuge-to	<ul style="list-style-type: none"> the power mode ON few seconds When you have on, off After you have on, off electronically controlled parking brake is the abnormal It lights up on the tree 	<ul style="list-style-type: none"> immediately, use the parking brake Without, immediately Honda received a check in the department of abnormal 2 is electronically controlled parking brake system warning light Was lit P.252
	Oil pressure warning light	<ul style="list-style-type: none"> the power mode ON lights up when you mode then, turn off the engine start-up engine is running, it lubricates the engine internal Lighting pressure of the oil is is lowered 	<ul style="list-style-type: none"> lights running = you stop the car in a safe place immediately please deal. 2 oil pressure warning light is lit P.249





Total Vessel Of See Or Was

: by type and options, equipment is different.

Warning light	Name	Lights / situation flashing	Knowledge
	PGM-FI warning light	<ul style="list-style-type: none"> the power mode ON lights up when you mod then, turn off the engine start-up When not start the engine is several tens Rear Off The anomaly in the exhaust gas control system Lights that there is that it has detected a misfire condition of The flashing on the tree 	<p>lights running = high speed run line to avoid only have had it and check it have it inspected at the dealer.</p> <p>Flashing while driving = Safety no flammable materials such as hay to stop the engine minutes after the engine.</p> <p>Please deal.</p> <p>2 PGM-FI warning lamp lights up / flashes P.250</p> <p>each engine cylinder</p>
	Charge warning light	<ul style="list-style-type: none"> the power mode ON lights up when you mod then, turn off the engine start-up On Battery has not been charged 	<p>lights running = order to reduce the consumption of electricity, adef urosuta air conditioner or OFF then to, Please deal.</p> <p>2 charge warning light is on P.249</p>
	Transmission Warning light	<ul style="list-style-type: none"> Transmission is blinking when the abnormal 	<p>If you blink while driving, sudden acceleration, and the rapid acceleration Honda received a check in the dealer.</p>
	Seat belt is not worn Warning light	<ul style="list-style-type: none"> The wearing a seat belt on the passenger seat and the driver's seat Lights not to iodine the power mode ON and Ya when formed into warning light, even if you wear a seat belt properly Running, Shitobe of the driver's seat or the passenger seat and such erroneous detection of the Buzzer sounds and do not wear a belt, warning light flashes while the buzzer is sounding 	<p>Ya and the driver's seat belt correctly</p> <p>The look, the warning light will go off.</p> <p>Passenger seat and such erroneous detection of the</p> <p>possible factors.</p> <p>2 seat belt reminder P.26</p> <p>2 automatic brake hold P.172</p>

Total
Vesse
Of
See
Or
Was

Warning light	Name	Lights / situation flashing	Knowledge
	Honda smart key System warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you find it After you have on, off Honda smart key system is the capital of abnormal during operation It lights up on the tree 	<p>When you notice any of the following, as soon as Honda dealer please have it inspected.</p> <ul style="list-style-type: none"> Do not turn off even after the engine is started power mode OFF for a few seconds when the mode Lit the power mode OFF the number when it was in mode seconds
	Fuel level warning light	<ul style="list-style-type: none"> lights up the remaining amount of fuel is less It is lit when the remaining amount remaining in the tank, immediately and Honda dealer But about 5 it's time you became a liter. Please have it inspected. Blinking when there is an abnormality in the fuel gauge 	<p>Please be refueled as soon as possible if you lit.</p> <p>When lit, immediately Honda dealer Please receive.</p>
	ABS (anti-lock Brake system) Warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you find it After you have on, off ABS lights at the time of the abnormal 	<p>When lit, immediately Honda Inspect dealer Please receive.</p> <p>2 ABS (anti-lock brake system) P.175</p>
	Air-bag system Warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you find it After you have on, off Lights up when detecting an abnormality of the air bag abnormalities of the airbag system pretensioner system malfunction 	<p>When lit, immediately Honda I'm going to receive a check in the dealer</p>




Warning light	Name	Lights / situation flashing	Knowledge
	VSA (vehicle style Stability Assist) • Brake Assist system, Hirusuta Warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you mode After you have on, off VSA and blinks when is operating To assist system, starting auxiliary brake Function, VSA of abnormality is one of the system Lights when 	<ul style="list-style-type: none"> When it during operation, immediately Honda sales Please have it inspected at the shop. In addition, even Performance of the brake function of normal, if it has been secured. 2 VSA (Vehicle Stability Assist) P.169
	VSA OFF warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you mode After you have on, off VSA the OFF lights up when you 	<ul style="list-style-type: none"> 2 VSA (Vehicle Stability Assist) P.169
	Auto Light Control warning light	<ul style="list-style-type: none"> the power mode ON few seconds When you mode After you have on, off auto light control system is different When the lighting of the normally 	<ul style="list-style-type: none"> If you have turned on during operation, the lighting of the light only lights, immediately Honda dealer Please have it inspected.
	Door / tailgate Opening and closing warning light	<ul style="list-style-type: none"> When the door, tail gate is closed Is, the power mode ON When you mode After you have lit a few seconds, turns off door, tailgate is completely closed Not when the lighting 	<ul style="list-style-type: none"> When the door is completely closed, the tailgate, lights will turn off.






Total
Vesse
Of
See
Or
Was

: by type and options, equipment is different.

I continued on next page

Total
Vessel
Of
See
Or
Was






Warning light	Name	Lights / situation flashing	Knowledge
	EP (electric Power steering) system Warning light	<ul style="list-style-type: none"> the power mode ON lights up when you mode then, turn off the engine start-up EPS lights that there is an abnormality in the 	<ul style="list-style-type: none"> it is not lit or no lights, always, Immediately Honda I'm going to receive a check in the dealer of the system 2 EPS (electric power steering) system warning light There was lit P.251
	High water temperature warning light (Red)	<ul style="list-style-type: none"> the power mode ON few seconds When you mode After you have on, off flashing temperature of the cooling water of the engine goes up And then lights up when further increases. 	<ul style="list-style-type: none"> When the temperature of the engine cooling water is low, it will light off after. 2 overheat indicator (blue) page 65 Flashing while driving = Please traveling slowly . lights running = you stop the car in a safe place immediately, please cool the engine. 2 overheat P.248
	Starter system Warning light	<ul style="list-style-type: none"> the power mode ON lights up when you mode then, turn off the engine start-up starter system lights up when the abnormal 	<ul style="list-style-type: none"> while stepping on the brake , ENGINE START / STOP is started the Until about 15 , please press and hold seconds. Off When lit again and the absence, and immediately Honda please have it inspected at the dealer.

Warning light	Name	Lights / situation flashing	Knowledge
	Honda smart key Low battery warning light	<ul style="list-style-type: none"> • Honda battery power of the smart key is less When it becomes, it lights up at the same time as the buzzer 	2 battery replacement procedures P.218
	Idling stop -Flops system warning light (Orange)	<ul style="list-style-type: none"> • the power mode ON few seconds When you turn the ignition on After you have on, off is an abnormality in the idling stop system Lights when there 	<ul style="list-style-type: none"> • If the light is lit, immediately and Honda dealer Please have it inspected.
	Se Le Kutopojisho Tior P Move warning light	<ul style="list-style-type: none"> • the select lever  When other than the that power mode OF F mode when you want to over Power Mode is ON accessor from mode the the select lever  You have to, and Stepping This indicator illuminates when it is in Lee mode the first ENGINE START STOP I and press times to stop idling during, and bonnet Lights up when open and 	<ul style="list-style-type: none"> • Please. • When you want to start the engine, and yen normal Please have a start-up operation of the gin. 2 start-up of the engine P.147

Total
Vesse
Of
See
Or
Was

Warning light	Name	Lights / situation flashing	Knowledge
NOKEY	Honda smart key Warning light taking away	<ul style="list-style-type: none"> • Honda and brought out to the outside of the vehicle when the smart key is not in the car. When I closed the door, and the table at the same time, the warning sound shows. 	<p>When the smart key is not in the car, the smart key warning light will flash and the warning sound will be heard.</p> <p>2 Honda warning carried away smart key P.100</p>
AWD	AWD (Oruhoi Le Driving) Shea System warning light	<ul style="list-style-type: none"> • the power mode ON few seconds When you have on, off • AWD system when the lighting of abnormal immediately • AWD system is overheated Flashing can 	<p>When the AWD system is abnormal, the AWD system warning light will flash and the AWD system will be disabled. Please stop the car in place and have it inspected at the dealer.</p> <p>When the AWD system is overheated, the AWD system warning light will flash and the AWD system will be disabled. Please stop the car in place and have it inspected at the dealer.</p> <p>2 REAL TIME AWD (all-wheel Drivin Ing) system page 169</p>

Indicator light



Indicator light	Name	Lights / situation flashing	Knowledge
	Direction indicator / v Flashing indicator	<ul style="list-style-type: none"> In response to the direction indicator, the left or right indicator flashes, and when you press the hazard flasher switch, both of the indicator has expired. Bulb immediately flashing at the same time If you slam on the brakes while traveling at high speed, flashing left and right at the same time 	<ul style="list-style-type: none"> When the period of blinking fast, and the indicator has expired. Bulb immediately flashing at the same time. Please replace the. Refer to the bulb p.201 , 204 , 205
	High beam indicator	<ul style="list-style-type: none"> Lights when you upward headlights 	—
	Lights indicator	<ul style="list-style-type: none"> Light switch is OFF Lights when the non- (AUTO Lights in the vehicle width lamp light 	<ul style="list-style-type: none"> the power mode and stays on the light and OFF when the door is opened (when opening the door on the warning buzzer will sound and forgetting to turn off lights on.
	Fog lights Table 示灯	<ul style="list-style-type: none"> lights and turn on the fog lights 	—
	Low water temperature indicator (Blue)	<ul style="list-style-type: none"> Lights when the temperature of the engine coolant is low 	<ul style="list-style-type: none"> which a sufficient warm-up, the display light is on the remains, such as abnormal temperature warning buzzer will sound in response to the inspection dealer Please.






Total
Vesse
Of
See
Or
Was

: by type and options, equipment is different.

I continued on next page

Total
Vessel
Of
See
Or
Was





Indicator light	Name	Lights / situation flashing	Knowledge
	Immobilizer System indicator	<ul style="list-style-type: none"> the power mode ON moment When you mod The lights, turns off immediately immobilizer system is of key information Flashing and can not be recognized 	<ul style="list-style-type: none"> lights of moment is not a malfunction. When you are flashing, start the engine child It is not possible to. Once the power mode OFF or set to mode Et al, again ON Please set to mode. If you are repeating a flashing indicator light frequently, the die And seek inspection at the store Sai. ENGINE START / STOP near the switch, Immobilizer cis If there is metal or another key may tem can not read the information of the key You.
	Security Alarm System Operating indicator	<ul style="list-style-type: none"> Security alarm system is set Blinking when it is 	2 security alarm system P.94

Indicator light	Name	Lights / situation flashing	Knowledge
	Cruise main Indicator	<ul style="list-style-type: none"> Press the cruise switch, Kuruzuko The controls ON lights up when you 	2 cruise control page 165
	Cruise control Roll indicator	<ul style="list-style-type: none"> The automatic constant-speed running in cruise control Lights when you are 	2 cruise control page 165
	ECON indicator	<ul style="list-style-type: none"> the power mode ON few seconds When you mode After you have on, off ECON Press the switch, ECON and the ON It lights up when you 	2 ECON switch P.164
	Select position Indicator light	<ul style="list-style-type: none"> View the current position 	<ul style="list-style-type: none"> If the outside temperature is low, the selected position will be delayed. 2 operation of the select lever page 155 , 159
	Shift To indicator Ter / M (7 -speed Manual shift mode) Table 示灯	<ul style="list-style-type: none"> the select lever S At, 7 -speed manual When the shift mode M Indicator lights 7 when speed manual shift mode, View gear position 	2 operation of the select lever P.155

Total
Vesse
Of
See
Or
Was

: by type and options, equipment is different.

I continued on next page




Indicator light	Name	Lights / situation flashing	Knowledge
	Idling stop Up indicator (Green)	<ul style="list-style-type: none"> • idling stop system is working then, to the point when you stop idling Light 	2 idling stop system P.160
	Brake pedal depression Foot indicator	<ul style="list-style-type: none"> • the power mode ON few seconds When you mode After you have on, off 	
		<ul style="list-style-type: none"> • Since the depression of the brake pedal is released, it turns on if you do not want to stop idling 	
		<ul style="list-style-type: none"> • electronic control Parkinson while depressing the brake pedal, pressing brake switch. The electronic control Parkinson without going on the brake pedal 	2 electronically controlled parking brake P.170
	Automatic brake hold	<ul style="list-style-type: none"> • automatic brake hold actuation In, the auto without going on the brake pedal 	<ul style="list-style-type: none"> • automatic while depressing the brake pedal And press the brake hold switch
		<ul style="list-style-type: none"> • automatic brake hold is in operation To, and automatic brake Ho automatically buzzer sounds when the field is stopped, parts indicator is blinking while Heather is ringing 	<ul style="list-style-type: none"> • Please step on the brake pedal immediately .
	Handle operation indicator	<ul style="list-style-type: none"> • locking of the handle is not released It lights up on the tree 	<ul style="list-style-type: none"> • <u>ENGINE START / STOP</u> Press and hold the, Han I move to the left and right the dollar.

Indicator light	Name	Lights / situation flashing	Knowledge	
<p style="text-align: center; font-weight: bold; font-size: 1.2em;">CTBA</p>	<p>City brake Aku Restorative System Light</p>	<ul style="list-style-type: none"> • the power mode ON few seconds When you out the car to ensure sufficient distance between vehicles by for example deceleration • After you have on, off • intermittent buzzer when the possibility of a collision is measured • Indicator is flashing sounds • When the vehicle is stopped by the system automatically • The buzzer will stop sounding, indicator lights 2 City brake system flashing • After you, off 	<ul style="list-style-type: none"> • the possibility of collision increases, the brake automatically 	<p>Total Vesse Of See Or Was</p>
		<ul style="list-style-type: none"> • CTBA OFF to stop the system switch • Display and that • the operating state the system by pressing the switch • Then off 	<p>2 City brake active system p. 178</p>	
		<ul style="list-style-type: none"> • laser sensor on the front glass top • Sir flashing around and dirty • I will also flashes when the bad weather rain or snow • You may 	<ul style="list-style-type: none"> • preparative dirt wiper and washer while driving • Please except Ri. • It should be wipe off the dirt of the front glass of Have. • The system will return dirt falls. 	

: by type and options, equipment is different.

I continued on next page

Total
Vessel
Of
See
Or
Was

Indicator light	Name	Lights / situation flashing	Knowledge
	City brake Aku Restorative System Display Light	<ul style="list-style-type: none"> • glass inside of the laser sensor near cloudy You may have to blink and that 	<ul style="list-style-type: none"> It should be taken to cloudy with a defroster Have. 2 The anti-fog on the front and side glass (defroster) use of Ikata P.138
		<ul style="list-style-type: none"> • When and snow is piled up in the hood You may have to blink 	<ul style="list-style-type: none"> • It should be such as to remove the snow on the hood Have.
		<ul style="list-style-type: none"> • laser sensor on the front glass top Flashing temperature Sir vicinity becomes irregularly 	<ul style="list-style-type: none"> • rate by , for example, lower the indoor temperature in the vicinity of the heater near the system will return the temperature is down.
		<ul style="list-style-type: none"> • brake system and there is an abnormality in the system -Time warning light (orange) lights up along with the 	<ul style="list-style-type: none"> The system does not work. With the please have it inspected at the dealer.
	Automatic Brake hold System indicator	<ul style="list-style-type: none"> • the power mode ON few seconds When you have on, off • Automatic brake hold system Arm is ON when the lighting of 	Automatic brake hold P.172
	Automatic Brake hold Indicator light	<ul style="list-style-type: none"> • the power mode ON few seconds When you have on, off • automatic brake hold actuation Illuminates when you have 	Automatic brake hold P.172

Information display and meter

Meter

The meter is also available in the speedometer, and fuel gauge.
Power mode is ON will be displayed when the mode.

■ Speedometer

The running speed km/h will display at.

■ fuel gauge

Show me remaining in the fuel tank, the amount of fuel.

■ tachometer

It will display the number of engine revolutions per minute.

1 fuel gauge

Advice

The fuel gauge once close to, to go refueled early
Please.
Engine're not ignite fuel when there is no
Ri, you may damage the catalytic converter.

And the remaining amount of fuel actually, the amount that is
displayed is different

1 tachometer

Advice

Limiting speed it can cause engine failure
Greater than or equal to the number (red zone) and driving so
that does not enter the
In particular, when shifting down to the high speed running
, Please note.

The select lever **R** And when, then the sky Bekasi
When was, and times lower than the limit rotational speed of the
rotational speed, and fuel for transmission protection
Supply fee will be stopped.

Total
Vesse
Of
See
Or
Was

Information Display

The Information display, odometer, trip meter, outside temperature display appears.


1 switching How to Display

Honda Inter nav system vehicles without
2 to adjust the time on the clock P.76

How to display switching

Total select / Each time you press the reset knob, the display will change as follows.

Vessel
Of
See
Or
Was

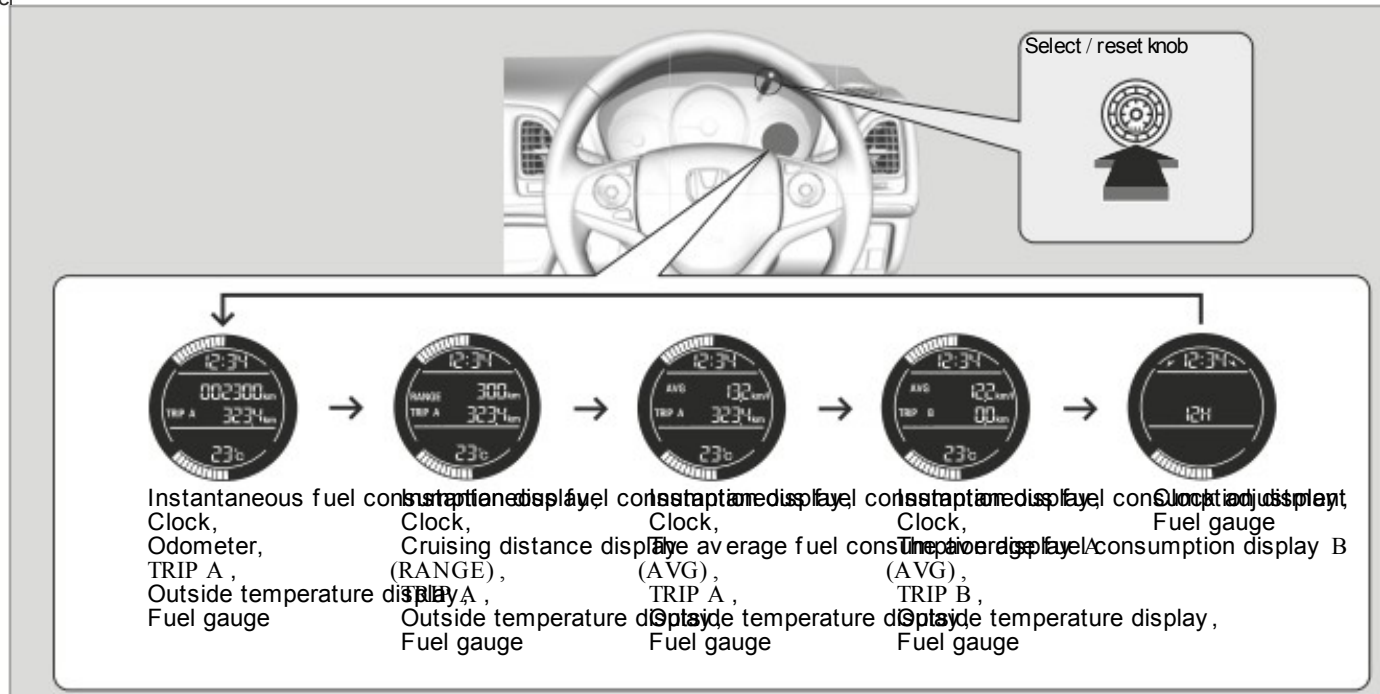

■ odometer

The total mileage km Show me at.

■ trip meter

The travel distance from the reset km Show me in.

Trip meter A and trip meter B there is, to be measured independently each Order 2 and you will be able to know the mileage of one.

■ To reset the trip meter

In a state that is displayed trip meter, select / press and hold the reset knob Please. Trip meter 0.0 will be reset to.

■ instantaneous fuel consumption display

On the bar graph the instantaneous fuel consumption km/ l l will display .

■ The average fuel consumption display (AVG)

Trip meter A , B in conjunction with, and updated at regular time intervals the average fuel consumption km/ l l Displays.

If you reset the trip meter, average fuel consumption display is also reset at the same time

■ cruising distance display (RANGE)

An estimated cruising distance based on the average fuel consumption and fuel remaining km they are displayed in.

1 trip meter

Trip meter A and trip meter B The select / switching by pressing the reset knob You.

Mileage trip meter 9999.9km the If it exceeds, 0.0 to return to.

Total Vesse Of See Or Was

1 average fuel consumption display (AVG)

Average fuel economy that is displayed, fuel economy actually may be different from the.

If a reset of the low speed running or stop time, Start the calculation of fuel consumption since I started traveling.

1 cruising distance display (RANGE)

Cruising distance that is displayed, cruising can actually There are times when it is different from the distance such.

■ outside temperature display

Displays by measuring the outside temperature.

■ To correct the outside temperature display

Total
Vessel
Of
See
Or
Was

If there is a difference in the temperature display of the meter and the outside air temperature, you can correct it. The correction value is the correction value you press and hold the reset knob, you want to set. Also, update the temperature readings to stabilize. Since they are not, it takes several minutes to update the temperature display.

1 outside temperature display

Temperature sensor is attached to the front bumper near Have.

Speed is about 30km / h when the following display is heat of the road surface, the heat of the engine, which is temperature ± 3 °C to be corrected in the range of Be. Be. Be.

Also, update the temperature readings to stabilize. Since they are not, it takes several minutes to update the temperature display.

The correction of outside temperature display, the temperature is stabilized. Please go.

The power mode ON when the mode, the outside air temperature in the following cases, outside temperature display will blink for a few seconds.

Operation of each part

In this chapter, I have described how to operate the various parts necessary for the operation.


Time settings	76	Switch operation of the handle around		Adjustment of the seat	113
Unlocking and locking of the door		ENGINE START / STOP switch	98	Headrest	120
Types and functions of key	77	Direction indicator (turn signal switch)	101	Armrest	122
Locking of the door outside the vehicle / unlocking		Light Switch	102	Interior lights / Indoor Equipment	123
Locked in the car / unlocking	85	Fog light switch	103	Air conditioner	
Childproof	87	Ring dial all headlight Les	104	Air conditioner vent	135
Opening and closing of the tailgate	92	Wiper / washer	105	How to use automatic air conditioning	136
Security system		Illumination control	107	Sensor of auto air conditioner	141
Immobilizer system	94	Riyadefurosuta / Hiteddodoami			
Security Alarm System	94	Error	108		
Opening and closing of the window	96	Front glass hot wire switch	108		
		Adjustment of the handle	109		
		Adjustment of the mirror class	110		

: by type and options, equipment is different.

Time settings

I adjust the time on the clock

Clock will be displayed in the information display.

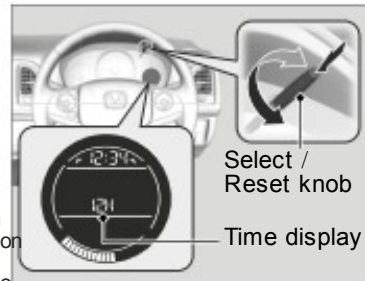

Each
Section
Of
Misao
Created

Honda Inter navi system vehicles without

1. select / If you press the reset knob, tone watch I want to display section.
 - u "hour", "minute" flashes.
2. select / Turn the reset knob, the time Fit.
 - Turn to the right : "minute" go.
 - u " 59 "hour" is and when it is more than " 1 hour and go.
 - Turn to the left : "minute" will return.
 - u " 00 "hour" is and when it is more than " one hour to return.
3. select / I press the reset knob.

Setup is now complete time. I was set on the screen
Time is displayed.

■ Select time display

1. select / If you press the reset knob to adjust the clock display .
 - u "hour", "minute" flashes.
2. select / I press and hold the reset knob.
 - u For each iteration of the length press, 12H / 24H / OFF to switch to.
 - u " 12h "or" 24h time display of the watch when you try to select the " 12 hours or 24 hours in I will switch.
 - u " OFF clock will be hidden If you select ".
3. select / I press the reset knob.

Display setting is completed time, it will be displayed on the screen.

1 I adjust the time on the clock


Honda Inter navi system vehicles

Clock uses information from an artificial satellite
Since, time adjustment is not required.
It is displayed in the information display
Clock is also linked to the clock display of the navigation system
Will.

Unlocking and locking of the door

Types and functions of key

This car, the following keys are included.

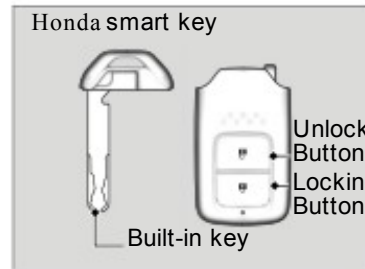

Starting of the engine, in addition to the stop, all
Locking doors, tailgate / can be used to unlock
You.

The buttons are attached to the keys, do all
A locked, the tailgate / it can do the unlocking
You.

1 types and functions of key

The key, immobilizer system with
There are. Immobilizer system, the vehicle
It is a system to protect from theft.
2 immobilizer system P.94

The key, precision electronic parts are built
You.

In order to prevent damage, please observe the following
points: direct sunlight, high temperature, high humidity

- Do not place
 - Do not drop the key, you do not place a heavy object
 - Do not apply the liquid to the key
 - you do not disassemble
 - it is not roasted in fire
 - of equipment magnetized TV, audio, etc.
- It is not or place it near

Electronic components of the key fails, start the engine
Kotogaa remote outgoing and dynamic may not work
You Ri.


If the key is no longer working correctly,
Honda please have it inspected at the dealer.

Each
Section
Of
Misao
Create

I continued on next page

77

■ Honda smart key

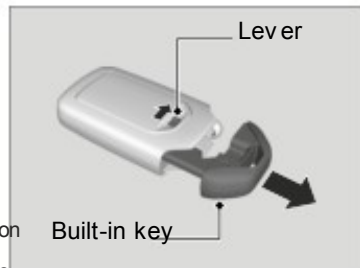

Each Section Of Misao Created

Honda car or when the battery of the smart key has expired. When the battery is raised, the built-in key Please use. The built-in key , remove while pulling the lever You.

When storing, the difference until it clicks into place. Then insert.

Honda I failed and consumption of the battery of the smart key In view of the time, built-in key Honda graphics Please keep housed in Matoki.

1 Honda smart key


Honda smart key, specified low power radio equipment It has received technical regulations conformity certification of. Please observe that.

- Use only in Japan
- Do not disassemble except during battery replacement
- Do not modify
- deliberately technical standards display that is internal to the

has expired
Please observe that.
The use of that decomposition, was modified by law
Has been prohibited.

2 Honda when the battery of the smart key has expired P.243

■ key number tag

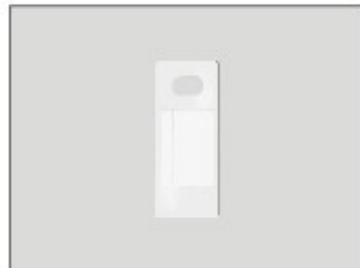

The key number tag, when you buy the key Number needed to have been described.

1 key number tag

Key number tag, other than a vehicle in addition to the key Please keep it in place. The key number tag, when you buy the key Number needed are listed. And key Do not store together, and the coercive carefully to the location of the vehicle other than when you have lost your key, add If you want to buy addition, Honda and ask the dealer , Please.

Honda weak radio wave of the smart key

Honda locking doors, tailgate using the smart key / when unlocking operation


When starting the engine or, Honda and vehicles in order to perform electronic verification of the smart key

Radio wave is originated from.

Therefore, unable to work or properly in the following cases, you can become an unstable operation

You may want to.

- When there is equipment that emits strong radio waves near
- Along with the notebook computer and communication equipment such as radios and mobile phones and Honda Smart
- When you or covered smart key or touching the metal objects

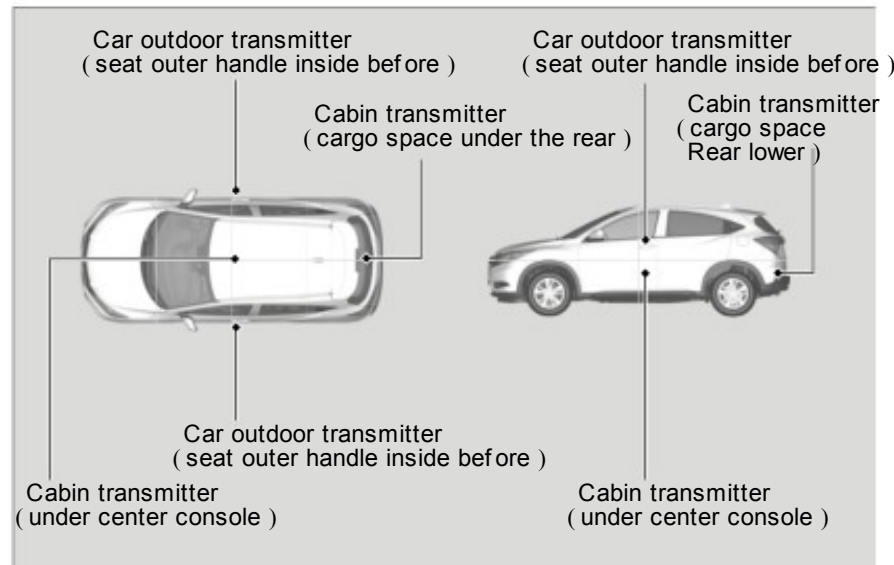

1 Honda weak radio wave of the smart key

C

Included planting and implantable cardiac pacemaker using a defibrillator seen, vehicle The transmitter mounted on the 22cm within Stay away from the

Honda Originating in the smart key system Radio waves are can affect the operation of the engine is a possibility. Use medical electronics If you have to, medical equipment manufacturers please use after confirming an effect on.

Honda smart key for communication with the vehicle In order to have a reception operation at all times, the battery consumption is always. The battery life, depending on the operating mode is different but about 2 years is.


In addition, it represents the batteries and continue to receive strong radio waves. PC and TV The Do not place near the appliance, such as emissions Sai.

Each Section Of Misao Create

Locking of the door outside the vehicle / unlocking

■ locking of the keyless entry / unlocking

Each Section Of Misao Created

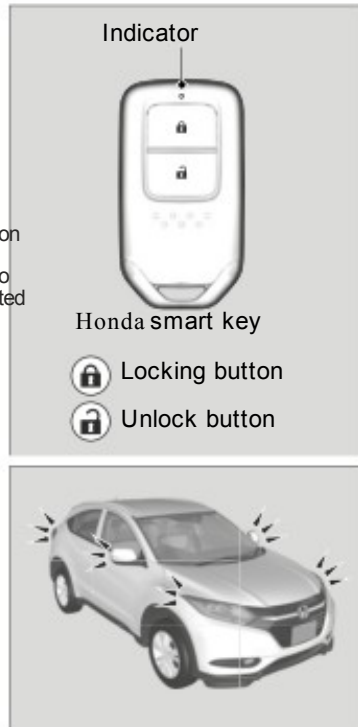

■ locking

I press the lock button.

- u very flashing indicator light 1 flashes once, all Door, tailgate is locked.

1 locking of the door outside the vehicle / unlocking

Power mode is OFF and key in modes other than And less entry Honda smart key The locked by/ unlocked, it can not be.

1 locking of the keyless entry / unlocking

30 Please open the door , the tailgate to within seconds. When the unlocking operation keyless entry, 30 If you do not open the door , the tailgate within seconds, re- It is locked in fine automatically.

When you press the unlock button, the room lights up. Position near the switch for the room lights to work with door Interior lights will light up and press Rutoki, the unlock button You.

About 30 and lockts seconds, you will gradually darker. 30 seconds with a keyless entry within, indoor Lights will turn off immediately. 2 interior light P.123

Keyless entry uses weak radio waves Operating range will change depending on the situation Night is ambient

When the door, tail gate is open, Can not be locked with a keyless entry.

■ unlocking

I press the unlock button.

- u hazard flasher is 2 flashes times, door, tailgate all unlocked Salema Be.

1 locking of the keyless entry / unlocking

If the working distance becomes unstable, consumption of battery will be considered and wear.

Indicator lights up when you press the button

If you do not want is a dead battery.


2 battery replacement procedures P.218

Each
Section
Of
Misao
Create

I continued on next page



81

■ Honda locking of the smart key / unlock

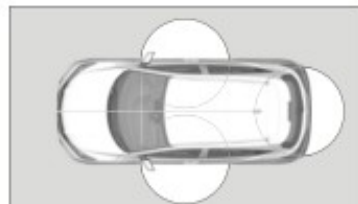

Each Section Of Misao Created

Locking / operating range of smart key

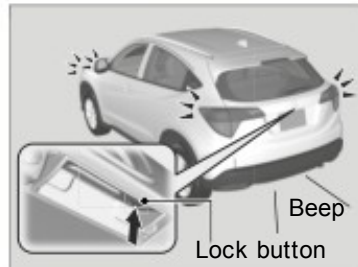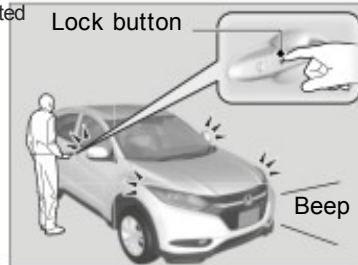

It's a good idea to have a smart key, Rokkubota
Tion, door handles, tailgate open
Door, tail by operating the switch
I will operate the unlocking and locking of the gate.
Locking doors, tailgate / unlocking is activated
Of the driver's seat door handle, front passenger seat Doaha
Bundle, or tailgate open switch
The Luo around about 80cm is within.


■ To lock the

Driver's door handle, front passenger seat Doahando
Press the lock button Lumpur, the tailgate
Be.

- u answer back sound of "beep" sounds
Hazard flasher is one blinks once, all
Door, tailgate is locked.

1 Honda locking of the smart key / unlock

- Honda driver is mobile, smart key car
Please do not get off, leaving the.
- In the same operating range Honda and mobile smart key
When there are people who are, and who do not carry
But the door handle and lock button, tail
Locked with a gate open switch / unlock operation is
- If you have to wear gloves and ski and leather
Huang, unlocking operation on the door handle may be
delayed. You want to or could not.
- within the operating range Honda and there is a smart key
Trees, large amounts of water, such as car wash Doahan and
when applied to the dollar, be unlocked There
Be.
- about locking after 2 seconds, also hold the door handle
You can not unlock operation.
- Subtracting immediately after holding the door handle, the
door You may not open. The grip the door handle
Do make sure that Rinaoshi, has been unlocked
Please Pull et al.
- tailgate open or vinegar door handle
About than switch 80cm even at a distance of less than,
Honda smart key is much higher and close to the ground
Sometimes it does not work when it is in the location.
- I should close the door or glass door, the tailgate
May not operate as being technique.

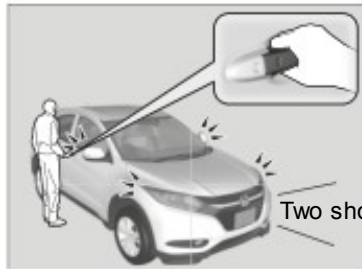


■ To be unlocked

Driver's door handle, front passenger seat door handle
Or hold, tailgate open switch

I press.

- u answer back sound of "beep" and Na
- Hazard flasher Ri is 2 flashes once, all
- Doors, tailgate is unlocked Salema
- Be.

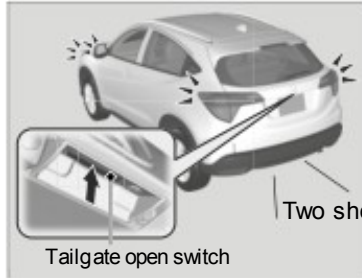

1 Honda locking of the smart key / unlock

When going to open the door, the tailgate to within seconds

Sai.

Honda When the unlocking operation in the smart key, 30 If you do not open the door, the tailgate to within seconds, It will be automatically locked again.

For customization features

Locking / setting of the answer-back tone sounds when

More information about customizing features Honda your

Each
Section
Of
Misao
Create

Customization feature	Settings that can be selected
Answer-back volume	Large [*] , small
Answer back sound working	Working [*] , non-operating

^{*}: factory settings

■ The locking of the insert the key / unlock



Each
Section
Of
Misao
Created

Turn it plugged in securely the internal key .

1 locking the insert of the key / unlock


Key operation on the driver's door

Locking Plug in the built-in key in the driver's seat door / Kajjosu

With that, all the doors of the other, the tailgate also the same

The lock at / will be unlocked.

■ locking of w ithout a key

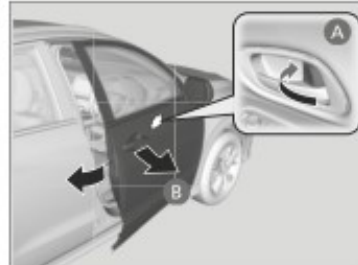

■ locking of the door of the driver's seat

Knob A Push the door handle on the outside B
Close the door while pulling the.

■ locking of the door of the driver's seat other than

Push the knob, and close the door.

1 of locking without a key

When locked with a driver's door, de all other

A tailgate will be locked at the same time.

To prevent, you have a key to the confinement key


Let's lock Make sure that.

■ prevention device confinement key

Honda If it is the smart key is placed within the operating range of the vehicle, can not be locked.

Locked in the car / unlocking

■ locking in knob / unlocking

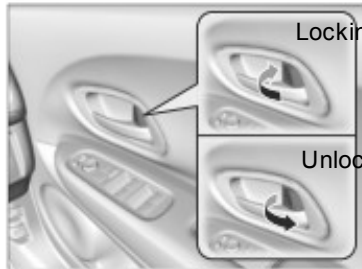

■ To lock the door
I will push the knob.

■ To be unlocked
I pull the knob.

1 lock in the knob / unlocking

The locking knob of the driver's door / and unlocking, other
Door, tailgate all also locked at the same time / solution
Is lock.

■ unlocking in the driver's seat door handle




Driver's seat door, facilities and pull the handle on the inside
Door opens, even if you lock.

Each
Section
Of
Misao
Create

I continued on next page

85

■ locking of the master door lock switch / unlocking

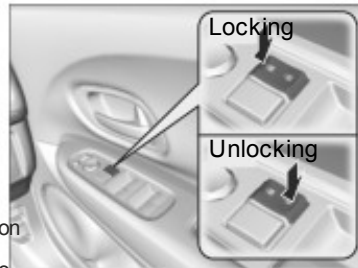

Each
Section
Of
Misao
Created

Lock the master door lock switch / unlocking
I will push the law.


1 lock on the master door lock switch / unlocking

The master door lock switch on the driver's door
The locking / unlocking and, all the doors of the other, tape
Rugeto also locked at the same time / will be unlocked.

Childproof

The child-proof, and that the children are thrown out of the vehicle, such as running. In order to prevent, it is possible regardless of the position of the knob, to open from the inside of the vehicle the rear door. This is a function to be no. Please use such as when you put on the rear seat the children.

■ set of child-proof

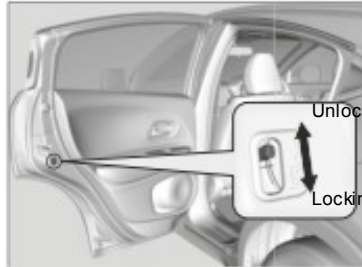

Close the door in the position.
 If you open the door
 I open the handle on the outside.

Impact sensing door unlock system

When an impact is applied to the vehicle, and then unlocking the door, the tailgate automatically to be unlocked. It is a system that.

And to operate it is in the following cases.

- The impact from the front : SRS when the air bag inflates,
- The impact from the side : side air bag / case of the side curtain air bag equipped vehicles
 At, side air bag / when the side curtain air bag inflates
- impact from the rear : when shock is large

In either case, approximately after receiving a shock in consideration of the safety 10 to unlock the seconds.

1 impact sensing door unlock system

The unlocked depending on the size and the way of the impact applied.

Each
Section
Of
Misao
Create

Auto door lock / auto door unlock

■ Auto door lock (vehicle speed linked)

The auto door lock, the vehicle speed is about 15km/h door, tail all becomes more
It is a function of the gate is locked automatically .

■ Auto door unlock (select lever over conjunction)

The select lever stepping on the brake pedal If you put in, door, tape all
This function Rugeto is unlocked automatically .

Each
Section
Of
Misao
Created

1 auto door lock / auto door unlock

Auto using the master door lock switch
Door lock / and over the conditions of the automatic door unlock
You can be customized.

2 auto door lock / auto door unlock settings

Customizing the constant P.89

Auto door lock / dregs of auto door unlock setting Tailoring

Customize the settings of auto door unlock and auto door lock (set change)
 You can be. Customization operation a row in the master door lock switch
 There are.

1 auto door lock / auto door unlock setting
 Customize

About customizing other functions,
 Honda , please contact your dealer.

■ Auto door lock / setting of auto door unlock

Settings of the auto door unlock and auto door lock is shown in the table below.

■ Auto door lock

Setting	Vehicle speed linked (factory setting)	Select lever linkage	Auto door lock OF (no)
Setting	The vehicle speed is about 10 km/h or more.	Select lever linkage	Settings that do not lock automatically
Content	When it comes to, and the engine is running, it locks automatically.	Select lever linkage	Settings that you want to lock automatically
	This is the setting you want to lock automatically.	Select lever linkage	Is.

■ Auto door unlock

Setting	Select lever linkage (factory setting)	Power mode in conjunction	Auto door unlock OF (no)
Setting	The stepping on the brake pedal	Power mode in conjunction	Setting you do not unlock automatically
Content	At cell Rekutoreba	Dokara Accessories	Is constant.
	The If you, it automatically	Mode or OFF mode	
	It is set to be unlocked to you do, automatically	It is set to be unlocked.	

Each
 Section
 Of
 Misao
 Create

I continued on next page

■ customization operation of auto door lock

Operating procedure	Vehicle speed linked (factory setting)	Select lever linkage	Auto door lock OF (no)
1. parking brake	Play	Play	Play
2. the driver's door	Close	Close	Open
3. the power mode	ON I to mode	ON I to mode	ON I to mode
4. the select lever	[P] I will except	[P] To	[P] To
5. master door lock Of switch	About the locking side 5 Press and hold seconds or more, then release the hand lock operation sound When you have		
6. the power mode	20 I want to accessory mode within seconds		
	u It becomes content to exit the setting, auto door lock is set		

Each Section Of Misao Created



■ customization operation of auto door unlock

Operating procedure	Select lever linkage (factory setting)	Power mode in conjunction	Auto door unlock OF (no)
1. parking brake	Play	Play	Play
2. the driver's door	Close	Close	Open
3. the power mode	ON I to mode	ON I to mode	ON I to mode
4. the select lever	P To	P I will except	P To
5. Ma graphics data over About Running inside of Of switch	At Running inside of you have	Press and hold or more seconds, then release the hand lock operation sound When	
6. the power mode	20 I want to accessory mode within seconds	u It becomes content to exit the setting, auto door unlock has set	



Each
Section
Of
Misao
Create

Opening and closing of the tailgate

Note the tail gate when opening and closing

When you open and close the tailgate, please note the following points.

- when opening the tailgate
 - tailgate open firmly to the upper.
 - If you do not only open up to the middle, you may close at its own weight.
 - day strong wind, to be careful not close are fanned by the wind.
 - Do not run while opening the tailgate.

Each u there is a possibility that the exhaust gas to enter the car.

Section
Of

Misao ■ When closing the tailgate

Created Honda to be careful NOT to leave the cargo space, the smart key .

1 note of the tail gate when opening and closing

C

When closing the tailgate, and bumped his head against the tailgate. Be careful not to pinch your hands or feet.

The loading and unloading baggage while applying the engine to, and so as not to stand in the rear of the exhaust pipe

May want to hurt an unexpected, such as burns You.

I open the tailgate



When it is unlocked, the tailgate O
Pull Press Pung switch.

1 I open the tailgate

When it is locked Honda smart key
And press the tailgate open switch by mobile
I pulled up as strike, so is unlocked
I can.
2 Honda locking of the smart key / unlock P.82

After you lock the driver's door, and tailgate
It is locked to a close the.

Each
Section
Of
Misao
Create

Security system

Immobilizer system

The immobilizer system, electronic component that emits a signal to the key incorporated in the immobilizer system. Yes, it is so can not start the engine and it will not key that has been registered in advance. It is the system was.

The immobilizer system, a weak and radio waves when performing electronic verification and key vehicle I use the. **ENGINE START / STOP** When you press, and It is important to note the following points: Sai.

- **ENGINE START / STOP** Keep away from those that emit strong radio waves near the
- You can exposed to the metal key, it is not or covered
- Keep away from the key immobilizer system of a vehicle other
- Do not install along with the key and key chain magnetized

Each
Section
Of
Misao
Created

Security Alarm System

Built-in key, security alarm system, or keyless entry
Honda When I opened the door, tailgate, bonnet without a smart key,
This system alarm device is activated.

■ If you operate

Horn sounds intermittently, hazard flasher will blink all.

■ In order to stop

Built-in key, or keyless entry Honda or unlocking the smart key, power
The mode ON, please mode. The system stops blinking and the horn also stopped
You.

1 immobilizer system

Please do not add or modify the system.
can cause the system to malfunction.

1 security alarm system

Please do not add or modify the system.
can cause the system to malfunction.

Alarm device is a security alarm system
Until it is stopped, maximum 5 and can be operated minutes.
Hazard flasher and horn, one for the operation of the times
Per about 30 to operate seconds, the alarm actuation maximum
10 done once.

■ To set

Security alarm system is automatically set when the following conditions are ready

- Power mode is OFF in a mode
- hood is closed
- Built-in key , or keyless entry Honda doors and all the smart key Tailgate is locked

■ When it is set

Operating indicator light in the meter flashes, about 15 flashing interval is longer in seconds later

■ To cancel the set

Built-in key , or keyless entry Honda or unlocking the smart key , pa

The Power Mode ON it will be canceled and the mode. Actuation indicator is unlit at the same time. Be.

1 security alarm system

Window is opened or when a person is riding in the car

Even when you have the stomach, security alarm Shea System will operate.

In order to prevent the actuation of unexpected warning device, when the window is open you can not ride

Is, set the security alarm system

Please do not.

I have set the security alarm system

Battery rises later , the charge of the battery

Electricity, and the exchange, that the alarm device is activated

I There is.

At the same time, built-in key, or keyless entry

The other Honda and unlocks the door smart key, allowed

And be sure to release the Curie tee alarm system

Have.

Each Section Of Misao Create

Opening and closing of the window

Opening and closing of the power window

Power mode is ON that in mode, opening and closing operation of the power window can be done. I will do the switch located on the door of each opening and closing. Vinegar driver's seat. In the match, you can perform the opening and closing operation of the window a


Opening and closing of the window of the driver's seat other than the power window can be done from the time you. OFF can be done from the time you.

The power window lock button OFF When you, indicator light in the switch is off

Each Section Of Misao Created

Will. The power window lock button (ON indicator lights up) After you have a, other than the power window does not work. So when you are carrying a child, and power window lock button ON Please leave this.

■ opening and closing of the window of the automatic shut-off function

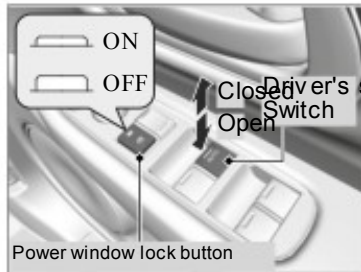

- manually opening and closing
 - when it is open : Lightly press the switch
 - When closing : to raise the switch lightly
 - By releasing the hand in the desired position, the window will automatically stop.

- Auto Opener
 - when it is open : press strongly switch
 - When closing : to raise strongly switch
 - I fully open automatically / will fully closed. To stop the window, raise lightly on the opposite side of the switch

W

When closing the power window is, passenger side window is not to be used or face from the window.

I sandwich the power window hands or face

And, there is a possibility that the bear serious injury to children in particular.

C

To be careful not pinched your fingers.


In order to close securely, part just before the power window is closed, there are areas not detect the scissors included

The power mode OFF even if the mode, about 10 minutes after automatic openers by key-off operation

I can open and close the power window of Noh with. In this case, when you open and close the door of the driver's seat, you will be able to open and close the Ndo.

Automatic power window automatic opening and closing function is available. Obstacles when you are close to the window, movement of the window by rust included prevention mechanism will decrease. Will stop and reverse.

■ opening and closing of the window without automatic shut-off feature

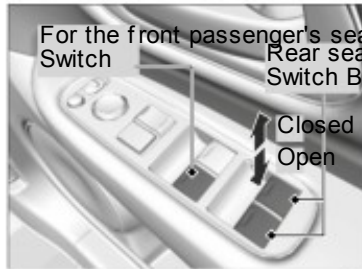

Passenger seat , rear seat switch



when it is open : press the switch

When closing : raise the switch

releasing the hand in the desired position, the opening and closing of the window

Adjust.

opening and closing of the power window

Rear seat (left, right) of the window does not fully open.


Each Section Of Misao Create

Switch operation of the handle around

ENGINE START / STOP switch

How to switched mode power

Each Section Of Misao Created

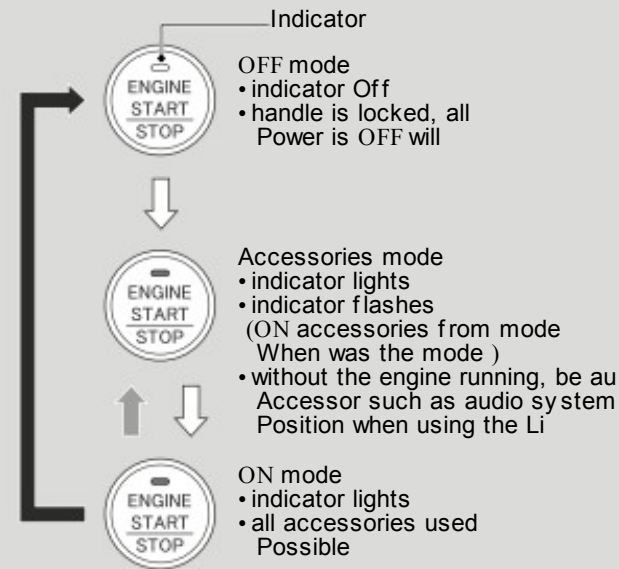


(state of not stepping on the brake pedal)

- I press the switch
- The select lever When other than, I press the switch
- The select lever When I press the switch

1 ENGINE START / STOP switch

Honda engine when the car is in the smart key I can start the down. Function of the engine start-up is created Range of dough, instrument panel, Glove box or cargo space, Doapo It is a car with the exception of the various glove compartment of such packets.

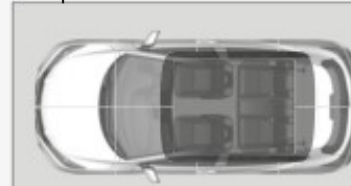

Operating range of the engine start-up

Honda even to the outside of the vehicle is the smart key, the ~~top~~ are too close to the door glass and plays There is that the startup of emissions can be.

ON mode :
when the engine has been started, and indicator Ter is turned off.

Power mode is OFF accessories from mode
If you are not switched to the mode, handle I will unlock
While turning to the left or right handle, **ENGINE START / STOP** Please press. Ha Ndurorokku will be canceled.

■ Power mode auto-off function

The select lever **P** At power mode when the accessory mode 30 minutes to 60
When the minute elapsed, power mode automatically because the battery protection OFF and the same mode
It will be like.
Handle is not locked at this time. And also keyless entry
Honda locking with smart key / unlock will not be able to.

ENGINE START / STOP gain the power mode by pressing the OFF to go switch to mode
Please.

■ Power mode warning buzzer

If you open the driver's door in an attempt to leave the car in the next state, a warning buzzer will sound
Be.

- Power mode when the accessory mode

1 ENGINE START / STOP switch

Honda when the battery of the smart key is exhausted
Is information di with buzzer
Warning appears on the display.

2 Honda when the battery of the smart key has expired
P.243

Each
Section
Of
Misao
Create

■ Honda warning carried away smart key



Each
Section
Of
Misao
Created

The warning buzzer, car alarm buzzer (beep Beep beep beep beep beep) outside the vehicle and warnings Buzzer (Pipipipipi) of 2 is also available.

When a warning condition persists, the Honda Smart Please change the mobile position of the key .

■ power mode is ON when the mode

Honda brought out to the outside of the vehicle door smart key When closed, and displays a warning to the meter. With, the outside of the vehicle warning and units car warning buzzer Heater will sound.

■ Power mode accessories mode

When the Honda brought out to the outside of the vehicle door smart key When closing the, outside warning buzzer will sound.

1 Honda warning carried away smart key

Within the operating range of the engine start-up and Honda Smart you close the door and return the key, release the warning and warnings will.

Honda and instrument path, the smart key

If you place Nell, and glove box,

There is a warning buzzer sounds by the radio wave condition You.

Honda in the state that brought out the smart key, pa

The Power Mode OFF When you mode, power I will not be in operation mode.


When you operate the power mode, Honda graphics I will make sure that you have a Matoki Sai.

When passing through the window, Honda smart key warning does not work and taken away.

Honda smart key operating range of the engine start-up Even in 圏内, to radio wave conditions and the surrounding environment warning is performed by taking away the smart key Might cause.

This is not a malfunction, and Honda Smart Please make sure that you have the key.

Direction indicator (turn signal switch)

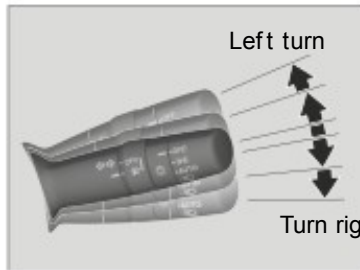

Power mode is ON in use at the time of the mode
You can.

■ One-touch turn signal

Press down lightly on the lever and / When you release pushed up,
Direction indicator display lights and direction indicator is 3 to blink
You.

Each
Section
Of
Misao
Create

Light Switch



Each Section Of Misao Created

Car side lamp, tail lamp, number-plate light There lighting

Headlights, car width lamp, Tail light, number-plate light is lit

Power mode is ON mode The brightness of the outside of the vehicle when the de Car side lamp, tail lamp, turn depending Issue lights, headlights self-Lights in motion / Off

It related to the power mode When you turn the switch more, Lights / turn off.

■ high beam The press on the lever forward until it "clicks" Will.

■ low beam When the high beam, and Pull the lever

■ overtaking signal (passing) The Pull the lever, then release.

■ headlight auto-off function

The power mode OFF in the mode, Honda all doors, tape smart key When you lock the Rugeto, headlights, car side lamp, tail lamp, an instrument and number-plate light Lighting Ntopaneru will turn off.

The light switch **AUTO** the power mode when you're on the OFF to the mode I will go out with.

- u The lights again opened the driver's door, a warning buzzer will sound and forgetting to turn off lights Be.

switch

The power mode and stays on the light and OFF

When the mode, when opening the door on the driver's seat Warning buzzer will sound and forgetting to turn off lights on.

The lights is lit, the indicator of the meter But I will light. 2 indicator P.65

The point of the lights on when the engine is stopped If you leave that was lit, it goes up battery It may cause.

Automatic light control vehicles

Illuminance sensing section, located in the position shown in Please sensing pit anything on top of the.

Illuminance sensing section

Fog light switch



Is the light switch OFF When other than (write-through switch

Match AUTO When you have to is, width indicator

But when it is lit) to, and fog light switcher

You can be lit by turning the switch.


示灯 lights.

2 indicator P.65

Each
Section
Of
Misao
Create

: by type and options, equipment is different.

Ring dial all headlight Les

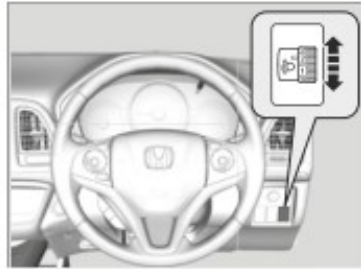

Each
Section
Of
Misao
Created

■ a measure of the dial position

Depending on the amount of luggage and the number of occupants, please select a dial position as a guide to the table below.

Loading situation of cargo space and crew	Dial position
When riding only the driver's seat	0
And when riding in the passenger seat and the driver's seat	
5 people when riding	One
5 cargo space full at the time of passengers	Two
Cargo space full-time ride in the driver's seat only	Three

Power mode is ON when the mode, head

Direction to illuminate the light (optical axis) adjusted downward
You can be.

Optical axis downward higher the number of dial is
Will be.

1 ring dial all headlight Les

adjusted downward
Please go from back into position.

LED headlights vehicles

Such as the loading time of heavy luggage, a change in the attitude of the vehicle
The automatic vertical direction of the headlight optical axis depending on all Otres to adjust to is equipped with
You.


When you feel an abnormality of the headlight axis

Honda please have it inspected at the dealer.

Wiper / washer

Power mode ON I can use at the time of the mode.

■ Front wiper / washer

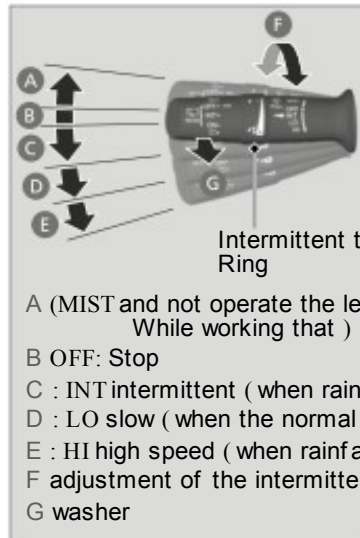

■ MIST

While pushing up the lever, I will work.
 I use it when the light rain and fog.

■ wiper switch (OFF , INT , LO , HI)

Use select an appropriate position by rainfall Be.

■ adjustment of the intermittent time

Turn the ring, adjusting the time of the intermittent wiper You section.

■ washer switch

And pull the lever to the front, and washer fluid

And injection.

Wiper is activated while you are pulling the lever and becomes fast a few seconds when. Also, the sum at several times wiper is activated then, when you release the lever

I will stop Te.

1 wiper / washer

C

Windshield to warm up the cold weather As not to inject the washer fluid. And interfere with the visibility washer fluid is The result, there is a risk that leads to accidents You.

Advice

If the washer fluid does not come out, the switch Please cut.
 The cause of the pump failure.

During cold weather, wiper blade Gala by freeze You may get stuck in the nest.
 It can cause failure of the wiper, Defurosu Windshield ray or heat ter The Dan windshield From Umate, please actuate the wiper.

Advice

Please do not wipe the wiper.
 Glass was damage to the blade rubber and scratched You Rishi.


Intermittent operation, the interval is stopped when the vehicle speed becomes faster a few seconds when. Also, the sum at several times wiper is activated then, when you release the lever I'm turning in full to the shorter the intermittent time When the vehicle speed becomes faster in the state, whether Intermittent low speed operation.

Each Section Of Misao Create

: by type and options, equipment is different.

I continued on next page

■ Rear wiper / washer

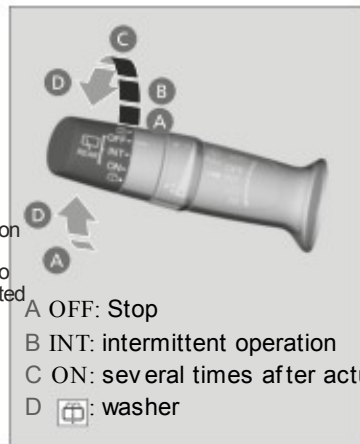

■ Rear wiper switch (OFF , INT , ON)

Several times after the operation, the wiper slow or intermittent Will operate.

■ washer switch

The switch When you turn up, washer fluid But I injection. Wiper is activated while turning the switch several times wiper is activated then, when you You stop after.

■ Reverse interlock mode



The selector lever to the front wiper during operation wiper operates when placed in Will.

Operating mode of the operating mode rear wiper lever position of the front wiper	
IN (intermittent)	Intermittent operation
LO (low speed)	Continuous operation
H (high speed)	

1 wiper / washer

Wiper such as snow accumulates on the wiper during operation When you are stopped, it's going to stop in a safe place Sai.
 The wiper switch OFF and evil, the power mode Back or Sally mode OFF it after mode,
 The removal of the obstacles wiper to be able to operate , Please.
 The wiper motor, the Department as a protective function I have a built-in Reka.
 Load state of the wiper motor is large followed release the switch Such as when was, to temporarily breaker is activated You may wiper stops.
 When after a few minutes, the breaker is restored, usually I will be able to use the street.

Illumination control

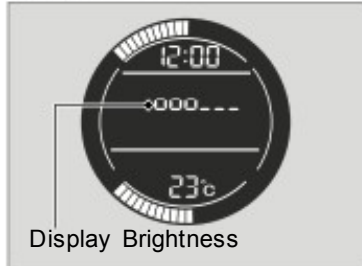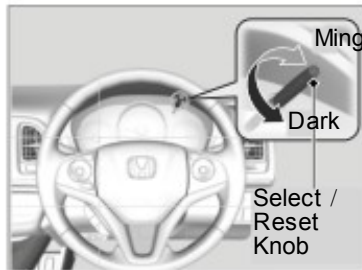

Power mode is ON when the mode, select / of the instrument panel in the reset knob
 You can adjust the brightness.
 Brighten : I turn the knob to the right
 Darken : I turn the knob to the left

Brightness is maximum / beeper will sound and a minimum
 Be.
 In addition, after adjustment of brightness, and after a few seconds
 Display will return to the original display .

■ Display Brightness

Select / display by turning the reset knob
 Stomach display changes to the brightness adjustment
 But enough to go more to the right, instrumentation
 Topaneru lighting becomes brighter.

1 Illumination Control

Auto light vehicles without
 Is the light switch OFF When other than the glare
 In order to reduce the, instrument panel
 Lighting will be dimmed.

Auto light vehicles
 Is the light switch OFF Ambient and dark other than
 Since the trees, to reduce the glare, an instrument
 Ntopaneru lighting will be dimmed.
 after a few seconds

Instrument panel lighting is dim
 When you are not in some cases, the brightness respectively
 You can adjust.

- instrument panel lighting is dim
- When the vehicle width light is off all the display is
 Select it until no / and left the reset knob
 Turning the brightness will be minimum. And this
 Brightness or riding come, and to light the width indicator
 Minimum state is released, returns to the original brightness
 Be.



Each
 Sectio
 Of
 Misao
 Create

Riyadefurosuta / Heated door mirrors



Each Section Of Misao Created

Power mode is ON when the mode, rear It warms the door mirror and glass, it was take a cloudy I use to Itoki.

 /  System by pressing the icon ON to Will.

Approximately in accordance with the outside temperature 10 to 30 and elapsed minutes, The system will stop automatically. However, Outside temperature is 0 °C and stops automatically when the following Does not.

1 Riyadefurosuta / Heated door mirrors

Advice


When cleaning the inside of the rear window is heating wire Please be careful not to damage the.

Sure, left and right side along the heating wire defroster Please wipe over there.

Power consumption is large This device preparative haze When Off, please to.

Moreover, the long time when the rotational speed of the engine is low Please do not use. Battery capacity is reduced that is, it affects the engine start-up There Be.

Front glass hot wire switch

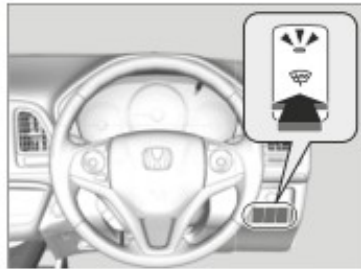

Power mode is ON when the mode, Freon To warm the bottom edge of the Togarasu, freezing over on kind of the snow I prevent damage to the wiper blade rubber by I can.

When you press the switch, the front glass hot wire ON you will.

About 15 minutes after, it will stop automatically.


1 front glass hot wire switch

Power consumption is large This device preparative haze When Off, please to.

Moreover, the long time when the rotational speed of the engine is low Battery capacity is reduced when you use, engine There can affect the start-up emissions.

Adjustment of the handle

As the handle grasped comfortably in a suitable driving position, to adjust the position of the handle I can.

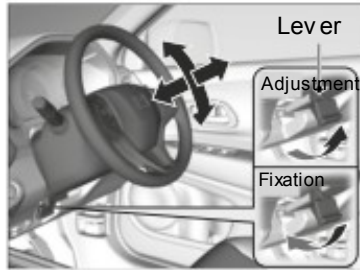

1. I raise the handle position adjustment lever.
u handle position adjustment lever, Koramuka Located on the bottom of the bar.
2. I to adjust the position of the handle.
The u at a position adjustment, indicator lights and meters Please make sure that you look.
3. Press down on the handle position adjustment lever, I will secure the bundle.

C


Do not adjust the steering wheel position during traveling. When adjusted to running, handle position is that it can, it can not be precise steering. There is a risk incurring serious injury in collision. There are. Adjustment of the handle, always passed go to.

Position after adjustment, the power of the upper and lower longitudinal direction to the handle, created and the handle is not moving. Please check the door.

Each Section Of Misao

Adjustment of the mirror class

Room mirror

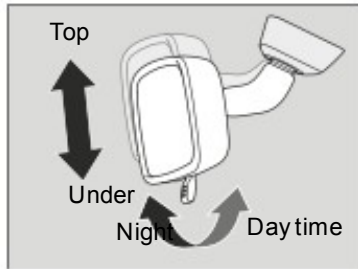


Each
Section
Of
Misao
Created

Angle of the room mirror, the correct driving posture, adjustment of the mirror class
And be sure to adjust the mirror at the position where you were sitting.
Adjustment of the mirror is kind, do so before riding
Have.

- anti-glare rearview mirror equation
When driving at night, room mirror head of the following vehicles
Switching the order to weaken the reflection of Doraito
I can.

Door mirror

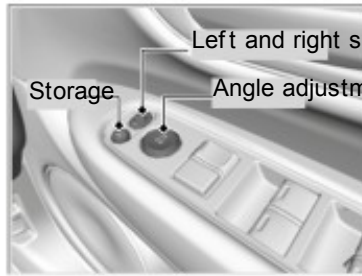

Operation of the door mirror, power mode ON
Left and right switching window at the time of the mode.

■ angle adjustment

Left and right selector switch : right or left to select the 扱 be that
Is a switch. After adjusting the angle, the position of the center
Return.

Angle adjustment switch : top down left right on the mirror surface and the dynamic or
Is to switch.

■ store

Each time you press the storage switch ON and OFF is Off
I will instead Ri.

	Storage switch of the mirror	
	State Ji	State
ON		
OFF		

Each
Section
Of
Misao
Create

Prism under-mirror


It is attached to the bottom of the passenger side door mirror.

This is useful when you want to check the left side of the vehicle near the passenger seat, such as when starting or when the vehicle is stopped.

Prism under-mirror



Each Section Of Misao Created

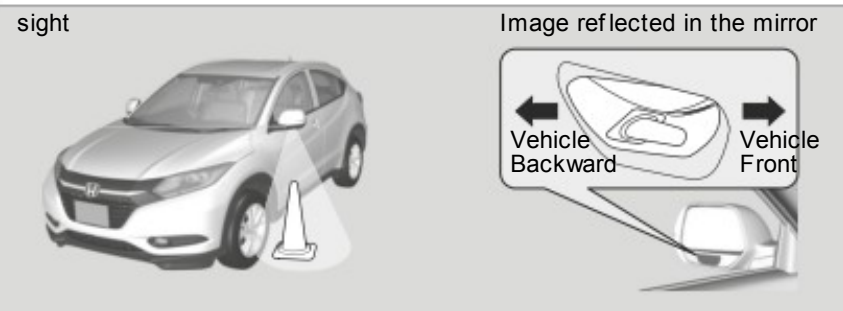

1 prism under-mirror

Construction for visibility due to fogging and scratching of the mirror surface.

Please observe the following in order to prevent.

- allowed to attach the wax and water repellent on the mirror surface
- when the mirror surface is frozen Ya deicer Without using a plastic plate, and water and hot water Dissolve with the way water
- oil film take-agent cloth or with a sand (a compound Etc.) Do not rub the surface with a mirror

You can check the direct visual confirmation of the rear of the vehicle. Please use enough room mirror, door mirror, etc. , Please.

Angular adjustment of the prism under-mirror can Does not.

And wipe with a clean cloth when you wipe off any dirt or drop of water. Please take care.

Or if the dirt of the mirror does not fall in the wash, If you've applied waxes and the like by mistake Is seen in the soft cloth with a mild household detergent Please wipe the error surface.

Adjustment of the seat

Front seat


Driver, to adjust the seat to take a correct driving posture.

The correct driving posture, in a state that is deeply seated in the seat, that the release the backrest from the back

The fully depress the brake pedal without having to have the attitude that you can comfortably handle operation

There are.

■ Front seat / how to move the headrest

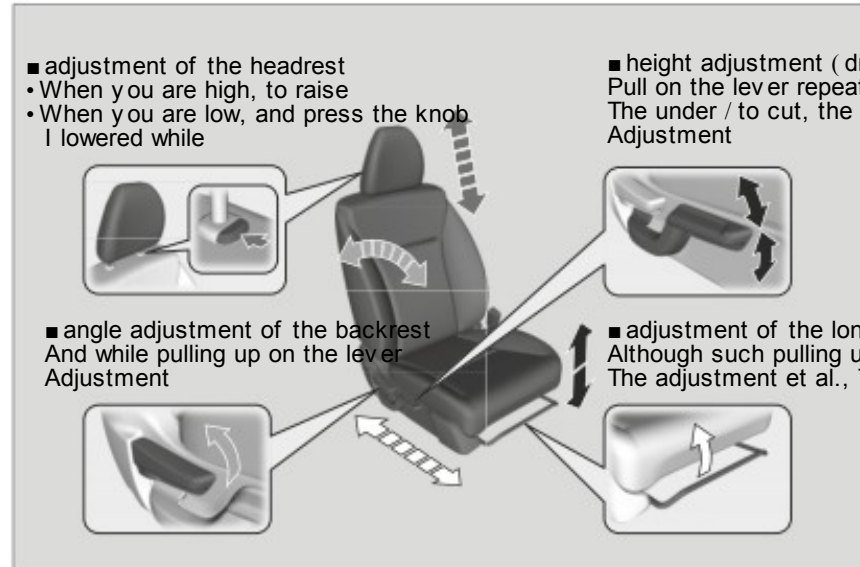

1 front seat / how to move the headrest

C

Although not adjust the seat while driving.

Seat moves more than necessary when adjusted. Sometimes, may lead to an unexpected accident. There are. Done before riding adjustment, please make sure that you are.

When working with sheet, and hands and feet Be careful enough to avoid summary.

Do not place any objects under the front seat. Sheet is not fixed things caught, it seems there is a possibility that it may lead to unexpected accidents.

Front seats, as much as possible from the air bag Please adjust the position away.

Sitting in the seat is also deeply passenger, from the backrest Please do not let the back


The seat cover of non-genuine on the front seat Please do not install.

I continued on next page

113

Each Section Misao Create

■ adjustment of the front seats

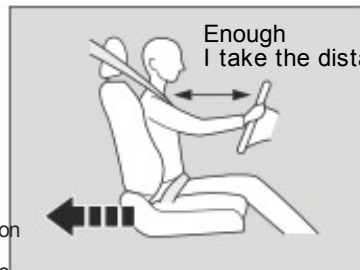

Each Section Of Misao Created



■ adjustment of the seat position

And a sufficient distance between the steering wheel and driver's seat, under the back seat as much as possible Masu below.

Sheet of the passenger of the front passenger seat, is similarly de- Shubodo of SRS as much as possible from the air bag I will lower the seat to a position away.

After you adjust the position of the seat, back and forth sheet Make sure that the rock, and is fixed.

■ adjustment of the backrest angle

Perched deep in the seat, it is sit in a comfortable position I will adjust the backrest causes as.

Seat passenger of a passenger seat likewise, effortless appearance And to adjust the backrest angle so as to be safe You.

1 adjustment of the front seats

W

SRS Cry was as far away as possible from the air bag. I will lower the seat to position.

I too close to the dashboard and steering wheel seat, is similarly de- And, it is significant when the front air bag inflates Fear you or injured Na, or to death

I There is. After you adjust the position of the seat, back and forth sheet

The not tilt more than necessary backrest. Defeat more than necessary the backrest, and collided receive a serious injury to a tree, you can't the risk.


C

Enter a cushion between the back and backrest Are not.

It does not take the correct driving posture. In addition, sheet as a belt is not sufficiently exhibited.

Rear seat

■ adjustment of the backrest

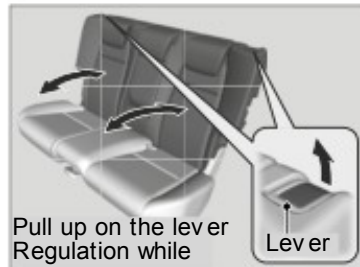

The backrest, be manipulated left and right sep
You can. Pull the lever, the angle of the backrest
I will adjust the.

1 rear seat

C

Although not adjust the seat while driving.
Sheet is moving more than necessary and
adjusted to running.
There is. Is performed before riding regulation,
ensure that it is fixed to the
Have.


When working with sheet, and hands and feet
Be careful enough to avoid summary .

Each
Section
Of
Misao
Create

I continued on next page

115

to be fixed by the flip-up seat surface (tip-up)

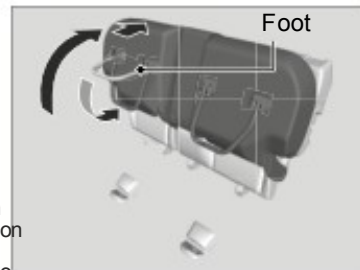

Each Section Of Misao Created

Seat, can be left and right separately Haneage You.

How to flip-up of the seat surface

Left

1. I to accommodate the armrest.

Comr

2. I raise the seat surface.

3. foot while pressed against the backrest the seat surface The stores, to be fixed.

1 is fixed by the flip-up seat surface (tip-up)


C

When returning and when flip-up seat surface and seat is fixed securely to rock it around the surface I will confirm that. If it is not fixed, your seat plane fall before There you have it.

When returning the seat surface, check the following:

- whether there is any foreign matter to Area Guide
- whether mat is shifted, take the guide
- Do not raise
- to put the seat belt and things under the seat
- Do not

Dari caught up foreign matter, the foot is wood guide is to ensure that the bearing surface is not Not, that the seat surface is unexpected bounce therefore should result.

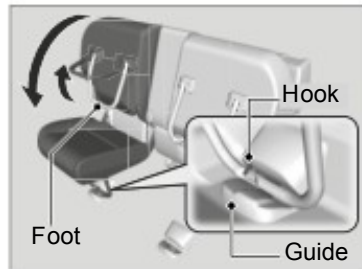

■ how to return

1. while holding the seat surface, a lot of foot rest is open.
 and your hands always seat surface is fall down before
 Please operate Te.
2. Kill forward gently seat surface, and the foot rest is put on the latitude.
 make that hook is coming out from the guide.
 Please be sure.

1 is fixed by the flip-up seat surface (tip-up)

Do you do not knock over the seat surface in the state that contains the foot rest.

Advice

When returning the seat, seat belt and buckles Please be careful not to the interleaved.

You can not wear properly and is sandwiched.


Kotogaa buckles and seat belt may be damaged

You Ri.

Each Section Of Misao Create

I continued on next page

■ How to defeat of the backrest

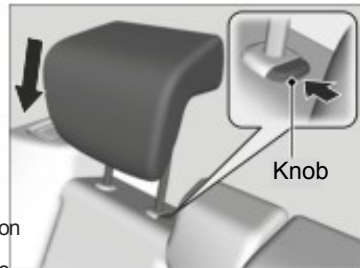

Each
Section
Of
Misao
Created

The wide cargo space to defeat the rear seat
You can.

I can be done by one side independently.

■ How to defeat

1. Separation-houses the three-point seat belt in the middle
To.
- 2 separate retractable seat belt P.31
2. Lower the headrest, to yield the armrest
To pay.

1 How to defeat of the backrest

C

I manipulate the sheet while applying the engine
When it does not stand in the rear of the exhaust
MAY want to hurt an unexpected, such as burns
You.

In the middle

In the following cases, the headrest seat

Note that it is easy to catch in the back pocket

Please do.

- When you kill behind the backrest of the front seat
- Li thing while it still contains the seat back pocket
When storing Yashito

Advice

Check around the sheet before storing the sheet

, Please. The seat belt and objects on top of sheet


The Do is not operated I left the doors and buckle

Sai.

Kotogaa buckles and seat belt may be damaged

You Ri.

Ha luggage, etc. where they are housed and seating surface of
Please operate it from Doke Luo advance.

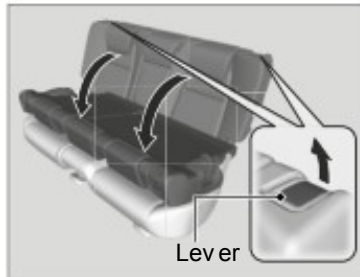

3. Pull the lever of the backrest and defeat forward to defeat of the backrest

■ how to return

You secure it by causing the backrest.

Make sure that if you return to the original sheet, and extortion sheet back and forth, and is fixed.
You.

When you defeat the backrest, the load of cargo space
Please fix things, etc..
Fear that jump out, such as when the sudden stop There
Be.

When storing the sheet to the bottom sheet
Do you not operate I left the seat belt and
Please.


When you cause a backrest, back seat belts
I will be careful not interleaved by leaning
Sai.

You can not wear properly and is sandwiched.
There is a seat belt may be damaged.

Each
Section
Of
Misao
Create

Headrest

■ adjustment of the front seat headrests

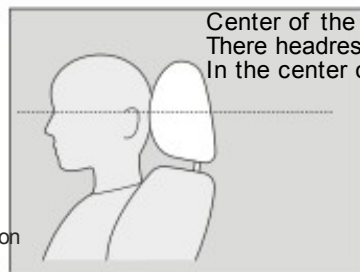

Each Section Of Misao Created

Center of the back of the head is, come to the There headrest I will adjust the height of the headrest to use. In the center of the

When you are high : raising the headrest

When to lower : to lower while pressing the knob

1 headrest


W

Headrest, you can adjust to the correct position ~~the~~ always

Height of the headrest is not appropriate, head Dressed effect is low, when colliding There is a risk of sustaining serious injury.

The not drive to disconnect the headrest. May suffer a serious injury in the event of a collision.

■ position change of the rear seat headrest

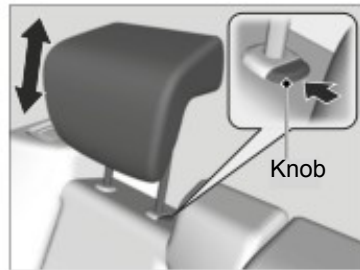

When you ride, headless prior to traveling Pull up the door is secured appropriately .

When you are high : raising the headrest

When to lower : to lower while pressing the knob

1 position change of the rear seat headrest

W

Not run at reduced headrest.

May suffer a serious injury in the event of a collision.

■ mounting and removal of the headrest

Headrest can be removed for repair or cleaning.

Removing the headrest :

Pull up on the headrest, and then remove it by pressing the knob.

Mounting of the headrest :

Please insert the original position the legs of the headrest. Head while pressing the knob


Please match the appropriate position, a position of rest. Lightly up and down the headrest

Not, I will securely .

Each
Section
Of
Misao
Create

Armrest


■ Front seat armrest

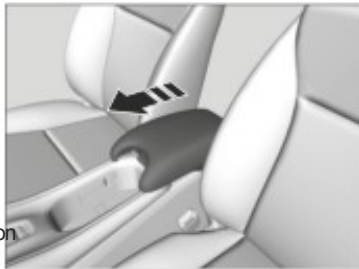

The motion before the center console box, in the
You can use it to lend.

Each
Section
Of
Misao
Created

■ operation of the rear seat armrest

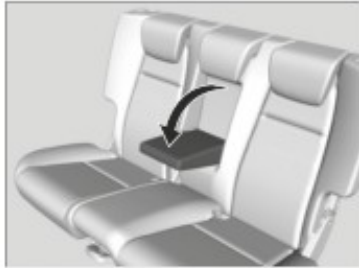

It is used to defeat before.

1 armrest

C


Hit the armrest to the seat belt when worn
Not apply.

It is possible to demonstrate the ability of the seat
belt, at the time of the event.
Not, there is a possibility that the bear serious
injury.

Do not put your luggage you can put the hip in armrest
Please do not add any large force.
There is a possibility that the armrest may be damaged.

Interior light

■ interior light switch

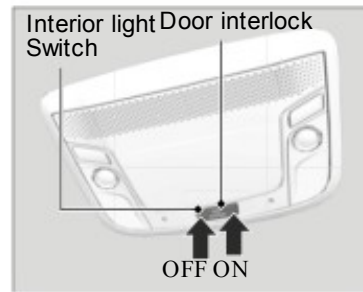

■ ON

Interior light is lit and not related to the opening and closing of the door.

■ door interlocking

Interior light is lit when the following.

- When you open the door of any
- When you unlock the driver's door
- the power mode OFF when it was in mode

■ OFF

Interior light is off, regardless of the opening and closing of the door.

1 interior light

If the interior light is lit at the door interlock, the door

About it and close the 30 and then turns off in seconds.

In the case of below 30 and then turns off in seconds.

- When you do not open the door to unlock the driver's door
- the power mode OFF and open the door in the mode
When it was not

In addition, interior lights show as soon as you do the following.

- When you lock the door of the driver's seat
- Power mode is OFF door state of the mode other than
When it was not
- the power mode ON when it was in mode

Power mode is OFF when the mode, either


If you leave opened the door Kano, about 15 minutes after the
Turns off.

Each
Section
Of
Misao
Create

I continued on next page

123

map lamp

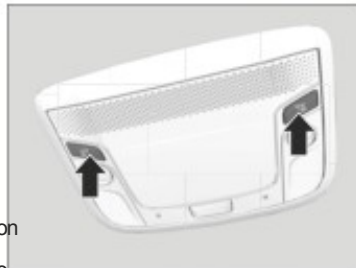

■ Front seat map lamp

Used, such as when you view the map and parked at night, the car
It is the light that iodine.

It lights up when you press the switch, and press it again
Turns off.

Each
Section
Of
Misao
Created



■ rear seat map lamp

It lights up when you press the switch, and press it again
Turns off.


1 map lamp

Rear seat map lamp

It can not be turned off when you press the switch when the
It can not be turned off when you press the switch when the

- interior light switch is ON when the
- the door is open in door interlocking interior light switch

■ cargo space lighting

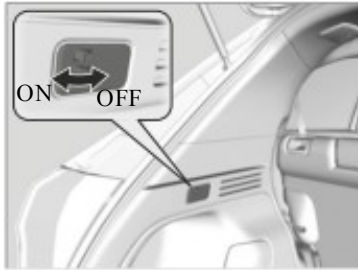


- ON
It lights up when opening the tailgate, it is closed Off.
- OFF
Off regardless of the opening and closing of the tailgate.

Each
Section
Of
Misao
Create

Indoor Equipment

■ glove box

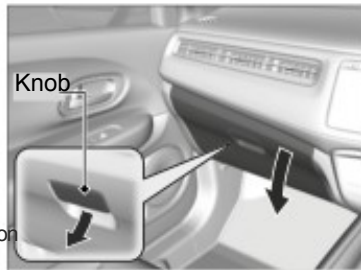

Each
Section
Of
Misao
Created

You open it and pull the knob.

1 glove box

W

I close the glove box is always running.
Glove box is open, collide
Possibility that the passenger bear serious injury
whereas.

■ center console box




You open it and pull the knob.

Each
Section
Of
Misao
Create

I continued on next page

127

■ cargo floor box

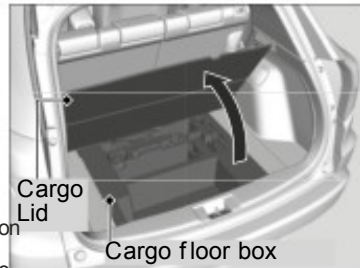

Each
Section
Of
Misao
Created


I will open the Kagoriddo.

1 cargo floor box

C

Do not do out of the luggage while driving.
The tuna in unexpected accident when such as
sudden braking
There is a possibility that wants.

■ Front seat drink holder

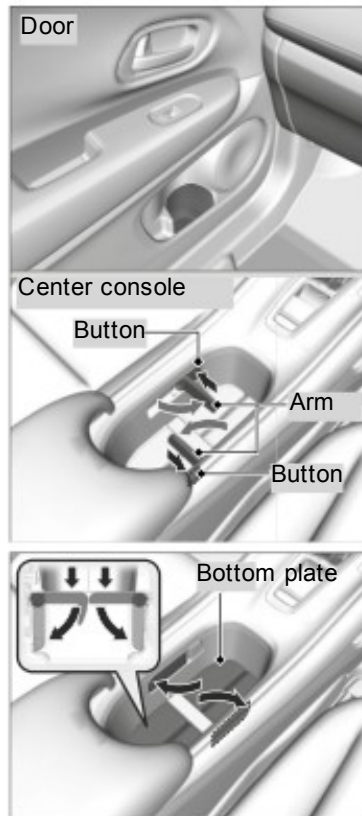

■ I shallow holder

When the button is pressed, the bottom plate is closed, arms open
You can.

■ I will deeply the holder

Close the arm, and push the bottom plate.

1 front seat drink holder

C

Note so as not to spill the electrical equipment
and drink.


Drink is applied to the electrical equipment, such
as a switch, vehicle fire or cause of failure
There is a risk of or.

Each
Section
Of
Misao
Create

I continued on next page

129

■ rear seat drink holder

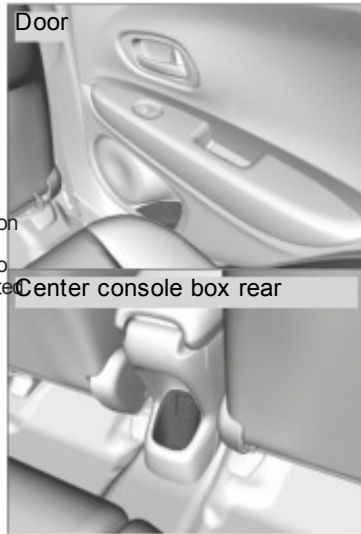


Each
Section
Of
Misao
Created

Center console box rear

■ accessory socket

Front console

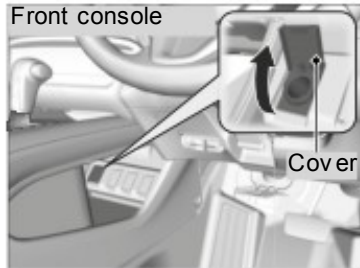


Power mode or accessories mode ON I can use at the time of the mode.

■ accessories front console Socket

It is used to open the cover.

Center console box rear

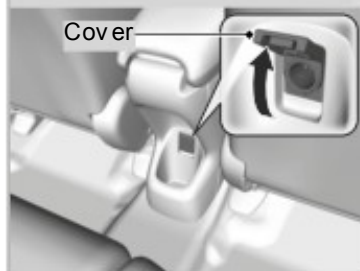

■ of the center console box rear Accessory socket

It is used to open the cover.

1 accessory socket

Power Consumption 180W (15A) to the following accessories, DC 12V I will supply the power.

In order to prevent the battery up, or the engine Please use in the state that bought.

Please do not plug in the cigarette lighter. There is a risk of heat generation.

Each Section Of Misao Create

I continued on next page


■ coat hook



It comes with a grab rail of the rear seat right
You.
You use it to rotate.

Each
Section
Of
Misao
Created

■ cargo hook

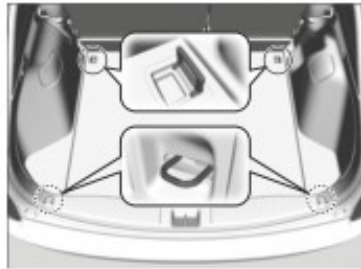

It is used when you want to fix the luggage.

1 coat hook

C


Do not apply anything on the grab rail, coat
Multiplied by a sharp object or heavy objects on
the hook.
Side curtain air bag is working properly
You can not, what is to fly during operation
There is a risk of injury .

1 cargo hook

C

And will not be out of the luggage while driving.
The tuna in unexpected accident when such as
sudden braking
There is a possibility that wants.

■ seat heater

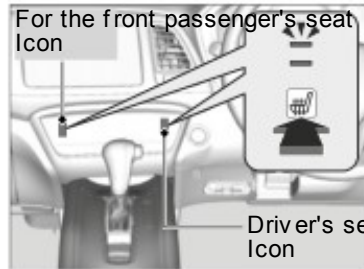

Power mode ON function can be used in mode You. Calls that warm the seat driver's seat, the passenger seat. But you can.

- 1 press the icon.
 - 1 times - H (high temperature lights indicator lights)
 - 2 times - LO (low temperature lights indicator lights)
 - 3 times - OFF: indicator is off
- H (high temperature) and warmed to a comfortable temperature, and press the icon. By (LO low temperature) should be.

1 seat heater

C

I note in the low-temperature burns. If you like the following, and attention to the low-temperature burns

- Handicap infants, the elderly , the body
- The weaker the skin
- person of intense fatigue

Also, by applying a high heat insulation blanket. There can be a low-temperature burns When used in You.


Power consumption is large This equipment, engine But it Do you do not use for a long time when it is stopped Sai. Battery capacity is lowered, and the engine start shadow You may want to sound.

Each Section Of Create

: by type and options, equipment is different.

I continued on next page

■ Stop display plate holder

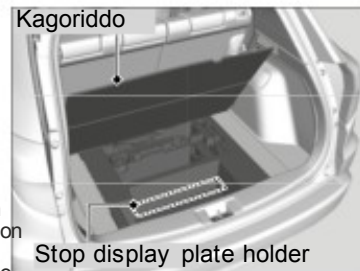

Each
Section
Of
Misao
Created

There is a stop display board put under the Kagoriddo
You.


1 stop display plate holder

Size capable of holding stop panel are as follows
Is.

- Length ... 427mm below
- Height ... 116mm below
- width ... 48mm or less

Air conditioner

Air conditioner vent

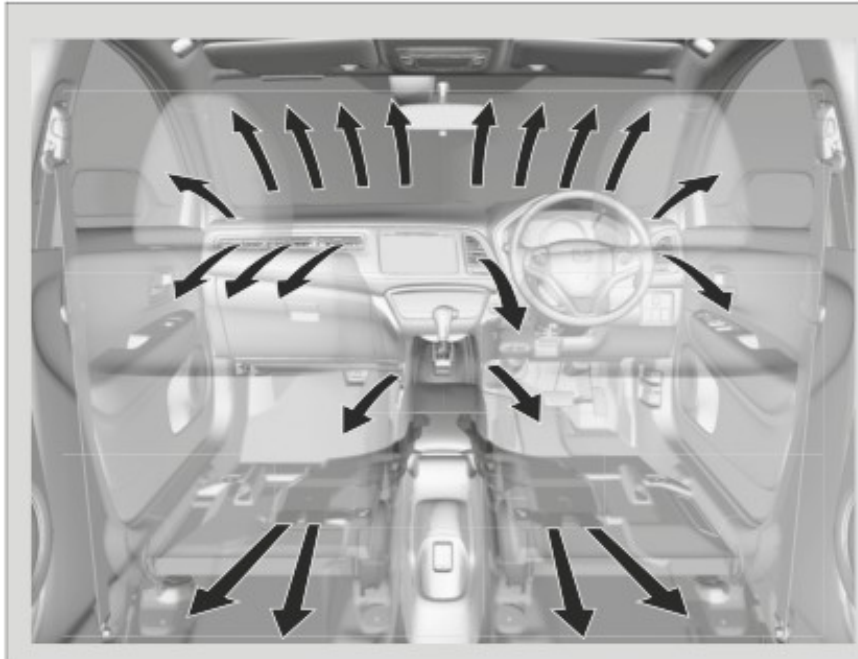

1 air-conditioned


Honda Inter navi system vehicles

The separate details of the voice operation, " Honda Inter
Please see the navigation system "manual.

Each
Section
Of
Misao
Create

How to use automatic air conditioning

Each Section Of Misao Created

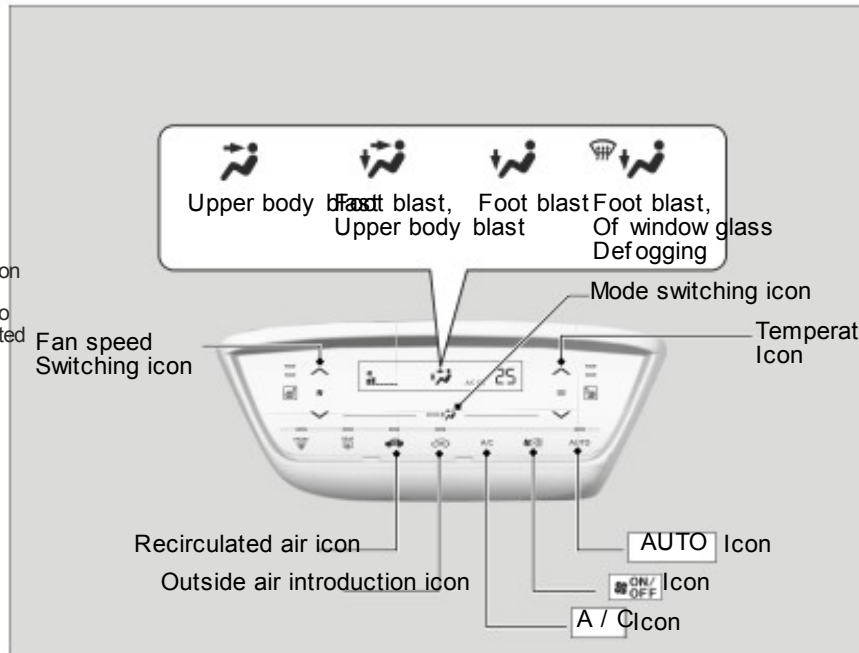

1 How to use the automatic air conditioning


Auto (AUTO) one of the icons used in the
 When you press, the function of the icon takes precedence.
 At this time AUTO You turn off the indicator light, but the choice of
 The icon functions other than the will be automatically controlled.

When the outside air temperature is low, I prevent the blowing of
 Because AUTO Fan rotation immediately when you press the
 You may not.

When you were parked in the scorching sun, and hot air by
 When opening window, please start the cooling.

"At a set temperature display Lo ", the maximum cooling is" Hi
 Shows a large heating.


Fan speed switching and temperature control icon
 When you slide your finger on the icon part, regulation
 You can.

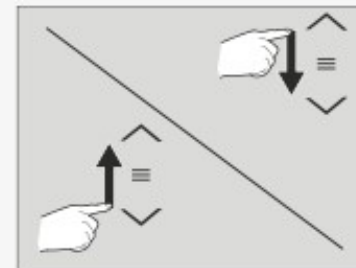



You can use it from the start the engine.

 
1. AUTO I press.
2. temperature control icon () to adjust the temperature by pressing.
- and 3. when to stop ON/OFF I press.

■ shy / outside air switching

In a coordinated fashion  Press, shy / Switches the outside air.

-  Shy (indicator lit): in a tunnel or traffic jams, etc., I was placed in a car dirty air
-  Outside air (indicator lit): When performing the ventilation

■ Heating and dehumidification

Heating during  When you press, it will be heating dehumidification.

1 How to use the automatic air conditioning



Each time you press the ON and OFF switches to

Idling stop during switched to blower
You.

In such a steep uphill, I give priority to the driving performance.
Because, that air conditioning is not working There

Each
Sector
Of
Misao
Create

I continued on next page

■ The anti-fog on the front and side glass (defroster) How to use




Outside air introduction (indicator points Lights)

1. Air conditioning is activated by pressing the outside automatically. Please do not maximum cooling near the set temperature. Cool air hits the front glass, the outside of the glass That it may be cloudy.

2. Stop stops cloudy when you press again, before I will return to the state.

Each Section Of Misao Created

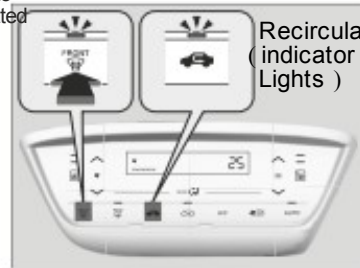

Recirculated air (indicator points Lights)

■ When you want to take the frost rapidly immediately I press. 2. I press.

1 The anti-fog on the front and side glass (defroster) use of outside automatically. Please do not maximum cooling near the set temperature. Cool air hits the front glass, the outside of the glass That it may be cloudy.

When the side glass is cloudy, the wind blowing the side So that it hits the glass surface, adjusting the outlet side Please to section.

If you take the frost, is switched to the outside air introduced immediately Window glass with moisture in the car If you continue to use in the recirculated air will interfere with visibility.

The idling stop during When you press, yen Jin will restart automatically.

Each
Section
Of
Misao
Create

I continued on next page

■ of the touch panel operation sounds ON and OFF

When you operate the touch panel of the air conditioner, will sound for confirmation. This sound may differ depending on the model. If you want to, please set the following procedure.



Each Section Of Misao Created

1. power mode ON I to mode.

2. Press and hold the temperature down-regulation () part 5 I press at times in a row.

3. "in the portion of the temperature display - - is " 5 after flashing times, " OF is " table shows the are was this and the and make sure you have either from I release the.

1 of the touch panel operation sounds ON and OFF

In while changing settings, and press the button not related to the procedure. This sound may differ depending on the model. If the setting does not work, the power once. The mode OFF and the mode, it is still spear from the beginning please do.

OFF from ON If you want to revert to, please set the following procedure.




1. power mode ON I to mode.


2. Press and hold the, temperature upregulation Aiko Tion () part 5 I press at times in a row.

3. "in the portion of the temperature display OF "is 5 blinks times After, " - - Make sure that is displayed " I release the.

Sensor of auto air conditioner

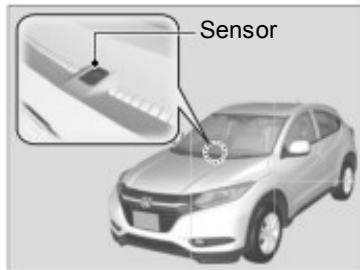

The automatic air conditioning, and now the sensor is attached
Be. Do not place anything on top of the sensor, or the water
Please do not or only .

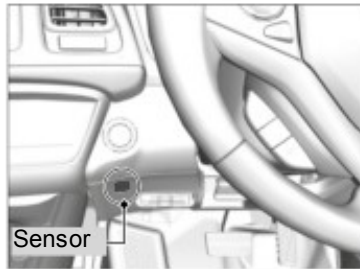

Each
Section
Of
Misao
Create

Audio



Audio equipment

142

: by type and options, equipment is different.

Audio equipment

Honda Inter navi system vehicles

Audio TV- DVD for the handling of, the separate and " Honda Intana
Please see the bi-system "manual.

: by type and options, equipment is different.

Operation

In this chapter, I have described driving operation, refueling, for such accessories.



Before operation	145	Brake operation	
Driving operation		Brake system	170
Start-up of the engine	147	AB (anti-lock brake system)	175
Notes at the time of running	150	Electronic control brake assist	176
For automatic	153	Emergency stop signal ..	177
Shifting operation	154 , 158	City brake active system	178
Idling stop system	160	Parking or stopping operation	
ECON switch	164	Park the car	185
Cruise control	165	Rear wide camera system	187
VSA (Vehicle Stability Assist)	168	Refueling	
REAL TIME AWD (all-wheel Drive		For the designated fuel	188
Ibinger) system	169	How refueling	188
		Remodeling and accessories	191

144

: by type and options, equipment is different.

Before operation

Preparing for operation

Please check the following items before you start driving.

■ Items to be checked outside the vehicle

- Whether there is unobstructed view of the mirror or window, the light of the lighting device class ?
 - u I Remove any frost, snow, ice is attached.
 - u If the snow is piled up on the roof, it is possible to cut off the view to slide down during travel.
 - I remove because there is sex.
 - If you are freezing, please remove ice from melting.
 - u If the ice is attached to the undercarriage, being careful not to damage the parts.
 - Remove.
- Bonnet or are completely closed ?
 - u hood opens while driving, it is dangerous out of view.
- Tire or normal ?
 - u I make sure there is no abnormal wear air pressure, cracks, or damage.
 - 2 inspection and maintenance of tire P.213
- Whether or not the children around the car ?
 - Do not obstacles around the car ?
 - u or blind spot which is not visible from the driver's seat, blind spot that can not be confirmed in the rear view mirror There Since vinegar, make sure before you ride.

■ Items to be checked in the car

- floor mat is either not caught in the pedal ?
- floor mat is whether it is fixed ?
- Do not overlap the floor mat ?
 - u It is dangerous there is a risk that can not be reliably operation of the accelerator and brake.
- Do not place anything on the foot of the front seat ?

1 check items outside the vehicle

Advice

When the door is frozen, it is not stripped by force

Please dissolve over hot water.

When you peel off forcibly, rubber door around peeling

You. After you put the hot water, and to prevent freezing,

Please wipe the moisture well.

The key hole in the door, and Do not spray a hot water

Sai.

When frozen, you will not be to insert the key.

Misplaced or combustible materials, and fuel in the engine

Please make sure there is no Eyasui thing.

Or if it has not been used for a long time the vehicle, maintainer

After ance, please pay special attention. Such as a fire

There is a possibility that it may lead to an accident that the unexpected.

There

Driver, do not use while driving a mobile phone

Please.

Mobile phones, cellular hands-free while driving other than the

Drive use of story, now it is prohibited by law

Be. For the situation surrounding the use while driving

Note becomes insufficient, and connected to an unexpected

accident risk

can't

Please use a floor mat that was in the car.


I continued on next page

145

- Luggage embarked specifies whether it is fixed properly ?
 - u loading of luggage improper, the balance of running or place a burden on the tire
It is dangerous to not be maintained.
- Luggage or does not exceed the height of the seat ?
 - u is a possibility that the luggage or jump out at the time of sudden braking and impede the rear view
It is dangerous there.
- When you put the animal, or try not to Limit your movement ?
 - u or become interfere with driving, and O lead to unexpected accidents, such as when a sudden braking
It is dangerous there you have it.
- Such as seat position controls are adjusted properly ?
 - u traveling in seat position inappropriate is dangerous.
2 adjustment of the seat P.113
- Did you properly adjusted the rearview mirror, door mirror, the handle ?
 - u sat in the correct driving position, and adjust to the appropriate position, respectively .
2 adjustment of the mirror such P.110
2 adjustment of the handle P.109
- Crew be certain that all fasten your seat belt ?
 - u all crew will wear the seat belt always.
2 seatbelt P.28
- Door, tailgate or are securely closed ?
 - u door, tailgate all closed securely before riding, it is locked correctly
Make sure that you are.
2 locked in the car / unlocking P.85
- When I started the engine, such as the warning light indicating an error in the meter or not lit ?
 - u You riding, to resolve the anomaly of the warning light indicating an abnormality .
2 warning light P.58

Driving operation

Start-up of the engine

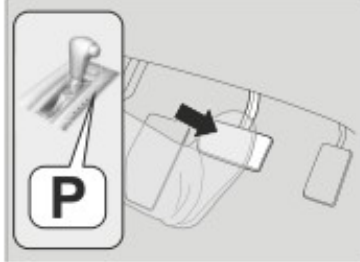

1. slowly parking brake switch

I surely raise the.

u parking brake is at stake,

Electronically controlled parking brake warning light

But about 15 l will light seconds.

2. the select lever

P

And confirm that this is When you start the engine, brake pedal then, put on the brake pedal with the right foot tread firmly Le.

u N But you can start, but the drive for safety

Wheel is fixed P Please do.

1 start-up of the engine

W

When the battery fluid is insufficient, it will end

Do not start the gin.

may cause the battery to explode.

C

When you start the engine, brake pedal

Starting of the engine when cold, all electrical Accessories OFF can be done from the time you.

Starting of the engine when cold, the battery The lights, air conditioning, Riyade to avoid draining And all electrical accessories such as Furosuta OFF Please be carried out after.

I continued on next page

147



3. without going the accelerator pedal, **ENGINE START / STOP** press.

■ Stop the engine

when the car has come to a complete stop, you can turn off the engine.

1. the select lever **P** To.
2. **ENGINE START / STOP** press.

1 start-up of the engine

If the engine is not applied, 10 wait seconds or more
Please operate from.

Exhaust sound changes or exhaust and gasoline in the car
When the smell of gas does not disappear, and fuel and exhaust
system is the faulty postal system.
Honda please have it inspected at the dealer.

To protect from theft the car, immobilizer cis
I have adopted the key of tem.
Therefore, it is not a key that has been registered in advance
It is not possible to start the engine with.
2 immobilizer system P.94

ENGINE START / STOP Engine starts to
You do not need to keep pressing up.

Honda when the battery of the smart key has expired,
Key **ENGINE START / STOP** base touch the.
2 Honda when the battery of the smart key has expired
P.243

■ operation at the time of start

1. while stepping on the brake pedal with the right foot, the select lever
The u If the retreat R You to.
2. while the parking brake, release the brake pedal, Akuserupeda
I tread slowly Le.
u can sure that electronically controlled parking brake warning light is off
Have.
u If you have not installed the driver's seat belt, electronic control parking even when starting
Brakes are not automatically released.
2 electronically controlled parking brake P.170

1 operation at the time of start

C

While stepping on the accelerator pedal, select the bar.
It may cause an unexpected accident with sudden acceleration.
Cancels the operation of the parking brake switch when starting
In the case of downhill, without going the accelerator pedal
When you manually release the parking brake, You can be start smoothly Ri.

■ Hill start assist system

When you start from the steep, after releasing the foot from the brake pedal, the brake system does not work with a gentle slope
About the null force 1 and system to mitigate the backward movement of the vehicle by retaining seconds, to facilitate starting
Is.

1 Hill start assist system

Notes at the time of running

■ When the fog came out

visibility will be poor when the fog came out. Lights down in the headlights day time
Then, it may be used as a reference, such as tail lamp center line, guardrail, the previous vehicle, the speed
Please travels when dropped.

■ When the wind is strong

When the car is such that flowed into the next strong wind, grip firmly on the handle, the speed
You rebuild the course by dropping gradually.
On the exit of the tunnel, bridge, of the bank, large trucks and running time of Kirideshi shaved the mountain
In such overtaking of, for susceptible to crosswinds, especially, I will continue to care
Please.

1 Notes at the time of running

Please do not turn off the engine while driving.
It is dangerous. Look like the following.
• Since the booster of the brake does not work, parts
Effectiveness of the lake is poor
• Power unit of the power steering is activated Na
Fried steering becomes heavy
The select lever while driving [N] The Do not in
Sai.
Kirideshi shaved the mountain
Engine brake is not effective at all, an unexpected accident
It may cause.

When you want to move the car, start the engine always
, Please.
And moving using the downhill, unexpected accident
It may cause.

1,000km until you run, drive system and engine
Avoid sudden acceleration for the protection of, the sudden
Acceleration, and Na.

■ when it is raining is

Because the road surface is slippery, sudden braking, sudden acceleration, abrupt steering during wet weather. Please drive carefully than usual to avoid. The Ya cause hydroplaning phenomenon where it may be exposed to stagnant water such as rut. Will be easier.

Please do not run deep puddles and flooding road. The destruction of the drive system and engine. There is a risk that lead to failure loss, of the electrical component.

1 when it is raining is

Please note hydroplaning phenomenon. The hydroplaning phenomenon, the road surface with water. When traveling at high speed where it is capped. In the film of water can be between the road surface and the tire. The brake and the steering become ineffective. I will say that the state of that.

I continued on next page

■ Additional Notes

When traveling, it receives a strong shock under the floor, which may lead to accident.
For leakage of fuel or brake fluid, to each section and parked in a safe place immediately.
Please check whether there is any damage.

1 Additional Notes

C
The vehicle speed during the shift down, and
Careful
The road surface slippery, rapid and engine
When the lake leads to tire slippage
You Ri.

Advice

Just repeat the steering when the extremely low speed and
The you can, etc. and holds it apply force to the handle
The EPS (electric power steering) system
Temperature rises, the path for system protection
Because it limits the function of the word equipment, hand
Le operation will gradually heavier.
It returns the temperature of the system is down, but Shea
The intermittent how to use stem protection, such as work
When repeated basis, it becomes cause of a system crash
You.

For automatic

■ creep phenomenon

when the engine is running, the select lever is in the non-creep position (P or N). How you are in the non-creep position, the ready to force connected, and not step on the accelerator pedal due to the creep phenomenon. Also, the car begins to move slowly.

1 creep phenomenon

Creep phenomenon is strongly engine speed is increased. Will. When the engine speed is raised, it Burekipe Please stepped firmly Dar.

When the vehicle is stopped on the uphill, and forward due to creep phenomenon, more of the force tries to retreat is large. As soon hear, there are times when the car is retracted. Depressing the brake pedal, parking brake Please over.

■ kickdown

The select lever is in the D or S position. At it depresses fill the accelerator pedal while driving, The engine speed rises and the speed ratio is changed automatically to obtain strong acceleration. I can.

1 kick-down


That it depresses the accelerator pedal, such as uphill. Come, the engine speed suddenly by kickdown. It rises, the speed is too out There Be. Please operate carefully accelerator pedal. The curve or slippery surfaces, especially attention 必 Is required.

Shifting operation

7 -speed manual shift mode vehicles

You can switch the selector lever in response to the running state.

■ Names and Functions of the select position

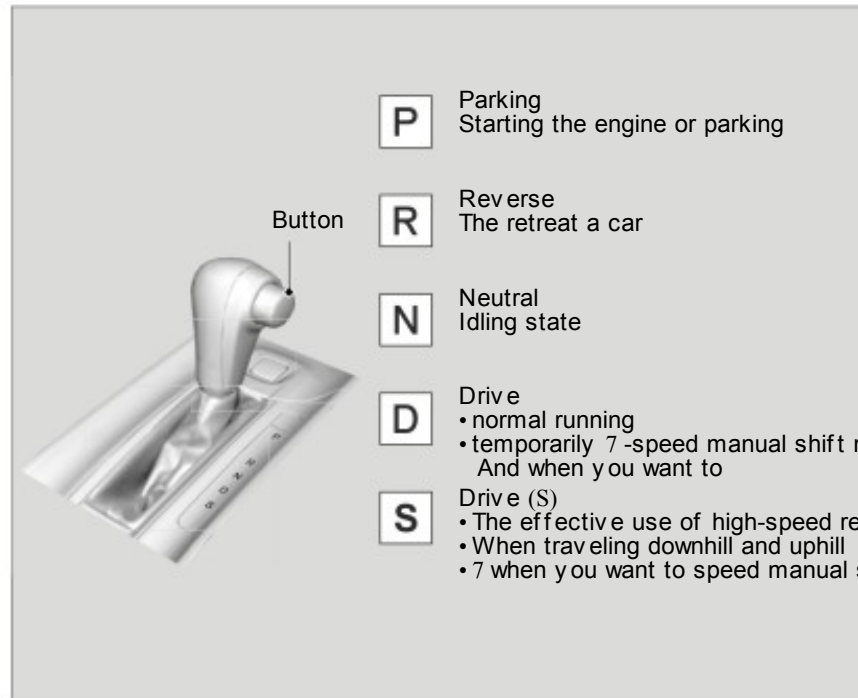

1 shift operation


The select lever **P** When the non-power Mode is OFF does not take mode.

R When, and Sele to the driver chime sounds Is Kutoreba **R** The Shirasema that it has entered into Be.

N Even when, when the engine is cold Due to the viscosity of the transmission fluid, Sometimes the car starts to move slightly. The stepping firmly on the brake pedal, respond to need Please parking brake is Flip.

■ operation of the select lever

Select position, in conjunction with the selected position indicator in the meter section, then, the selection is indicated by the lighting of the lamp display the current position.

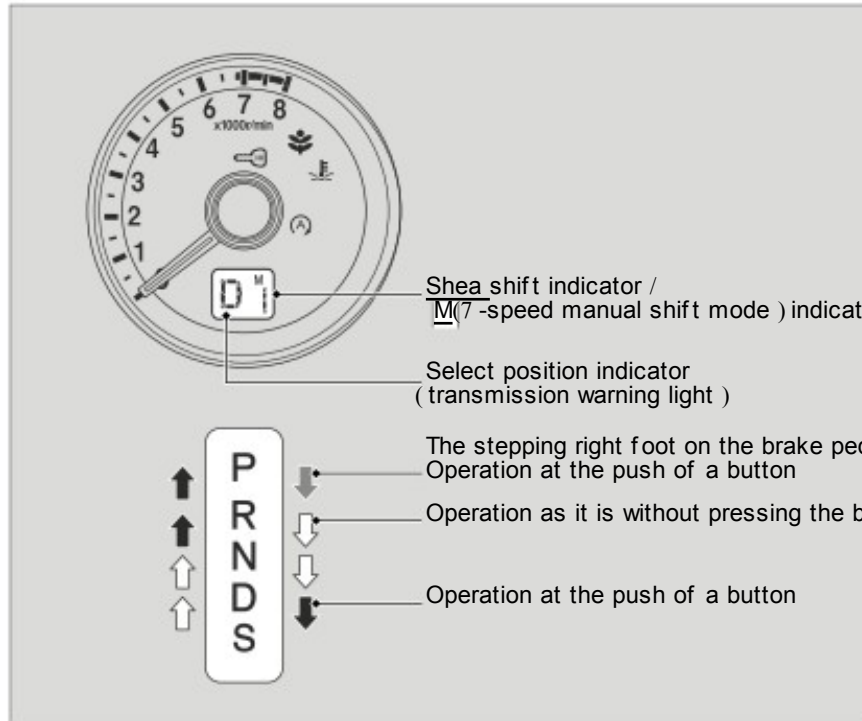

Shea shift indicator / M(7-speed manual shift mode) indicator

Select position indicator (transmission warning light)

The stepping right foot on the brake pedal, Operation at the push of a button

Operation as it is without pressing the button

Operation at the push of a button

1 operation of the select lever

advice

A car when the retreat from the forward, to move forward from the reverse completely, the back while stepping on the brake pedal. Please operate the Rekutoreba. The Misao the lever in a state in which the car is not completely stopped. When you create, you can damage the transmission. There you have it.

When the car to start, and accidents due to misunderstanding. Also select position indicator in order to avoid. Please check the position of the select lever.

Transmission warning light flashes while driving. If it is, it is an error in transmission. There are. Avoid rapid acceleration, Honda and have it inspected by dealer. Please.

Brake and hold down the select lever button. If the pedal is pressed, the operation of the select lever. You may not be able to have. Please step on the brake pedal before.

The outside air temperature is very low (minus 30 degrees or less) and. It switches the display of the select position. It may But a little late. And always before traveling. Please check the select position.

I continued on next page

■ 7 -speed with manual shift mode

Shift switch on the handle, manually without removing your hands from the steering wheel and 1-7 Hayama You can at to speed. Pulling the shift switch while driving, 7 -speed manual I will switch to the shift mode. Even when engine braking is required, use , Please.

■ the select position [D] When the Temporarily 7 it becomes speed manual shift mode, shift indicator lights Be.

When it comes to the state of acceleration and constant speed running, 7 -speed manual shift mode is automatically canceled Will be. In addition [±] Shift switch (right side) and released also be Hikitsuzukeru few seconds You can be.

Such as the front of the curve, it is useful when you want to slow down temporarily .

■ the select position [S] When the 7 it becomes speed manual shift mode [M] Shift indicator and indicator lights Will.

When the vehicle speed drops without operating the shift switch, Shift mode automatically slow stage sequentially Down and if you stop one and then shifted down to the speed.


The engine speed limit rotation speed vehicle speed increases (red zone) approaches, automatically To 11 will stage shift-up.

Start is one that you can only be done with speed.

To cancel the mode, the select lever [S] From [D] Please move on. 7 -speed manual shift mode is canceled, [M] Shift indicator and indicator Turns off .

■ 7 operation speed manual shift mode

1 by the shift operation of the switch times, gear 1 and gear shift stage.

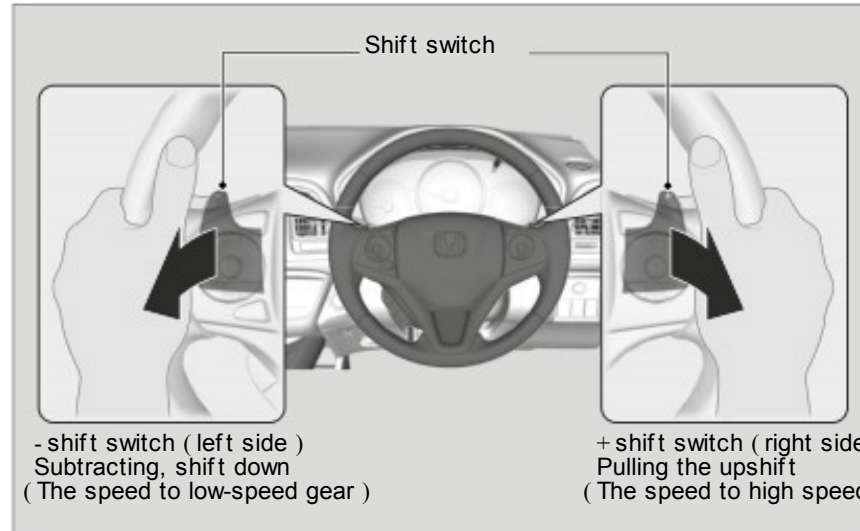

1 7 operation speed manual shift mode

When you operate the shift switch, a picture of post-operation
If the engine rotation speed is outside the acceptable range,
the engine light will flash without fast.

In order to protect the engine, and automatically shift
You may want to shift down or up.

I was operated the shift switch in slippery road
When, if the tire such that the lock, 7 -speed
I return to the normal running from the manual shift mode
There is a case.


When you operate the shift switch at low speed DOO
To protect the lance mission, without shifting
It may display light flashes.

Shifting operation

7-speed manual shift mode vehicles with

You can switch the selector lever in response to the running state.

■ Names and Functions of the select position

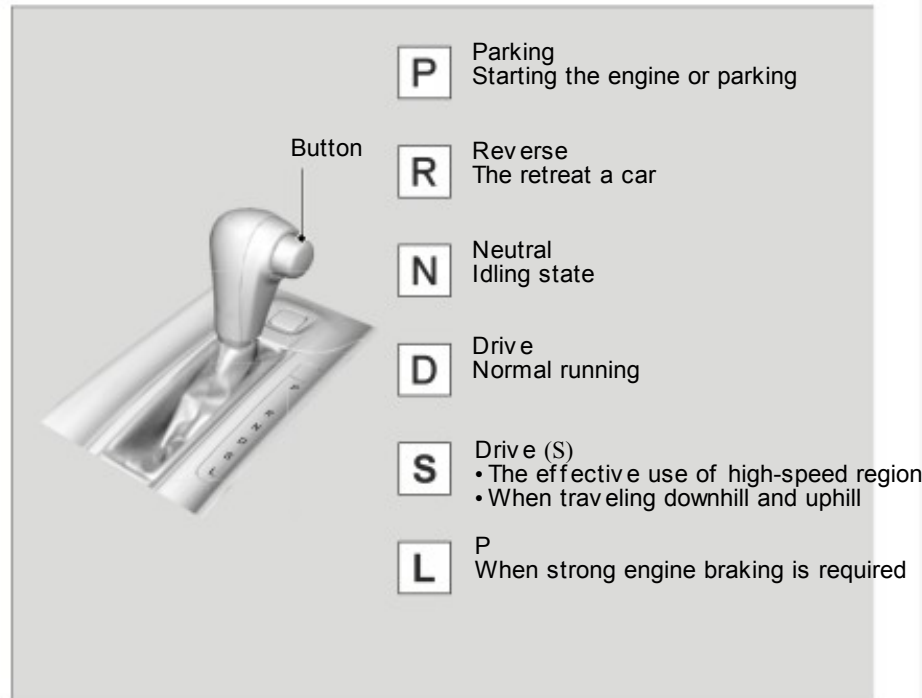

1 shift operation


R When, and Sele to the driver chime sounds
Is Kutoreba **R** The Shirasema that it has entered into
Be.

N Even when, when the engine is cold
Due to the viscosity of the transmission fluid,
Sometimes the car starts to move slightly.
The stepping firmly on the brake pedal, respond to need
Please parking brake is Flip.

The select lever **P** When the non-power
Mode is OFF does not take mode.

■ operation of the select lever

Select position, in conjunction with the selected position indicator in the meter section, then, the selection is indicated by the lighting of the lamp display the current position.

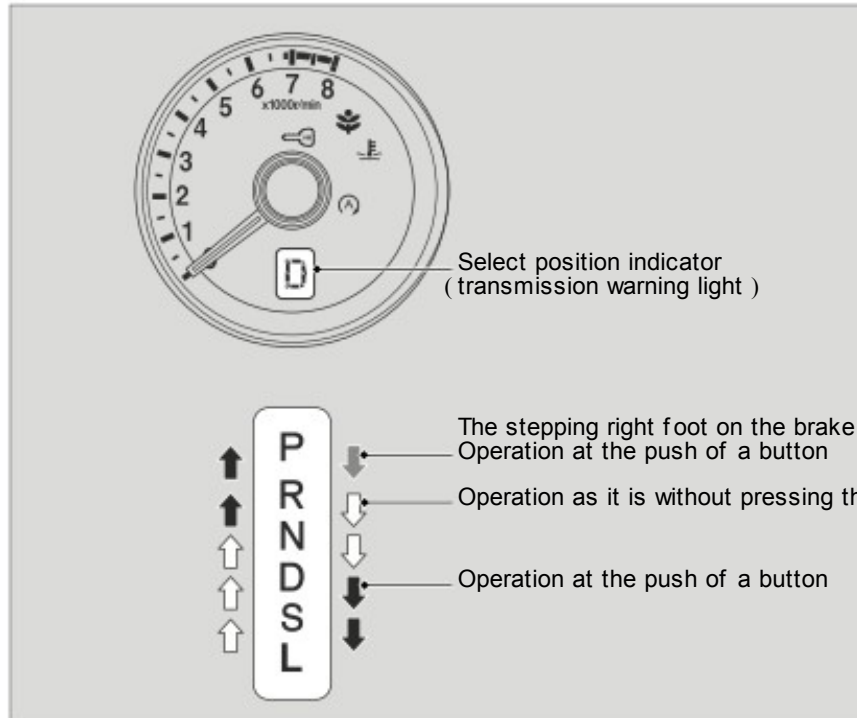

1 operation of the select lever

advice

A car when the retreat from the forward, to move forward from the recession completely, the back while stepping on the brake pedal. Please operate the Rekutoreba. The Misao the lever in a state in which the car is not completely stopped. When you create, you can damage the transmission. There you have it.

When the car to start, and accidents due to misunderstanding. Also select position indicator in order to avoid. Please check the position of the select lever.

Transmission warning light flashes while driving. If it is, it is an error in transmission. There are. Avoid rapid acceleration, Honda and have it inspected by dealer. Please.

Brake and hold down the select lever button. If the pedal is pressed, the operation of the select lever. You may not be able to have. Please step on the brake pedal before.

The outside air temperature is very low (minus 30 degrees or less) and, it switches the display of the select position. It may But a little late. And always before traveling. Please check the select position.


Idling stop system

For idling noise reduction and improved fuel efficiency, it is idling stop when the vehicle is stopped. Or, it is a system in which the engine is restarted automatically. Idling stop during The display lights up.



the driver's door when the indicator is lit Buzzer sounds and open, idling You indicate that you have top.

■ idling stop system OFF sw itch

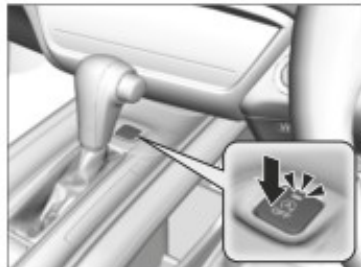

The idling stop system OFF I to To be, Please press. Indicator light in the switch is turned on, the system OFF you will.

The running time of the previous OFF even after the painting again Automatically when starting the engine ON until it becomes Be.

Idling stop system

Meets idling stop system vehicles You are using a battery that was. When you use a battery other than those specified, Idling stop and early deterioration of the battery may flop difficult to operate. Exchange 換時 It is important to use a battery that has been specified Sai. For details Honda , please contact your dealer. 2 specification P.267

ECON switch ON if you were, Airco Idling stop time of emission in use long Will. 2 ECON switch P.164


1 idling stop system OFF switch

The idling stop during When you press, yen Jin is restarted.

■ How to stop idling

You stop idling when you step on the brake pedal when the vehicle is stopped.

■ conditions you do not want to stop idling

- when the driver is not wearing a seat belt
- When the water temperature of the engine coolant is low, or when the high
- When the oil temperature of the transmission fluid is low, or when high
- After starting the engine, 5 km/h when you stop while not reach the
- When you stop at a steep slope
- The select lever **D** When you're on the other
- When you start the engine while the hood is open
u please restart the engine from closing the bonnet.
- When the battery charge is low
- Internal temperature of the battery is 5 °C when the following
- A capacitor (capacitor charge and discharge power of the large capacity can be a short time) the state is good
When there is no
- Outside temperature is -20 °C or below 40 °C above, when you are using the air conditioning
- Set temperature of the air conditioning Hi or Lo in, when you are using the air conditioning
-  There ON when the

1 How to stop idling

The idling stop in, open the bonnet

Please do not only.

If you open the hood, the engine is automatically re-

Does not start.

When you open the hood, and the selector lever

The **P** Set to, **ENGINE START / STOP** En

Please let me restart the gin.

2 start-up of the engine P.147

To stop during idling,

ENGINE START / STOP Accessories When you press the

It does not restart automatically become the mode.

Please have a start-up operation of the engine normal.

2 start-up of the engine P.147

Continued on next page

161



■ conditions that may not idling

- When you stop over the sudden braking
- When you are moving the handle
- When the air conditioning air flow is often
- When a high altitude
- at low speed, when the acceleration and deceleration are repeated
- and when the temperature difference between the interior and the set temperature is large in use air conditioning
- When humidity is high in the car in use and air conditioning

■ engine is restarted automatically

Engine restarts automatically when you release the brake pedal.

■ without releasing the brake pedal, it conditions the engine is automatically restarted

-  When you press the
- When you move the handle
- the select lever **R**, **L**, **S** And when you have **N** from **D** When operated in
- When the vehicle is stopped on a slope, the car has moved to loosen the brake
- When you loosen Dari depressing to repeat the brake
- When the amount of discharge of the battery is often
- When I stepped on the accelerator pedal
- when the driver removed the seat belt
-  When you press the
- When the temperature difference between the interior and the set temperature is increased in use and air conditioning
- When the humidity in the car has increased in use and air conditioning

■ starting auxiliary brake function

Starting from the idling stop temporarily even if you release your foot from the brake pedal

Holds the brake force, this will make it harder edge the car on a slope.

1 engine is restarted automatically

Engine is restarted from idling stop

Then, by electronic devices that you are using,

There is that the power is turned off temporarily.

ECON switch



Engine, the transmitter by pressing the switch 1 ECON switch

Tion, automatic air conditioning, cruise control ECON When the mode of the air conditioning running

Roll by controlling the operation of, it is the engine saving operation. The engine operation effectiveness is weakened.

Controls to be easy .

Power mode is ON switch when the mode

When you press, ECON mode is ON mail will

Indicator of in ter will light, and respond to driving situations

I will switch to a fuel-saving control in Flip.


Cruise control

Acceleration such as highway / motorway, such as less deceleration operation, **When the constant speed operation**
 It is a device for maintaining a constant vehicle speed without going through Serupedaru.

At a time like this

- shift position that can be used
- vehicle speed that can be used


When the
 About 30km/h ~ 100km/h the desired value is enough distance between vehicles



Operation

- of the hand **CRUISE** press the

Lighting Meter CRUISE MAIN
 There lighting
 Cruise control is ON
 Will be.

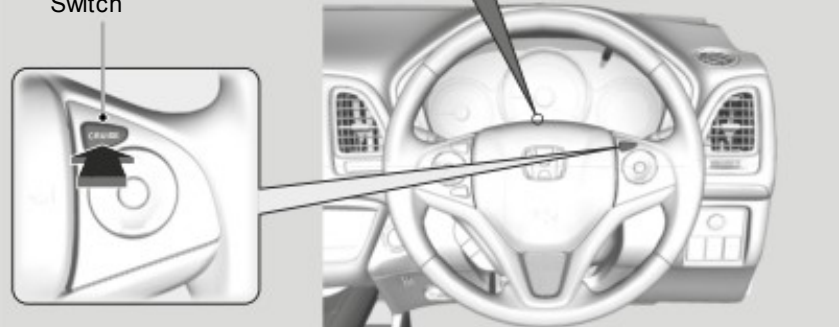

W

On the road, such as the following, Cruise Control
 Do not use Le.

Depending on road conditions, it is connected to

- unexpected accident
- The crowded, do not get enough distance between vehicles
- road with a steep downhill
- road conditions
- road slippery, such as snow or freezing

You can not travel at a speed appropriate to
 Engine braking is not ineffective enough, set
 There can exceed the speed was.


Tire is idling, the control of the car
 you could lose.

The downhill and uphill, and the constant speed according to
 the conditions
 There are times when it can not be maintained.

: by type and options, equipment is different.

I continued on next page


To set the vehicle speed

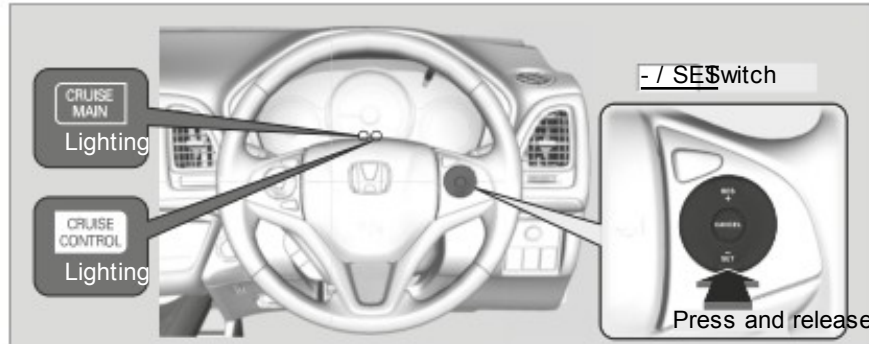

Release the foot from the pedal when it becomes a vehicle of hope, CRUISE When you release, the unit is placed in automatic constant speed running is set to the vehicle speed when you release. At the same time, **CRUISE CONTROL** display lights up.

To adjust the vehicle speed

At hand RES / And / SET operations, increase the vehicle speed and / You can be lowered.

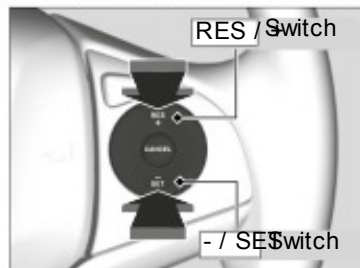

RES / Switch

- 1 about every time you press times 1.5km/h vehicle speed is increased by
- vehicle speed increases press and hold, you release the hand Fixed to the vehicle speed at the time

- / SET Switch

- 1 about every time you press times 1.5km/h vehicle speed is reduced by
- vehicle speed is reduced press and hold, you release the hand Fixed to the vehicle speed at the time


1 cruise control

ECON When the mode, and smooth acceleration more It becomes.

1 To set the vehicle speed

When you do not do automatic constant speed running For the sake of safety Press the OFF I go to Sai. Or accessories mode power mode OFF mode over de to you that CRUISE Automatically OFF you will.

■ To cancel the

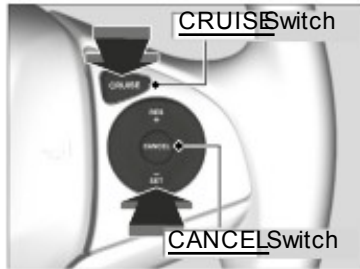

By carrying out the following operations, the release is automatic constant speed running will. At the same time, **CRUISE CONTROL** indicator will go out. But I will go out.

- **CANCEL** press the
- **CRUISE** press the
- I step on the brake pedal

1 To cancel the

I return to the set speed of the release before. Even after you have broken the automatic constant speed running, the vehicle speed is 30km/h or more, the vehicle speed will be returned to the automatic cruising speed of setting before release.



However, you can not return in the following case.

- After release, the vehicle speed is 30km / h when that became less than 30km/h.

The vehicle speed is 25km / h equal to or less, automatic constant speed running will be canceled.

VSA (Vehicle Stability Assist)

VSA and, ABS function, TCS to control the overall skid suppression function and function, this stability Assist)
It is a device that attempts to suppress the change in the behavior of the vehicle such and ensure the stability of the vehicle even in a state in which has been activated.

■ ABS (anti-lock brake system) function 2 P.175

■ TCS (Traction Control System) function

It is possible to prevent unnecessary idling of the drive wheels in slippery surfaces, and make the driving force, the steering capability function to trying to place.

■ skid suppression function

When turning in such rapid slippery road or turns the steering wheel, and the wheel skidding. When the TCS function is limited to low Effective if the driving wheels is likely to rotate at a speed I There is.

Additionally, electronically controlled braking reed assisting the braking operation by the driver in an emergency braking Strike has also been installed.

2 electronic control brake assist P.176

■ VSA warning light with the operation of the



TCS skid suppression function in operation or function
VSA warning light will flash.
Tires of different sizes and types and are mixed,
VSA may may not function properly.
Always, the tire Thailand same specified size, the same kind of
Please use a specified air pressure ya.

VSA system when the warning lamp lights up during operation
I may be faulty-free.
There is no hindrance to normal operation, but immediately
The Honda please have it inspected at dealer.

VSA OFF sw itch



VSA partially stopping function (OFF) to the state
 To be, Press the buzzer until a "beep" and
 , Please.
 TCS function is limited, the drive wheel is rotated
 It becomes easy, VSA OFF warning lamp lights up
 Be.
 Again use the (ON) to the, The Department as "pits" the
 I press Heather until you hear.

1 VSA (Vehicle Stability Assist)

The running time of the previous OFF even if it is the ene again
 Automatically when starting the gin ON you will.

Running or immediately after starting the engine, check system
 Motor sound's heard from the engine room for the clock
 may be exceeded, but not abnormal
 You do.

REAL TIME AWD (all-wheel driving) cis Tem

AWD (all-wheel driving) snow land, sand, mud, the system suddenly
 In slippery road and downhill, 2WD cars (two-wheel drive v ehicle) immediately driv
 It is, but please note the following points because it is not a panacea.

- I do carefully as well as the car of the general accelerator, steering wheel, the brake operation
- Although not continuously running in places where sand and mud, the front wheel
- Do not run the water such as river crossing
- brake performance 2WD because there is little difference as compared with the v ehicle
 To traveling by taking the inter-vehicle distance enough

1 REAL TIME AWD (all-wheel Drivin Ing) system

Tires of different types and sizes are mixed
 And, AWD may may not function properly.

Always the same specific size, the tire of the same type
 Please use specify pneumatic tires.

AWD idles of the wheel followed by driving in a state of
 is likely to be idle
 Oil temperature of the stem within rises, the system protection
 For AWD from 2WD might be switched to
 vehicles, road surface slippery
 Oil temperature is lowered after a while, AWD and return to
 You.

: by type and options, equipment is different.

Brake operation

Brake system

■ electronically controlled parking brake

It is a brake to be used for parking or parked mainly. Misao and manual release of the automatic
You can create.

■ When operating in manual

In the operation of the parking brake switch, release Do not apply the parking brake
I can or.

Such as the starting time of a steep downhill, when you release the parking brake manually, smoothly
You can make the starting Figure.



■ I bet the parking brake manually

Slowly the parking brake switch

Please pull up securely.

- u parking brake is activated, power
Child control parking brake warning light
But I will light.

■ you release the parking brake manually

That

1. power mode is ON when the mode, right foot
At I tread firmly on the brake pedal.
2. I press the parking brake switch.
 - u parking brake is released, the electronic
Control parking brake warning light
Turns off.

1 electronically controlled parking brake

Do not apply the parking brake, and has been released
Operating sound you will hear it on the tree.
This is the sound of the brake system is operating
Not a malfunction.

Do not apply the parking brake, it is released
There is that the brake pedal moves.
This is due to the operation of the brake system
Not a malfunction.

When the battery is up, and parking blanking
You can not use it to apply rake, to release.
2 Jump Start P.245

Pull the parking brake switch to running
Continuing, or parking brake in the meantime
You rent.


10 automatic brake hold cis minutes or more
When parked while the tem is operating, automatic
At the parking brake is applied.

Automatic brake hold system is working
If you remove the seat belt in the state where you are, automatic
At the parking brake is applied.

Is automatic brake hold system
Power mode while running the OFF mode
When it was in the soil, parking brake automatically
Will take.

■ When you automatically released

Release the parking brake and the operation of the accelerator pedal will be linked. It is convenient to start of the uphill and congestion.

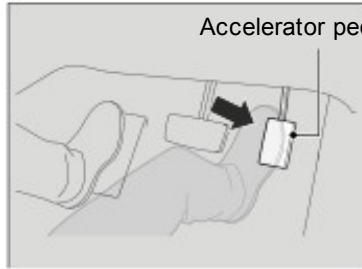

The Do slowly stepped on the accelerator pedal Have.

- u parking brake is released, the electronic Control parking brake warning light Turns off.

The automatic release of the parking brake, I can be done when the following conditions are met:

- When you are wearing the driver's seat belt
- When the engine is running
- the select lever P , N When the non-

1 electronically controlled parking brake

If you can not be canceled automatically the parking brake Huang , Please cancel manually.

When the warning light next is lit, it automatically released Can not.

- PGM-FI warning light
- Transmission warning light

When the warning light next is lit, it automatically released May not be.

- electronic control parking brake system warning Light
- VSA warning light
- air warning light
- air bag system warning light

■ automatic brake hold

During stopping, even without continued stepping on the brake pedal, I hold the brake pedal. This is a feature. If you operate the accelerator pedal while holding the brake is released. You can be the start. And suitable for use when you want to stop temporarily, such as waiting for a signal. We have.

■ the function to ON in order to hold the brake

■ In order to start the vehicle is

Automatic brake Hold switch

Brake pedal

Accelerator pedal

Lighting

Lighting

Lighting

Extinction

Wear a seat belt, The power mode to ON mode. Automatic and from then to the stop. Chick brake hold I press the switch.

Select lever But PR The Department of the road. The car.

Select lever But PR The Department of the road. The car.

- Automatic blade Kihorudo indicator light point. The lights, brake automatically. But 10 minutes retained. Be.
- Automatic blade Kihorudo indicator light point. After lights, brake pedal. It should be away from the foot. Have.

1 automatic brake hold

W

In place of the steep and slippery road surfaces, automatic brake hold is activated. Even though, you release your foot from the brake pedal, there is a car that is moving at the time. The cause of the collision by the car move suddenly receive a serious injury, and tuna to create is a possibility that wants.

W

Automatic brake for the purpose of parking. You do not operate the hold. The cause of the collision by the car move suddenly receive a serious injury, and tuna to create is a possibility that wants.

Automatic brake hold system operation. Please do not leave the car in absolutely. To parking. Please select lever when parking. Please braking.


■ Brake Holding machine capacity when it is automatically released

- the select lever **P** Or **R** At, when you are stepping on the brake pedal
- When you pull the parking brake switch

When the state of the following, after the parking brake is activated automatically, Brake retention by click-hold brake system is released.

- 10 when you hold the brake minutes or more
- If you remove the seat belt of the driver's seat
- the power mode to OFF when the
- When a problem occurs with the automatic brake hold system

■ the function to OFF in order to be

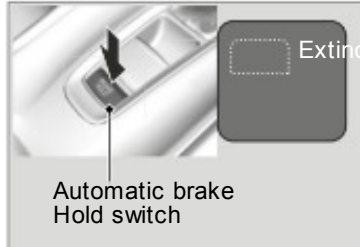

Function is ON automatic brake at the time of the

- I press the Hold switch.
- u automatic brake hold cis
- Tem indicator light will go off .

Is automatic brake hold indicator
 During lighting OFF when you want to, and brake pedal
 Automatic brake while stepping Le
 I press the Hold switch.

1 automatic brake hold

W

You use the automatic brake hold
 When the automatic brake hold
 From the brake pedal indicator lamp to light
 Keep an foot.
 The cause of the collision by the car move
 you may receive a serious injury, and tuna to
 there is the possibility that wants.
 Automatic brake hold indicator lights
 It should be away from the foot brake pedal after
 Have.

The same procedure as normal even when the system working
 I can stop the engine.
 2 parked operation P.185

The power mode OFF When you, the system self-
 Dynamically OFF you will.

When using an automatic car wash machine, the system
 OFF Please make sure that you have become.

I want to detect the rotation of the tire to brake during holding
 And, operation sound occurs in order to increase the braking
 force might want to.

I continued on next page

■ foot brake

It is the main brake to the slowing down or stopping of the car. And operated according to the brake pedal.
You.

Electronic control brake assist that generate a large braking force by emergency braking is equipped.
Has been.

2 electronic control brake assist P.176

In addition, to prevent the locking of the brake ABS (anti-lock brake system) with,
I am working to improve safety .

2 ABS (anti-lock brake system) P.175

1 foot brake

When you run a puddle, and braking performance
Please check the condition.

When effectiveness is poor, blanking condition until the return to
Please stepped lightly several times Rekipedaru.

While stepping on the brakes, friction metallic constantly
Replace the brake pads if Kosuoto hear

you need to.

Honda please have it inspected at the dealer .

I keep stepping on the brake pedal in the long downhill

And, brake to overheat, braking effectiveness evil
Is no longer dangerous.

Therefore, engine parts, such as a long downhill

I use a rake.

Release the foot from the accelerator pedal, to the low-speed

When you shift, the speed in the rotational resistance of the
engine

ABS (anti-lock brake system)

■ ABS and is

AB (anti-lock brake system) and, you braking in slippery road or sudden braking To stabilize the posture of the vehicle by preventing the lock Rutoki, the wheel effect of the handle. It is a device that you are trying to ensure a tree.

■ ABS warning light with the operation of the

When I stepped on the brake pedal, there is that the brake pedal is wiggle

But, this is ABS is normal behavior for. It continues to depress the brake pedal strongly as it is

Please.

In addition, low-speed (vehicle speed about 10km/ h or less) in ABS does not operate the same as the normal brake

It becomes activated.



ABS warning light

The power mode ON and normal it is to turn off lights for several seconds when the mode State.

1 ABS (anti-lock brake system)

Advice

ABS may may not function properly. Always, the tire Thailand same specified size, the same kind of Please use a specified air pressure ya.

ABS when the warning light is illuminated during operation, the cause may be a defect in tem.

There is no hindrance to the normal braking operation, ABS there is a possibility that is not working.

Immediately Honda please have it inspected at the dealer.

ABS is intended to shorten the braking distance

There is no

ABS as well as the vehicle that is not equipped with, the road surface is not the same as the distance you will need about A friendly.

ABS Handle and posture of the vehicle even in a state in which has been activated. Since there is a limit to the effectiveness of safety without

Please note operation. In addition, the place such as the following ABS as compared with the vehicle that is not installed in the braking distance increases.

- bad road gravel road, deep fresh snow, such as rough road
- step such as manholes and pavement seams
- tire chains when mounted

Electronic control brake assist

■ an electronic control brake assist

Emergency braking, the device for assisting a driver's brake operation to generate a greater force is.

■ operation of the electronic control brake assist


When strongly depressed the brake pedal, the brake is to work more strongly
You.

Brake Assist is activated, the pedal moves or little by little, the operation sound is heard
You may want to or. This phenomenon of when the brake assist is working
At This is not a malfunction. Please continue to depress the brake pedal strongly as it is.
2 VSA (Vehicle Stability Assist) P.169

Emergency stop signal

Emergency stop signal, very that the vehicle is multiplied by the sudden braking 1 Emergency stop signal
 Low the possibility to inform the following vehicle flashing indicator is flashing rapidly, automatically, it is a rear-end collision
 It is a system that reduced. 60km/h to slam on the brakes when the vehicle is traveling at high speed, add
 I will work with.

■ Mechanism of working

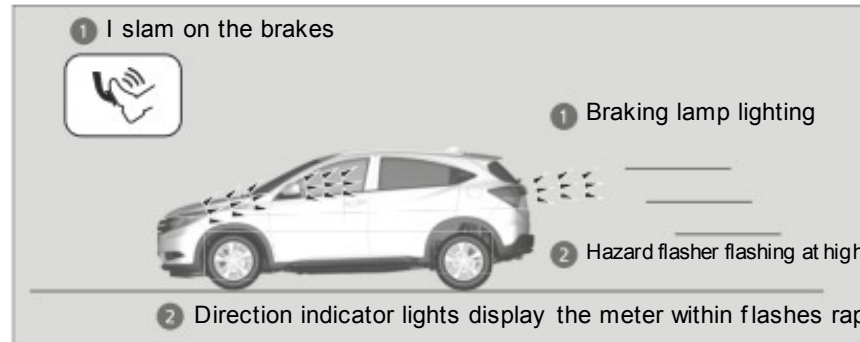

Emergency stop signal, stops working is to become the state of the following
 Be.

- When you release the brake pedal
- ABS when the stops
- When it is no longer in the rapid deceleration
- the hazard switch ON when you have to

Emergency stop signal, rear-end collision
 Being system for reducing the risk of being, add
 It does not completely prevent a collision. To operation
 Rutoki avoid unnecessary sudden braking, safety luck
 Please try rolling.


Hazard switch is ON when the, Emaje
 Tion Sea stop signal does not work

ABS when not working a certain period of time, system
 There is a case-free does not work

City brake active system

Running at low speed, and there is a possibility that the vehicle is hit from behind, City brake active system is almost in front of the vehicle. To come, to light the impact of the collision and to support the brake operation of the driver, you can help collision avoidance. It is a device that reduced.

■ system operating conditions

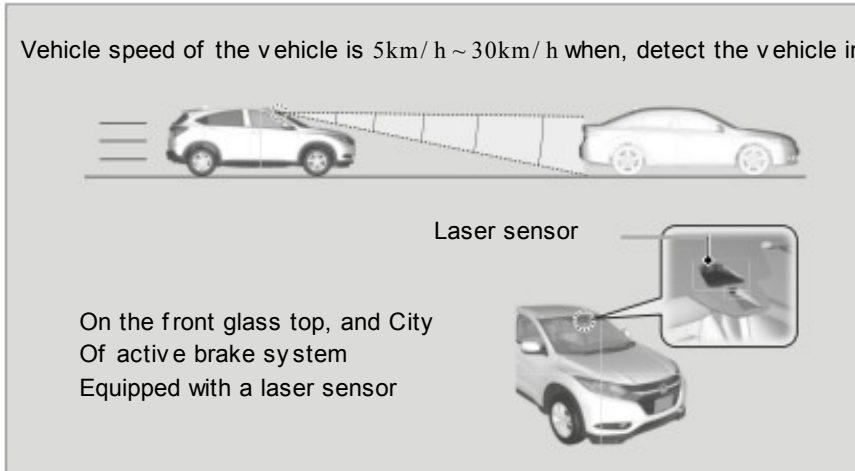

The speed difference between the vehicle 5km/h ~ 30km/h there is a risk of collision of the vehicle. In, automatic brake system is activated.

After the system is activated, the vehicle has stopped, the automatic braking is canceled. For safety reasons, please step on the brake pedal as necessary.


W

City active brake system, Oh
In the system can avoid a collision with Rayuru situation.
If the laser sensor detects such as collisions and not operate correctly, it is likely to lead to serious injury or death. There is.

In an attempt to avoid a collision, the driver brake. Such as when the user operates the handle or, the system. But it will be released.

■ how the operation of the system

For each state, the system operates as follows.

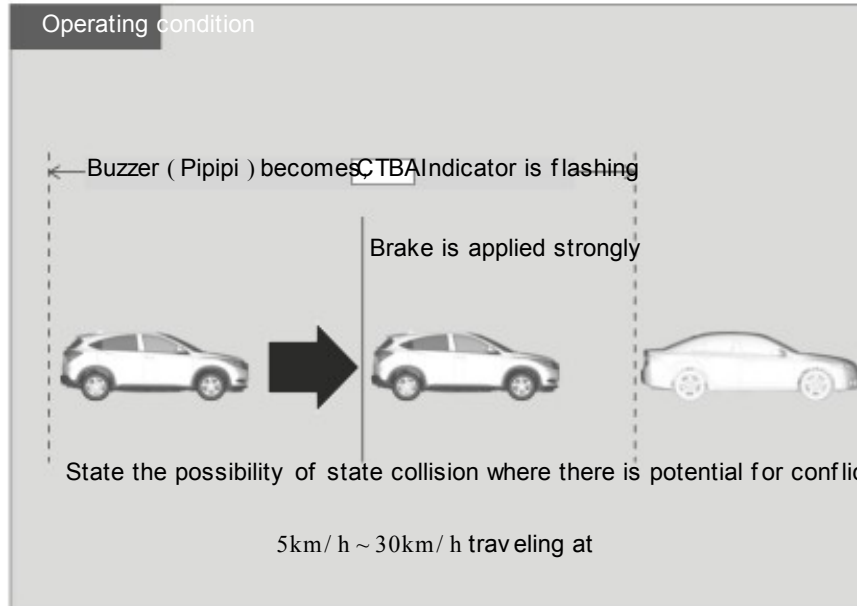

By the system, the car has stopped, CTBA Indicator light 10 will flash for a few seconds.

1 City brake active system


In cases such as the following, can be correctly detected vehicle, the system might not work.

- vehicle in front if diagonally, horizontally, of the opposing At, when it is difficult to detect the vehicle
- distance to the vehicle in front is when the extremely short
- the relative speed difference between the vehicle in front and the vehicle is large
- another vehicle interrupt in front of the vehicle, a steep decrease went the speed
- performs a rapid acceleration, it is close to the vehicle in front
- when the oncoming vehicle jumped out suddenly in front of the vehicle
- when the vehicle jumped out suddenly in front of the oncoming vehicle, the car jumped out in front of the vehicle
- When was
- When the bad weather rain, fog, and snow
- When the road conditions such as a curve the vehicle ahead and are extremely dirty, Leh
- When difficult to detect weak reflection of Heather
- car, rotation of a special shape, such as car carriers
- Cars, motorcycles and such, the material of the object, the laser sensor detects
- When hateful

: by type and options, equipment is different.

I continued on next page

■ the system ON and OFF

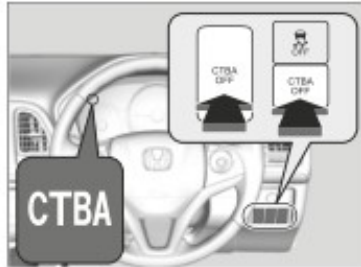

CTBA OFF About a 1 by pressing seconds, the system ON
And OFF I will switch the.

City active brake system is OFF to
When I switched, CTBA Indicator is lit
You.

The running time of the previous OFF even after the parking again.
Automatically when starting the engine ON until it becomes
Be.

1 City brake active system

In the following cases, the system automatically stops
And, CTBA that the indicator may flash
Be.

- when it is bad weather rain, fog, and snow
- dust, mud, snow, ice, windshield top frost
When it is covered with such
- when the front glass is condensation

Be when the temperature of the sensor is increased, dirt
The sensor can not sensing correctly teeth vehicles

The, CTBA System is automatic indicator is flashing
Will stop.

How to stop the car in a safe place, use the air conditioner
Lowering the temperature of the car Te, the front glass
Please wipe off the dirt.

In a state where the system can operate, system
Tem will automatically return.

In the following cases, the system OFF , please to.

- Use free or roller chassis dynamometer
If you want to
- bad road, such as off-road that is overgrown with grass
The traveling and, and mountain road leaves like take
If you want to

■ The operation in the absence of the possibility of collision

Even if there is no possibility of collision, when the following will cause the system to operate. Be aware of the surrounding circumstances, please traveling.

- When traveling in close proximity to oncoming vehicle and vehicle in front of you at an intersection and overtaking
- to try to pass at such a rate that exceeds the speed limit and low narrow gate and gate
- When you
- When traveling on the road, such as a steel plate with a step, line, construction
- When traveling in close proximity to such signs and guardrails on the road side of the following ways
- when approaching the wall or vehicle when parking, etc., it is stopped

1 City brake active system

In order to operate the system properly, you must:

Please observe the.

- When you wipe the glass, the laser sensor does not impact
- such as dirt on the front glass top (including the frost and ice)
- (No) I get rid of when there is a

If the following cases, Honda , please contact your dealer.

- when the impact is applied to the laser sensor
- When performing the repair of the windshield around

Please do not modify the suspension. cause the system is not working correctly There Be.

Same specified size, the tire, the same species in both four-wheel. tire wear no difference kind, and the same brand, Please use. Size, type, or wear brand If you use the tires of different degree, system There is a risk-free is not working correctly.


If any of the following conditions, the system is operating normally not.

- The carrying heavy luggage on the seat and cargo space At, when the car is tilted
- when the tire is not adjusted to the specified air pressure

: by type and options, equipment is different.

I continued on next page

■ For laser sensor

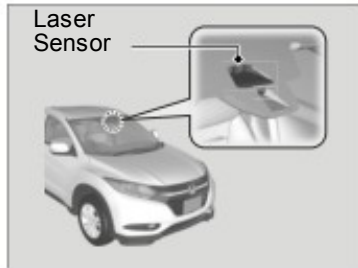

Ayama-hatsu City and active brake system
 Laser sensors proceed suppression function, From
 It is equipped with a Togarasu top.

1 for the laser sensor

W

The late damage to the eye by a laser sensor
 Since there is, I observe the following.

- Do not remove the sensor.
- from the sensor **100 mm** at a distance of less than
- expanding machine magnifying glass,
- microscopes such as the objective lens,
- using an optical instrument that there is ability,
- **DO NOT** stare into.

The following is a specification data of the laser grade. The same IEC60825-1 label of
 It has been defined in Le.

Laser grade	
Maximum average output	45mW
Pulse width	33ns
Wavelength	905nm
Output angle (horizontal × vertical)	1°

Laser grade label

INVISIBLE LASER RADIATION
 DO NOT VIEW DIRECTLY WITH
 OPTICAL INSTRUMENTS (MAGNIFIERS)
 CLASS 1M LASER PRODUCT

Laser explanatory label

Max average power: 45 mW
 Pulse duration: 33 ns
 Wavelength: 905 nm

IEC 60825-1:2007
 Complies with FDA performance standards for laser products
 except for deviations pursuant to Laser Notice No. 50, dated
 July 26th, 2001

■ start suppression malfunctions

About when the vehicle is stopped and 10km/h when the vehicle is traveling at less than 10km/h, when the vehicle approaches obstacles and depresses the accelerator pedal, the engine output is suppressed. This is the function to suppress output, to reduce the impact of collision by preventing a sudden start. In addition, steep slopes and select lever P, R, N. When, it does not work.


1 starting suppression malfunctions

W

Too depressing of the accelerator pedal in any situation that can prevent or reduce collision with other vehicles. It is not. The function does not operate correctly. There is.

Operating condition

Buzzer function in operation (Pipipi) and indicator light will blink.

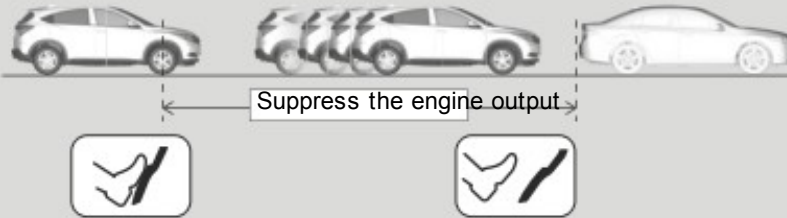

I step on the accelerator pedal. Is the amount of depression of the accelerator pedal. It does not work when less.

I release the accelerator pedal. For safety, please step on the pedal. Please step on the pedal.

When trapped within the railroad crossing, and the disabled breaker might be detected as a harm thing. At that time, I continue stepping on the accelerator pedal without panic. Or, the City active brake system OFF please push away the breaker in the.

Starting suppressive function false, City brake active. It is one of the functions of the subsystems. For this reason, The City active brake system OFF to. If you have, this function does not work. In addition, the call to protect to operate normally function. When a situation where normal operation is not possible, possible collision. The acquisition of laser sensors and operating in the absence of laser sensors. Also, City brake active. This is the same as the stem.

I continued on next page

- conditions canceling the function
 - when you release the accelerator pedal
 - about the accelerator pedal 4 when it continued stepping seconds
 - when I stepped on the brake pedal
 - When operating the steering, was trying to avoid a collision

Parking or stopping operation

Park the car

1. I step on the brake pedal firmly.
2. while stepping on the brake pedal, and slowly make the parking brake switch I pulled up really.
3. the select lever P I put on.
4. I will stop the engine.
 - u Please be locked whenever you are away from the car.

When you park in the hill, please parking brake always.

1 parking or stopping operation

C

And will not be empty Bekasi parked.
Should the select lever P N It entered into other
If had, until it becomes the origin of the sudden
acceleration unexpected

Things that paper and dried grass, oil, wood and flammable
Please do not parked in a certain place.

By the heat of the exhaust gas and the exhaust pipe, it is late to
there is.

When you parked in the vicinity such as implantation, Yes
Direction of the car-gas so as not to hit the implantation
Please choose a tree.

Advice

The Stepping at the same time the brake pedal and the
Please do not pedal between them. In addition, in the
Please do not

In a state in which were placed outside, while adjusting the
Please do not to stop the car.

Transmission to overheat, and the cause of the failure
Will.

I continued on next page

185

When you nap, please stop the engine.

Move the selector lever unconsciously, think in Dari depressing the accelerator pedal.

There is a possibility that it may lead to unexpected accidents I.

1 park

C

I stop the engine when parking.

Should the select lever P N It entered into other

If had the car out of the movement due to the

force of the accelerator pedal by mistake when

boarding a possibility that it may step on, to

sudden acceleration.

Advice

While the car does not stop completely, do not put in
Please.

It may cause transmission damage.

Do not put valuables in sight of the car
Please de.

Do not leave the carbonated beverage cans and lighter in the
Please.

Combustible materials such as lighter by car temperature rise
Tail or spontaneous ignition, such as cans or rupture
There you have it.

Snow cover at the time, Please wake the wiper arm.

Mounting portion of the arm is damaged child under the weight
of the door.

In cold weather, and you can see the parking brake,
You may want to freeze.

Without applying the parking brake, stone and Wadome
Please eyes.

Rear wide camera system

For more information about the handling of the rear wide camera, the separate and " Honda Inter navi system
Please see the absent "manual.

: by type and options, equipment is different.

Refueling

For the designated fuel


■ specified fuel

Unleaded regular gasoline
Regular Bio-mixed gasoline (E10 / ETBE22)

■ tank capacity

40 liter

How refueling

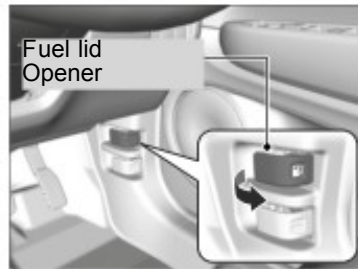

1. refueling machine petrol station on the passenger's side
To stop the car to come.
2. I stopping the engine.
3. fuel lid open the driver's seat feet
To open the lid and pull the toner.

1 for the designated fuel

Advice

Fuel specified non-fuel (gasoline bad, light oil, light Oil, etc.) you can replenish, using inappropriate fuel additive Please do not iodine.

There is a risk of conditions such as the following.

- damage such as the catalytic converter
- damage such as the fuel system and engine
- adverse effects on the engine, such as

That you use premium gasoline also

You can, but in this case, the engine performance of the original

It does not change significantly.

1 way of refueling

W


Fire is strictly prohibited refueling.

Well as some other fire for fuel vapor fuel or flammable there is a risk of explosion. It deals with fuel

, Please adhere to the following items is Rutoki.

- I always stop the engine
- flame, do not close the spark
- Do not breathe tobacco
- I do outdoors handling of fuel
- fuel spilled wiped off quickly

Precautions that have been posted on the petrol station within Please observe the section.

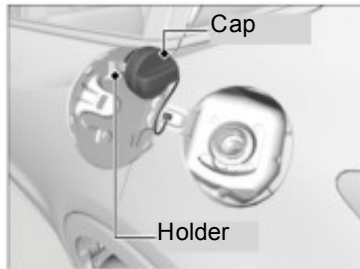

4. I open the cap.
I open the cap.

5. I bet the holder cap.

6. Insert deep into the refueling nozzle, you refueling
That.

u When it comes to a full tank, and automatic Stop of the fueling nozzle
Stop is activated, refueling stops.

W

Refueling work, open the fuel cap static of the body by touching the metal such as car body before kicking. Moth was vaporized by a spark from electrostatic Discharge that is flammable gasoline, it burns You Ri.

C

Is blown back from the fuel supply port is opened rapidly. There is a possibility that it may occur, become fire. Refueling, and carried out by only the person who discharge static electricity. When you return to the car during refueling, charging child there is a door. Again, ensure that you are discharged of static electricity.

If the sound of "shoe" is, the sound is stopped Please open slowly from waiting.

Please do not inhale fuel vapors.
If there that contain hazardous substances in fuel component You Ri.

I continued on next page

7. after refueling, hear a "click" noise is one I tighten the cap until it more than once way of refueling
u fuel lid will close it pressed by hand.

C

The automatic stop after the refueling nozzle, do not add supply
Fuel overflow due to changes such as temperature, fire
temporary become.

Make sure the cap is securely closed
To.
Fuel leakage when not closed, resulting in fire
There is a risk.

Honda and Do you do not use the cap of non-genuine
Sai.
If you do not use the genuine, you cause a fire
There you have it.

So that the fuel is not overflowing due to a change in temperature such as
temperature, fire
Automatic stop of the fueling nozzle works to leave
Has become a jar.

With additional supply to automatic stop after, fuel Mantas
You may enter the down capacity or more.

Remodeling and accessories

Accessories

If you are installing the accessories, please check the following items.

- Do not attached to the front glass accessories ?
 - u may swinging motion of accessories delay the situational awareness of the outside of the v ehicle.
In addition, fear that sucker is a function of the lens, leading to a fire There
Be.
- each pillar around the windshield, and front door glass, center, of the rear
Do not attach the accessories ?
 - u and it will prevent the operation of the side curtain air bag, it is evil to the above location
Please do not attach the Sesari.

Remodeling of the car

Honda and do not use the parts that are not suitable for non-genuine parts, functions and performance of the car, the quality,
Have. Was not suitable for the Honda and should use our genuine
parts

- band may not exert a proper functioning and performance, you can become a source of unexpected accident
Be.
Mark the following comes with the genuine parts.
- Honda If you install a thing of parts other than that has been reported to the Ministry of Land, Infrastructure and Transport, I in
violation cause.
- Please do not modify the car. The tampering, touching the law, of course,
You may cause an unexpected accident.

At the time of installation, such as a wireless device, be sure Honda please contact your dealer.
If mounting apparatus and method is not appropriate, it having an adverse effect on the electronic components
I There is.

1 remodeling of car

HONDA
GENUINE PARTS

The purchase, at the time of attachment, Honda and your dealer
Please contact us.

191

Maintenance

In this chapter, I will not describe basic maintenance.



In front of the maintenance		Maintenance and inspection of the tire		Cleaning	
For inspection and maintenance	193	Inspection of the tire	213	Daily care	222
For safe maintenance	194	Tire rotation	215	Cleaning in the car	222
And Maintenance Guidelines	194	Winter tires	217	Cleaning the outside of the vehicle	224
Maintenance in the engine room		Honda smart key			
Maintenance items in the engine room ...	195	Honda battery exchange and handling of the smart key			
I open the hood	196	Conversion	218		
Recommended engine oil	197	Caring for air conditioning			
Supply of windshield washer fluid	197	Air clean filter	220		
Replacing the light bulb	198				
Maintenance and inspection of the wiper blade	200				

For inspection and maintenance

By the Road Vehicles Act, daily inspections and statutory inspection is mandatory for cars.

In the inspection and maintenance, please use safely and comfortable car.

That it is different from the usual (lack of sound, smell, of the brake fluid, after the car is on the ground

Etc. are) If you notice, Honda please have it inspected at the dealer.

For more information about the inspection and maintenance, refer to the separate maintenance notes as well.

■ the type of inspection and maintenance

■ Daily Inspection

It is the inspection, such as car wash, refueling and long-distance running before, it is at the discretion of your own.

■ periodic inspection

12 months and 24 is the inspection to be carried out on a monthly basis either. Those that are required by law, Honda Some specifies.

■ Other

There are inspection and maintenance at the time of the periodic replacement and free inspections, strict how it is used when the new car.

For safe maintenance

When performing maintenance, safety precautions and the following maintenance notes.

Please read carefully, please go to ensure the safety.

When it was carried out maintenance on customers' own, maintenance inspection

Please be recorded in maintenance records.

■ Safety matters for the equipment and place to perform maintenance

- for explosion prevention and fire, it is far from a gas or liquid flammable cigarettes, sparks, flames, Zakeru.

■ The safety matters about the car

- I pay attention to the toxic effects of carbon monoxide contained in the exhaust gas of the engine.
 - u please do adequate ventilation sure when you start the engine.
- I will be careful to burn due to parts that become hot.
 - u Before touching anything, please cool enough the exhaust system and engine.
- I will be careful to injury from moving parts.
 - The u, except when indicated, please do not run the engine.
 - u idling stop in, please do not open the bonnet.
- in the engine room, I note misplaced combustible materials or towel.
 - u There is a possibility that it may lead to unexpected accidents such as fire.

And Maintenance Guidelines

■ oil and parts to be used in the maintenance service

When you receive a maintenance service, Honda to use the oils and genuine parts

I recommend that. Honda genuine parts, High are identical to the parts that are used in car

Because it is manufactured on the basis of the quality standards, it is safe in terms of performance and durability.

W

Make the proper maintenance, and failure before riding to be no.

State and there is a fault during traveling, appropriate maintenance. If as some other serious cause an accident leading to death You.

Sure, that are described in this manual

The separate volume and Maintenance Guidelines gas of the engine.

The inspection period described in the maintenance notes.

Please observe.


Maintenance, observe the instructions and warnings.

You do not abide by the instructions and warnings of maintenance, there is a risk of serious injury or death and.

Always, hands that are described in this manual Please observe the notes in the order.


Maintenance in the engine room

Maintenance items in the engine room

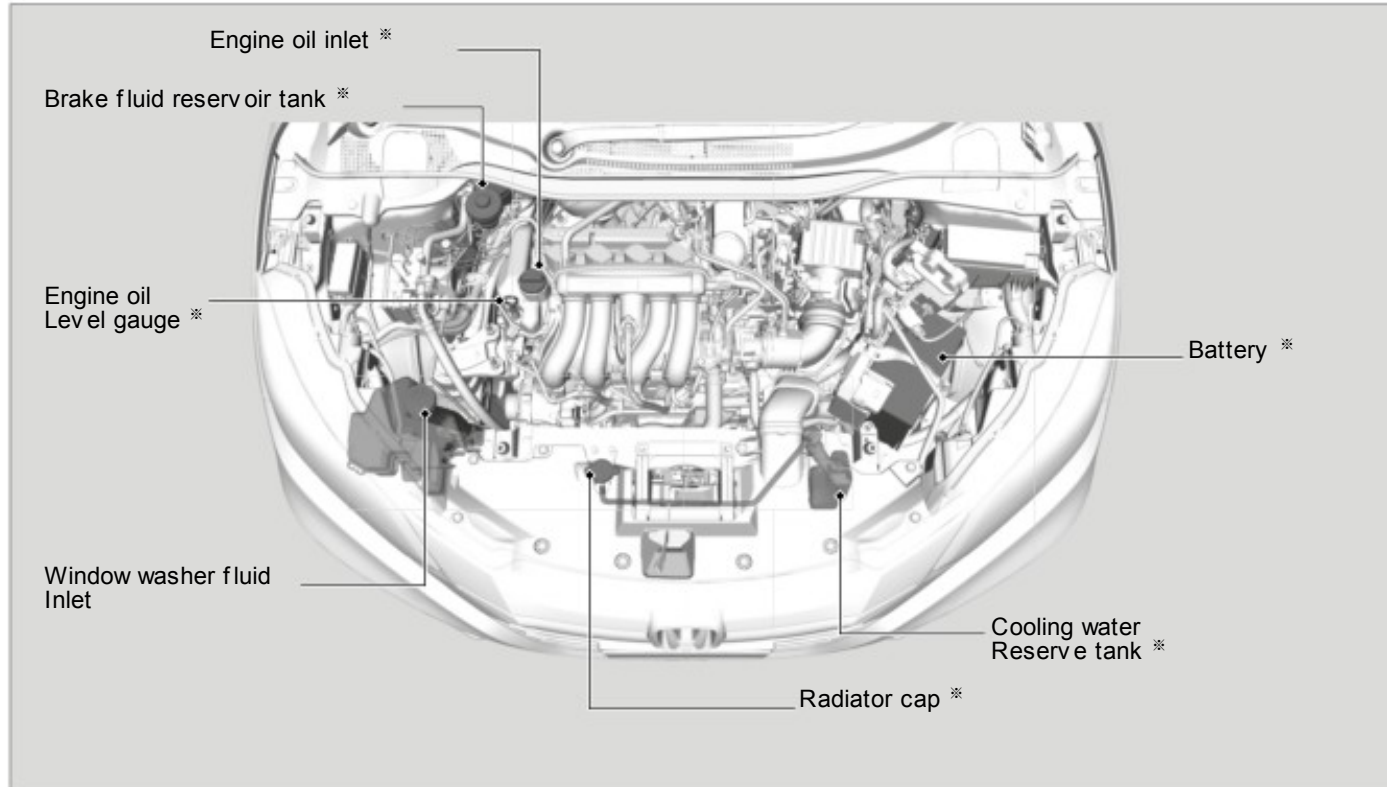

※: For inspection and maintenance, please refer to the separate "Maintenance Notes inspection and maintenance".


I open the hood

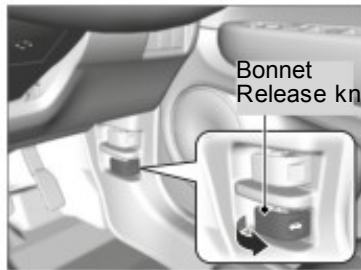

1. and parked the car, put the parking brake on. I open the bonnet
2. located in the driver's seat feet, hood release knob I draw.
u bonnet will lift a little.



3. locking mechanism by pressing the lever on the hood center.
Release the, to open the bonnet.

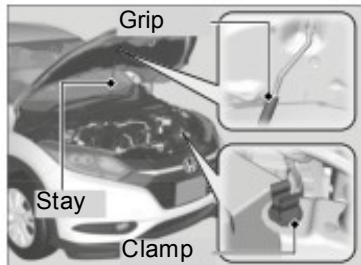

4. preparative clamp from the stay with a grip
I bet the bonnet Disconnect, the stay .

When closing, to pay to remove the clamp stays
Lower gently bonnet from Umate, about
30cm I release the hand from a height of .

C

When closing the hood, Hasa and hand
I note Manai so.

Advice

In the state that caused the wiper arm, Bon'ne~tsu
Please do not open the door.

Bonnet hits the wiper, bonnet
You may wiper and may be damaged.

When closing the hood, hood surely
Please make sure that it is locked.

The idling stop in, open the bonnet
Please do not only.

Recommended engine oil


If you are using what amount is deteriorated or less, engine oil, engine
This may lead to damage or malfunction of emissions.



Recommended engine oil :
Honda genuine engine oil
2 Honda genuine engine oil P.268
API SM or class SN to oil cans or more class
API CERTIFICATION (manufactured by API Aether
Tee-verification) ene containing mark
Jin'oiru

Supply of windshield washer fluid


The amount of washer fluid, make sure to remove the cap.

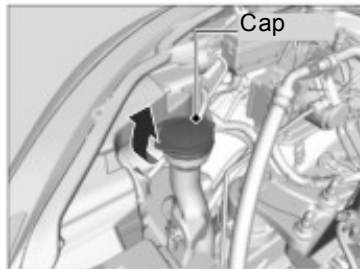

If you have been reduced, washer fluid cap
Remove, and then supplied to the washer tank.

1 recommended engine oil

Engine oil of commercial, viscosity according to the outside
temperature. Please use the following table based on the things of time.

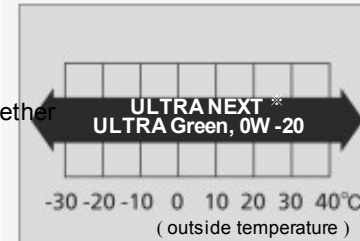

※: Excellent fuel economy most Honda genuine oil
Is. Honda please purchase dealer.

Degradation of engine oil will violently winter.
Place to drive a short distance, the city mainly in winter
The case, please replace as soon as possible.

1 supply of windshield washer fluid

Was placed in a tank, the liquid washer fluid other than
Please do not.

In order to prevent freezing of the washer liquid in winter,
Please increase the concentration of washer fluid.

Replacing the light bulb


Headlight bulb

■ halogen headlights

If you want to exchange, please use the following bulbs.

High / low beam halogen headlights : 12V over 60 / 55W

High beam halogen headlights : 12V over 60W

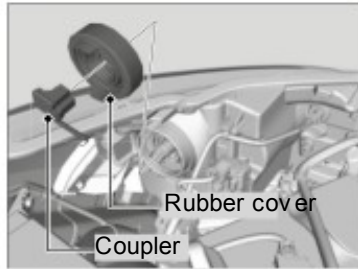

High / low beam halogen headlights vehicles

1. I extract the coupler.
2. I remove the rubber cover.

1 halogen headlights

Advice

Halogen bulb will be very hot. Deal with

When, please go from heat to cool.

In addition, oil, sweat, Scratches on the glass, light bulb

There is a risk of cracking and overheating.


has a part of the base, glass Ya skin when handling

Please do not touch the hard objects.

When the dirt is attached to the glass, and thin neutral detergent


It's going to wipe with a clean cloth that has been moistened

with an aqueous solution of stomach

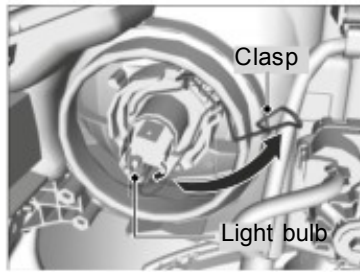

3. Remove the clasp and remove the old bulb.
4. I install a new bulb.
5. Replace the stopper plate, install a rubber cover Kick.
u state of the stopper plate, check the headlight I can confirm from the window.
6. I attach the coupler.

I continued on next page

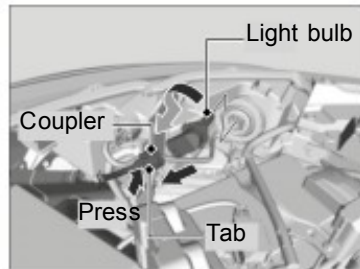

High beam halogen headlights vehicles

1. I remove the coupler.
 - u coupler while and then press down and pull the nails
 - Be.
2. is withdrawn by turning the old bulb.
3. to be fixed by turning to the right bulb new.
4. Push the coupler, to attach.


■ LED headlights

Inspection of the light bulb, the exchange, always Honda Please ask your dealer.


Front direction indicator / front hazard flasher bulbs

If you want to exchange, please use the following bulbs.

Front direction indicator / front hazard flasher : 12V over 21W (orange)

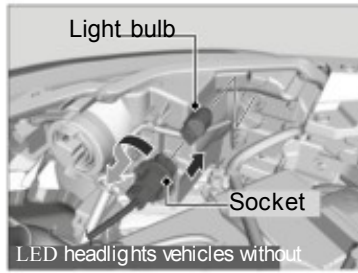

1. Unscrew the socket to the left, the old bulb Withdrawn.
2. I plug in the new bulb.

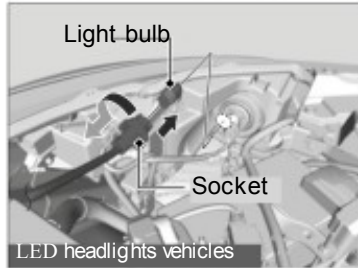


Car width bulbs

Bulb type

If you want to exchange, please use the following bulbs.

Car side lamp : 12V over 5W

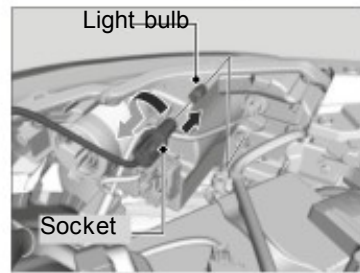

1. Unscrew the socket to the left, the old bulb Withdrawn.
2. I plug in the new bulb.


LED type

Car width lights LED uses. Inspection, replacement Honda be sure to ask your dealer Have.

Fog light bulb

If you want to exchange, please use the following bulbs.


Fog Light : 12V over 35W

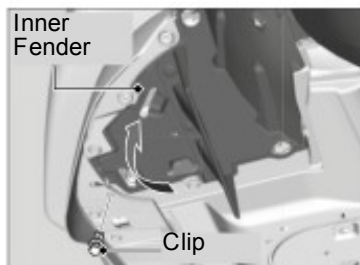


1. remove the clip, the inner fender
I pushed on.

1 fog light bulbs

When removing the clip, slotted screwdriver
Plug in the, take it causing the pin of the central part
Remove.


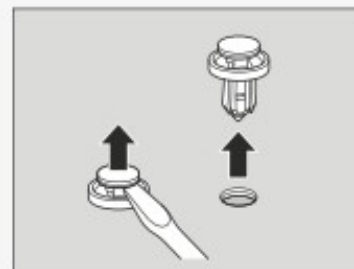


When installing the clip, clip center
Insert while causing the pin of the Department, and the flat pin
Please press until La.

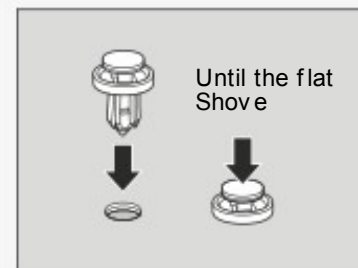

I continued on next page

203

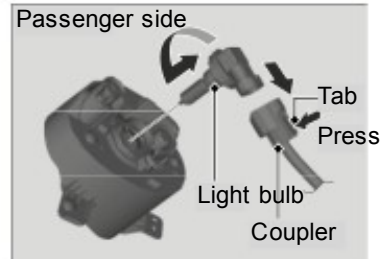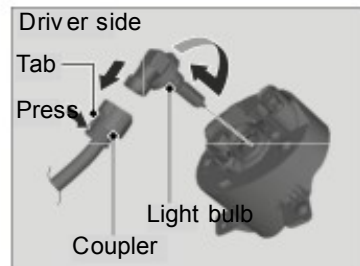

2. I remove the coupler.
 - u Remove while pressing the claws coupler.
3. is withdrawn by turning the old bulb.
4. to be fixed by turning the bulb new.
5. Push the coupler, is attached to the light bulb.

1 fog light bulbs

Advice

Halogen bulb will be very hot. Deal with
When, please go from heat to cool.

In addition, oil, sweat, Scratches on the glass, light bulb
There is a risk of cracking and overheating.

has a part of the base, glass Ya skin when handling
Please do not touch the hard objects.

When the dirt is attached to the glass, and thin neutral detergent
It's going to wipe with a clean cloth that has been moistened
with an aqueous solution of stomach

Side repeater / aspect hazard flasher bulbs

Side direction indicator / side very blinking lights LED uses. Inspection, exchange
Honda Please ask your dealer.


Brake light / tail light bulb

Brake light / tail light is LED uses. Inspection, replacement Honda it, ask the dealer Please.


Rear direction indicator / rear hazard flasher bulbs

If you want to exchange, please use the following bulbs.

Rear direction indicator / rear hazard flasher : 12V over 21W (orange)

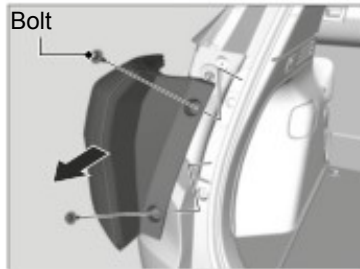

1. I remove the bolt.
2. preparative to pull out in the direction of the arrow until the light body Rihazusu.

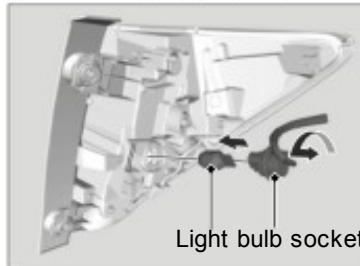

3. Unscrew the socket to the left, the old bulb Withdrawn.
4. I plug in the new bulb.

Reversing light bulb


If you want to exchange, please use the following bulbs.

Reversing light : 12V over 16W



1. The minus dry in the cutout portion of the cover
Insert the tip of the bar, remove the cover
Be.

u so that the cover is not scratched, the driver
Please wrapped a cloth.

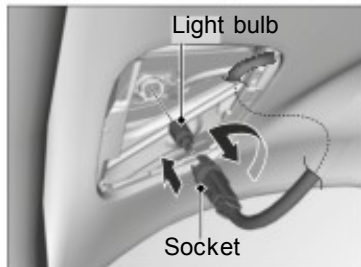

2. Unscrew the socket to the left, the old bulb
Withdrawn.
3. I plug in the new bulb.

Number bulbs

Number lights LED uses. Inspection, replacement Honda be sure to ask your dealer
Have.

High-mount stop lamp bulb

High-mounted stop lamp LED uses. Inspection, replacement Honda sales
Please ask the shop.

Bulb of other

■ map lamp bulb

Map lamp LED uses.

Inspection, replacement Honda it, ask the dealer.
Please.

■ interior light bulb


Interior light is LED uses.

Inspection, replacement Honda it, ask the dealer.
Please.

■ cargo space lighting bulbs


Please use the following bulbs.

Cargo space lighting : 12V over 5W

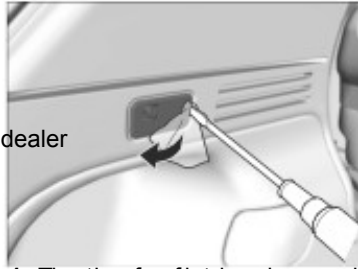

1. The tip of a flat head screwdriver in the lamp body of a flat head screwdriver in the lamp body. Insert the end, push open.

u so that the lamp is not scratched, driver u so that the lamp is not scratched, driver
Please wrapped in a cloth.

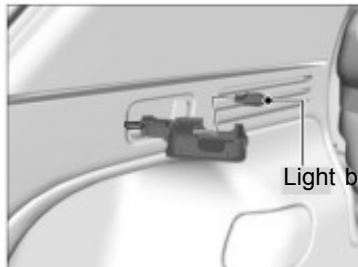


2. I pulled out the old bulb.

3. I plug in the new bulb.

■ vanity mirror lighting bulbs


Please use the following bulbs.

Vanity mirror lighting : 12V over 2W

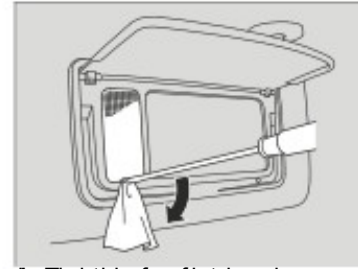

1. The tip of a flat head screwdriver in the lamp body of a flat head screwdriver in the lamp body. Insert the end, push open.

u so that the lamp is not scratched, driver u so that the lamp is not scratched, driver
Please wrapped in a cloth.

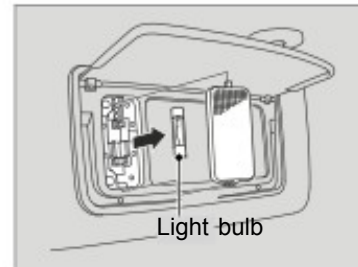

2. I pulled out the old bulb.



3. I plug in the new bulb.

Maintenance and inspection of the wiper blade rubber

Inspection of the wiper blade rubber

Wiper blade rubber is is damaged, or become uneven wipe, U~indoga I will hurt or lath. Inspect the condition of the wiper blade rubber on a regular basis, Please, replace it if it is damaged.

Replacing the front wiper blade rubber

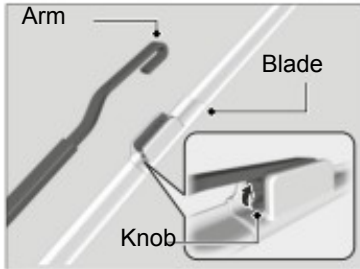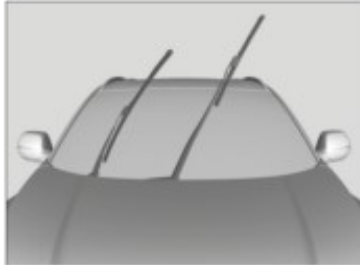

1. driver's seat side, wiper architect in the order of the passenger side
I cause free.

2. while pushing up the knob, arm boot from
Remove and slide the blade.

1 exchange of front wiper blade rubber

Advice



Bonnet in the state that caused the wiper arm
If you can not operate the wiper opening or,
I will damage the wiper arm and hood.

Advice

Wiper arm falls down to disconnect the blade
With that, there is a possibility that the glass may be damaged.

I continued on next page

209

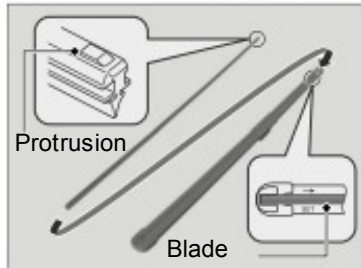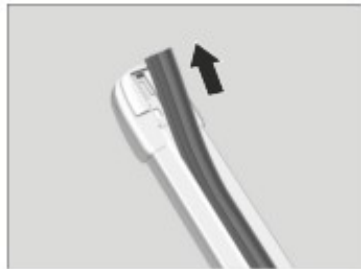


3. stopper of rubber or claws of the blade
Pull until it disengages et al., And blanking the rubber as it is pulled out from the blade.

1 exchange of front wiper blade rubber


wiper as it is
when you return the wiper arm, passenger side, lock
Please return in the order of the seat side rolling.

4. blanking it on its top side with no protrusions rubber
Is inserted along the blade.
u attach to the wiper arm and blade
Only, the protrusion of the rubber is of the blade tip
Insert until it is inserted into the groove, to ensure
And secure.


Replacement of the rear wiper blade rubber

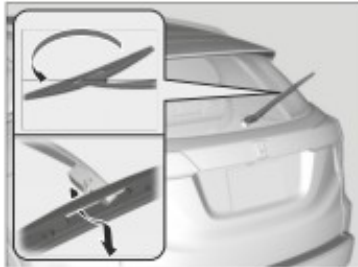

1. I cause the wiper arm.
2. Rotate the bottom of the wiper blade,
I removed from the arm.

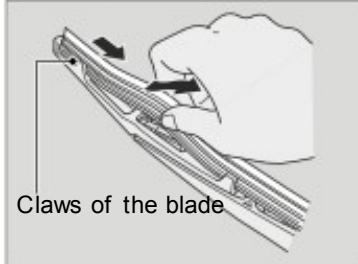


3. The claws of the blade tip by pulling the rubber
I take off from.
4. I pulled out from the rubber blade.

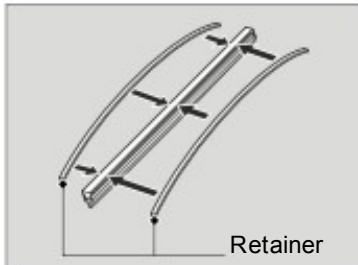

- and 5.** outside the retainer from the rubber pulled out then, is attached to the new rubber.
u There is a warp in the retainer. Re
Installing the rubber in the direction of the figure Tena
Please be only .

I continued on next page

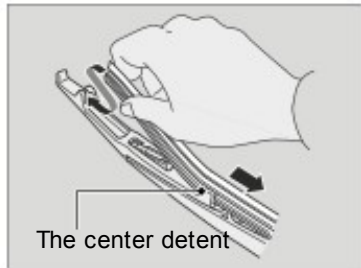

6. Insert the rubber from the claws of the blade center then, and through the rubber blade with the tabs on the both ends Be.

Maintenance and inspection of the tire

Inspection of the tire

■ For inspection of the tire

Tire or worn or damaged, it is not a proper pressure, do not be a safe driving Ride or Ibakari also impaired.

Conditions of the tire are required for safe driving are as follows.

- that the type and size is correct
- that the state of the ground plane is good
- that the air pressure is correct
- that there is no wear, scratches, cracks, and foreign matter

Inspect the following order to satisfy these conditions, the optimum condition of the tire always Please keep.

■ inspection routine

It is the inspection to be performed always before riding the bicycle. Check the following items, and maintenance in some circumstances.

- Do not see the tire as if the collapse ?
 - u If you seem to collapse, please check the air pressure immediately .
- Do not wear heavy, scratches, cracks, foreign objects ?
 - u Depending on the situation, please replace the tire.

1 for the inspection of the tire

W

Intense tire, air pressure is not appropriate wear
You do not want to use the tire.
Using the wrong tire, serious injury
There is a risk that can lead to an accident or death.

Always, size and type using the appropriate tire
To.
Using the wrong tire, serious injury
There is a risk that can lead to an accident or death.

The specified air pressure, there is affixed to the body of the driver's seat, next to it has also written on the label.
If you do not have this manual, to La car
Please see the bell.

Same specified size, the tire, the same species in both four-
Wear tire wear no difference kind, and the same issue
Please use.
Other different wear degree size, type, or brand
If you use the ear, ABS, VSA, AWD etc.
You can no longer function properly, the power transmission
Wiper adversely affect the.

: by type and options, equipment is different.

I continued on next page

213

■ Inspect the pneumatic measuring instrument

Please measure the air pressure of all tires. If the air pressure is lowered to, I will examine carefully the punk.


The specified tire pressure, please refer to the appendix at the end of this manual.

2 documents P.268

■ inspection damage, foreign matter, wear

Please check the following items.

- projection and side ground plane of the tire, bulge is normal or ?
 - u If any abnormalities are found, you will need to replace the tire.
- the tire side, or no tear, crack ?
 - u If there are cracks and crevices, you will need to replace the tire.
- wear indicator and the ground plane is not in the same height ?

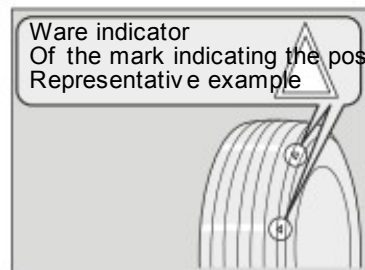

Wear indicator (wear limit display)

Wear indicator to the ground surface of the tire

Yes, groove than other portions 1.6mm shallower

There are.

Ground surface is worn, the wear indicator

Once at the same height as the, replace the tire

Please.

1 for the inspection of the tire

Tire pressure, tire when the temperature is low

Please measure.

If necessary, use the air until the specified air pressure

Please to discharge or injection.

Tire also measure the air pressure at the time of high


temperature, and low temperature, and low temperature

can be accurately measured to become higher than when the temperature

Tire rotation


The 5,000km please to the tire rotation every time the vehicle has traveled.
And perform tire rotation is, in order to avoid a particular tire is worn to
Be.

■ If there is no tire rotation indication mark

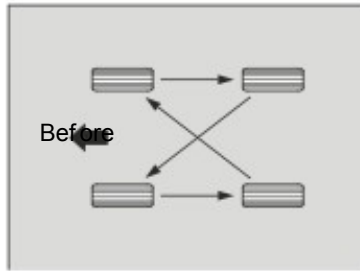

As shown in the diagram on the left, rotate the tires
Causes.


■ If there is a tire rotation indication mark

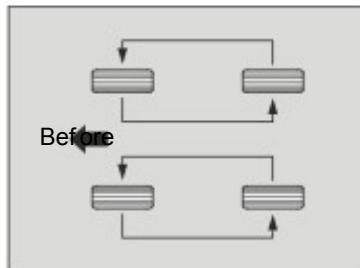

As shown in the diagram on the left, rotate the tires
Causes.

1 tire rotation

to tire the tire rotation direction is specified
Is, there is a tire rotation indication mark
So that the rotation indication mark is directed to the front as
Please attach the figure below


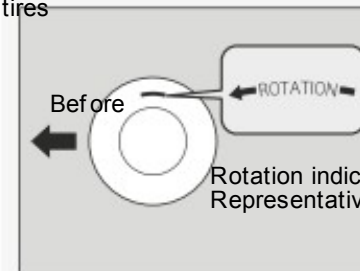


Rotation indication mark
Representative examples of

Tightening torque
108 N - M (11 kgf - M)

I continued on next page



■ wheel cover desorption method

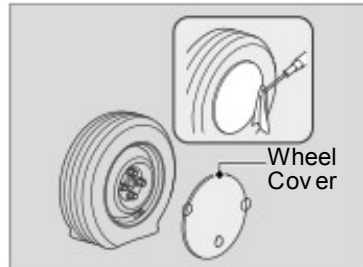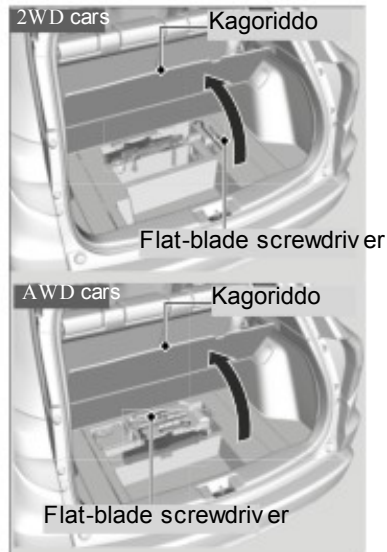

1. opened the Kagorido, minus Dora over I take out the bar.

2. The minus dry on the edge of the wheel cover
Insert the tip of the bar, and the call on the tire side
I remove Jute.
u so that the wheel cover is not scratched, de
It should be wrapped with a cloth or any other Leiber
Have.
u by changing the location 2 Ease out to be repeat locations
Will no longer.

1 wheel cover desorption method

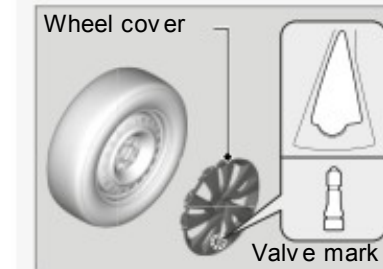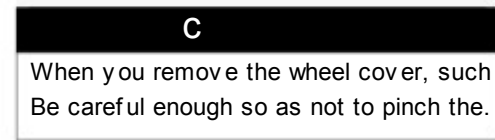

When installing the wheel cover, wheel
The Hoiruka the position of the tire valve in Le
Mounting from combined valve mark of the bar
, Please.

Winter tires

If the vehicle is traveling on a road with frozen or snow-covered road, the tires and chains snow tires then, please drive by taking the inter-vehicle distance enough to drop the speed.

In addition, the operation of the brake and handle, especially carefully it can cause skidding. Please go.

Snow tires and tire chains, and must be fitted by law and driving conditions I use it when that was.

If you are installing, please refer to the following points.

■ snow tires

- I choose the tires of the same type with four-wheel
- I to mount the snow tires on all four wheels

■ tire chain

- Honda is mounted on the front wheel in accordance with the instruction manual that came with a genuine steel chain. Make sure that you are not in contact with the suspension and brake line. It is also noted that mounting the tire chain on a dry road surface will accelerate the wear of the chain.
- I will be traveling slowly

Advice

Wearing inappropriate Chain Saw
Way of wearing is inappropriate, brake line of the car
Tion, suspension, body, wheel
There is a risk of damage.
Case falls somewhere in the car, the chain is immediately
Please stop running to.

Tire chains, 2WD cars, AWD in both cars
I am attached to the front wheel.
The rear wheel, and Do you not install the tire chains
Please.

When fitted with a tire chain, 30 km / h
Please traveling at a speed of less than.
It is also noted that mounting the tire chain on a dry road
surface will accelerate the wear of the chain.
Please avoid. Tire
I will accelerate the wear of the chain.

Honda battery replacement and handling of the smart key

■ Handling

Honda handling of the smart key, please note the following points.

- Do not throw or dropped or the transmitter
- temperature is extremely high / it is not put in place low
- it is not immersed in the liquid

■ how to replace batteries

If the working distance becomes unstable, I can be considered is the battery life.
If the indicator does not light when you press the button is out of batteries. Power
Please replace the pond.

1 Handling

Honda If you lose a smart key,
Honda, please contact the dealer.

1 battery replacement procedures

C

Removed parts and batteries, and children
Be careful not to swallow.
May suffer the injury and swallow There
Be.


When replacing the batteries, were there is a risk of such
Because, Honda recommends the replacement of the dealer
Be.

When replacing batteries, can be securely attached to the cover
Please.


If it is not securely attached, water-resistant performance
The cause of the failure and decline.

Battery Honda clock shop or dealer, camera store
Please purchase etc..

■ Honda smart key

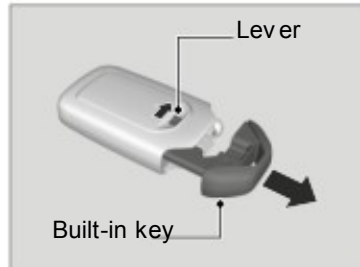

Button battery CR2032

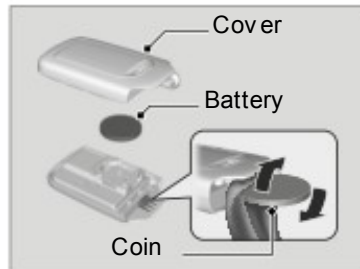

1. while pulling the lever to eject the built-in key
Be.

2. I remove the cover.

u To prevent scratches on the cover, coin
And remove the cover or by winding a cloth to
Be.

3. + and - so that no wrong, replace the battery
That.

Caring for air conditioning

Air clean filter

■ time to replace the air clean filter

Air clean filter is usually one year or 15,000km Replace every
Have.

If it is used in places such as dust, we recommend early exchange.


1 air clean filter

Deodorizing effect is weakened when you use a fragrance, de-
There is a smell that life is shortened.


Air volume of the air conditioning or significantly reduced, glass
When it became easy to cloudy, and the eyes of the filter
I thought clogs. Replace the filter
, Please.

Allele-free high-performance deodorizing filter, air
Shu Hitoshi, the pollen allergen, the dust in
I reduction process, also the exhaust gas odor.

■ Replacing the Air clean filter

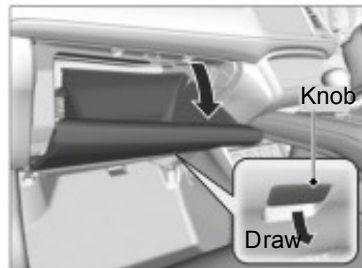


1. I open the glove box.

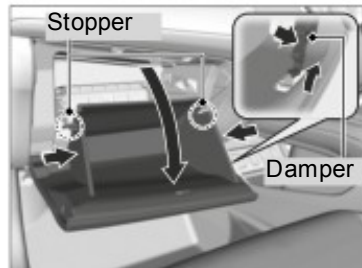

2. I remove the damper.

3. vinegar is attached to both sides of the glove box
Push inward on top, Globe
I put down the box.

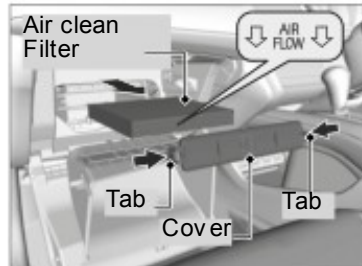

4. while pressing the tab at the left and right, the cover
Remove.

5. I take out the air clean filter.

6. I will replace it with a new one.
u " AIR FLOW arrow "mark, down
Attach it to be.

Cleaning

Daily care

■ Caring after running

Traveling later, be sure flicked a duster such as hair and dust adhering to the painted surfaces

Have. Scratches on the paintwork due to stones can cause rust. The complement early if you find

Please be Osamu.

■ For car wash

Please do to the car wash once a month.

In the following cases, please wash always.

- when traveling the road that was sprayed anti-freezing agent
- when traveling the coast
- When the droppings coal tar, smoke, birds, insects, and sap with

Cleaning in the car

Cleaning of the interior, please drop the dirt after removing the dust and dirt with a vacuum cleaner.

Moistened lightly with a soft cloth what was dissolved neutral detergent in warm water and dirt to wring

I turn off the record. Then, with a clean cloth dampened with fresh water, clean drop the same

Please be with.

■ cleaning of seat belt

Clean it with a brush what was dissolved neutral detergent in warm water, then air-dry

Lets.

early if you find

Roads and was sprayed anti-freeze agents, and run the coast
Car wash at the time of the line, just in case the inside of the
Please wash to enter.

1 Cleaning the car

Please do not pour water into the room.
Or water to electrical equipment such as switches and audio
It may cause failure of the cult.

The silicon in electrical equipment, such as audio, switch
Please do not apply a spray of emissions system.

There is a possibility that the cause of the vehicle fire or
Panasonic coated with a silicon-based spray to electrical
When most Honda, please contact your dealer.

By component, such as chemical, liquid fragrance resin
The cause discoloration parts, cloth material, stains, and cracks
There is Succoth.
Organic solvents benzene, such as gasoline, acid, A
Please do not use solvents of alkali resistance.

After using a chemical class, and with dry cloth
At Please wipe lightly.

On plastic parts, of cloth material as the cloth that was used
Please do not leave for a long time.

The liquid fragrance, and attach securely so that it does not
Please.

■ Caring for leather

Such as leather-wrapped handle, wool neutral detergent for 10% lightly included a soft cloth with an aqueous solution I dropped the Mase dirt. Then, wipe off a soap with a soft cloth dampened with fresh water Ri, dry and with good ventilation. Please wipe off dirt immediately when attached.

■ Cleaning the glass

Please wipe with such as glass cleaner.

Cleaning the outside of the vehicle

While applying enough water, and below, car wash, cleanses the underbody. Paintwork, while applying the water to near the bottom in the order from the roof, and soft brush, wipe the engine room, etc. I will wash with Rakaimono. If it is very dirty, water is dry and wash with mild detergent, and dropped from the detergent thoroughly with water. Wipe out that it is not Ka.


■ When using an automatic car wash machine

- I want to store the door mirror
- wheel cover equipped vehicles, do not use a dedicated wheel brush automatic car wash machine

■ When using a high pressure washer

- I adequate separation distance of the car body and car wash nozzle
- Because water may enter the chamber is too close, window around, particularly Is carried out with care
- Do not apply water to the engine room

Cleaning the outside of the vehicle
Wipe the engine room, etc. thoroughly
Please do not pour water.
This can be the cause of malfunction

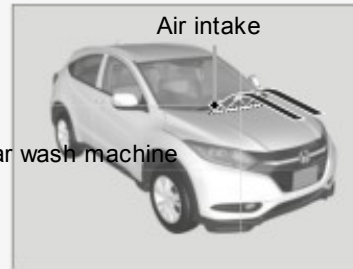

■ When waxing

Wax, a month 1 please take when it is no longer repel water or times.

And after the car wash, go to to write when the body surface is lowered below body temperature.
Please.

■ Caring for resin painted parts such as bumper

The resin painted parts, gasoline, oil, radiator fluid, such as battery acid with

Coating and stains will cause peeling When you wear. In case of skin contact, and soft immediately.
Please wipe with a cloth had.

1 When waxing

Advice

Scouring powder (compound) wax-cored,
Please do not use. Fine scratches remaining painted surfaces

Might cause.

Wax Honda your genuine chemical supplies

Please.

1 Cleaning of painted resin parts such as bumper

If you want to repair of painted resin parts, Honda sales

Please consult the shop.

You damage the coating film using the inappropriate paint.

■ Cleaning the glass

Please wipe with such as glass cleaner.

■ water-repellent glass About

Seat window before (glass door) Yes coated water film is stuck on, and ashamed of water droplets
You can. You can wash, please wipe with a soft damp cloth.

There is that timing is bad water temporarily use a glass cleaner, but water

To return to the original if the wash. When the magnetic became worse, water Honda
Please contact us.

1 Cleaning the glass

The rear window, Anne and heating wire on the inside of the glass
glass line has been installed.

So that it does not hurt, with a soft cloth along this

Please wipe
of water droplets

There is a limit to the duration of the effect of repelling water
You! As observe the following in order to prolong the life of

Please.

Remove stubborn dirt such as mud, it is the opening and
cleaning
Please contact your dealer.

- scouring powder (compound) glass cleaner containing

Do not use wax or toner, detergent, etc.

- is not performed defrost, etc. in any metallic

- When using an automatic car wash machine, dirt such as mud
ahead

■ aluminum wheel care of

Aluminum hate dirt and salt. When seawater and road deicing agent is attached, and sports Please drop in early dirt soaked with neutral detergent to Range.

1 aluminum wheel care of

Please use the wheel of this car only. With the wheel of non-dedicated, parts and travel device Fear that interferes with the rake device There Be. Wheel exchange, Honda your dealer Please.

■ Cloudy headlights, the brake light

Due to the rain or car wash running, lamp headlights, and brake lights, the lens surface There is what someone cloudy temporarily. Also, the temperature difference between the outside air lamp, it is Sometimes lens inner surface condensation.

Hard compound and brush (abrasive) containing Do not use detergent, etc.. Tail or cause discoloration or spots, scratch There you have it.

In natural phenomena similar window glass and the cloudy and rainy weather in, this is a matter of function on There is no.

Also, you may be the structure of the lamp, water droplets adhere to the edge of the lens, but the function It is not a problem of the upper. However, the water in the large and if the water is accumulated in the lamp If the drop is attached Honda please have it inspected at the dealer.

■ Aqua Clean mirror care of

For improving the visibility of the rainy weather, parents spread as of the membrane raindrops on the mirror surface It is coated with a water effect.

1 Aqua Clean mirror care of

Advice Hydrophilic effect of the mirror will be lost, the following Please note the point. • Do not adhere to wax and water repellent on the mirror surface the following steps • oil film take-agent cloth or with a sand (a compound Etc.) Do not rub the surface with a mirror

■ recovery of hydrophilic effect

When the hydrophilic effect is lowered dirt is deposited on the mirror surface, and the following steps effect will be restored by performing.

1. then wash the mirror surface, and remove the dirt.
2. I wipe off with a clean cloth dampened with water.
 - u Use a mild household detergent or glass cleaner genuine if the dirt does not fall After washing, please wash with plenty of water.
3. 5-9 I shed sunlight on the mirror surface than time.

: by type and options, equipment is different.


In the case of the unlikely event

In this chapter, I have described how to respond in case of emergency.

Tools, flares	229	Jump-start	245
When you punk	230	Select lever does not move	247
Emergency repair of a punctured tire	230	Overheat	248
Handling of the jack	240	Lighting of the warning light / flashing	249
Kake-kata of jack	240	Fuse	
Engine does not start		The location of the fuse	253
Checking the engine state	242	Inspection and replacement of the fuse	260
Honda is broken when the battery of the smart key ...	242	Tow	261
Engine stop event of an emergency	244	when the tail gate does not open	264

Tools, flares

The tool type

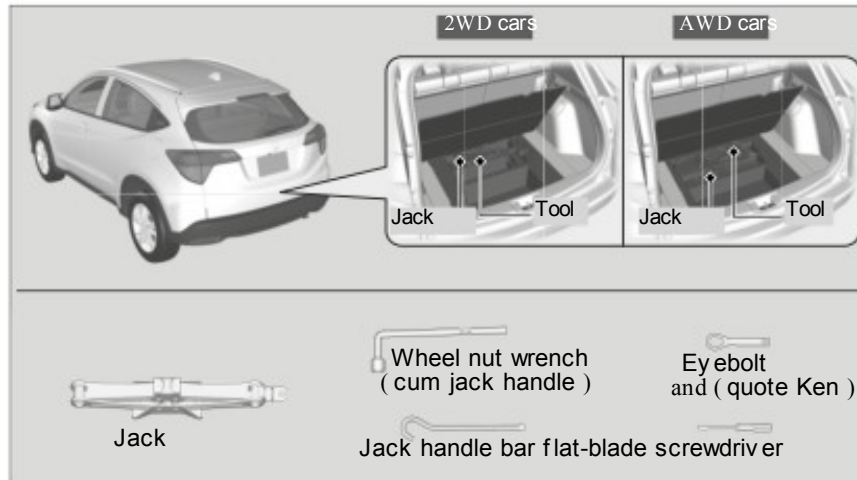

Warning flare

Use when you failed in hazardous locations such as highways and railroad crossings. I go sure that you check in advance that you carefully read the following, which are described in the flares Sai.

- How to use
- Usage Notes
- duration of flaming
- expiration date

2 flares P.2

One kind of the tool

Tooling now is housed in the cargo space Be.

1 flares

W

Used in the near flammable materials such as gasoline.

There is a risk of fire or explosion.

C

When you use the flares, it be noted that the following

- Please do not touch the children. Have It seems flares are ignited due Shifts were
- Please do not point to the face and body. It may cause burns or unexpected accidents.
- used because it bad visibility in the tunnel Please do not iodine. Within the tunnel Please use the hazard flasher.

When you punk

Emergency repair of a punctured tire

If tire damage is severe, you will need to tow the vehicle.

If there is a small hole in the tire simply, local dealer in order to repair the permanent damage. You can not use the kit. Honda also dealer

So that it can be operated to, tire puncture emergency repair of repairing temporarily damaged. Please contact the load service.

I can emergency repair kit.

When punctured, and speed over the brake gradually Grasp the handle

Please parked in a safe place dropped.

1. parked ground hard, it does not slip, where a horizontal, or the parking brake Kick.
2. the select lever **P** I put on.
3. to move the flashing emergency lights flashing, the power mode OFF to the mode.


1 emergency repair of a punctured tire

In the following cases, emergency tire puncture repair

You can not use the kit. Honda also dealer

Please contact the load service.

- When the expiration date of the emergency repair agent has expired
- When you are punk or more
- about 4mm and punk with stab wounds and cuts of more than When the
- When you punk road surface ground parts other than the damaged

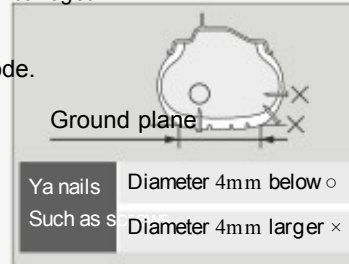


- when traveling in a state in which deflated almost
- when the tire is off the wheel
- when the wheel is damaged


The Do not remove, such as nail stuck in the tire Sai.

If you would unplug, emergency repair kit tire puncture In some cases the emergency repair is impossible.

■ preparation of emergency tire repair

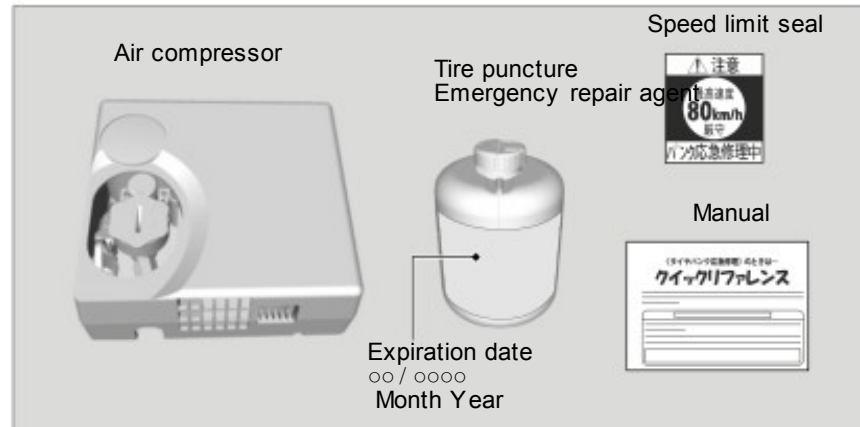

1. opened the Kagoriddo, take out the emergency tire puncture repair kit.
2. put horizontally kit to tire near you away from the traffic, it was punk.

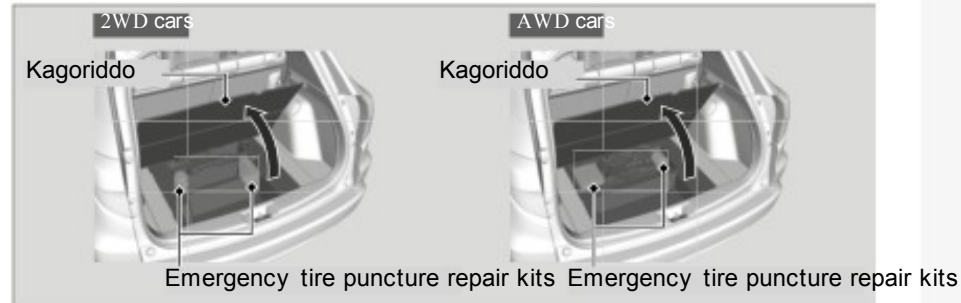


1 preparation of emergency tire repair

For a smoother emergency repair, tire pan
The more Read the instructions that come with the clock
Please emergency repair kit

I continued on next page


■ injection of air and emergency repair agent

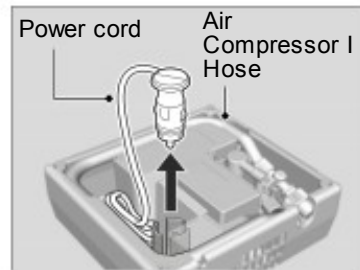

1. I take out the power cord and the hose from the air conditioning air compressor.



2. I remove the air compressor cap.

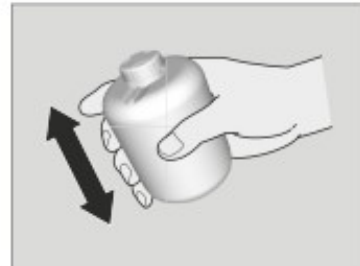

3. I shake the bottle well of emergency repair agent.

1 injection of air and emergency repair agent

W

The Harmful drinking, for emergency repair agent, fatal contains a substance that can be a basis.

If you were drinking by mistake,

- I'm going to drink lots of water as much as possible
- please consult a physician immediately.


If you are attached to the skin or eyes

- Please wash thoroughly with water.
- The medical attention immediately if you feel something is wrong. Please response

So that it does not touch the child accidentally, storage, Please handle with care

Sealant capacity when the outside air temperature is below the freezing point. It may not flow in easily. I warm up in the car. Makes it easier flows.

Emergency repair agent adheres to the clothes, do not fall. Please note that there is it to lo.

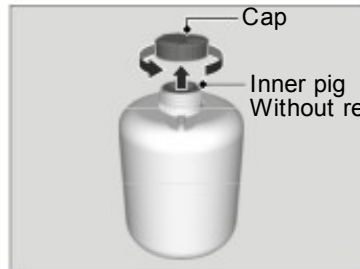


4. I remove the cap on the emergency repair agent

u Please do not remove the pig inside.

Without removing

agent of air and emergency repair agent
empty bottle injection is over air conditioning plexes
Please do not removed from the server.

Without removing the bottle, Honda specialist dealer or
Please bring to the repair shop.

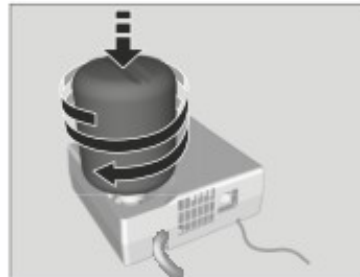


5. while it is with an inner pig of emergency repair agent

At, and screw air compressor to the bottle

Writes.


u screw firmly so that the bottle will not loosen

Please crowded.

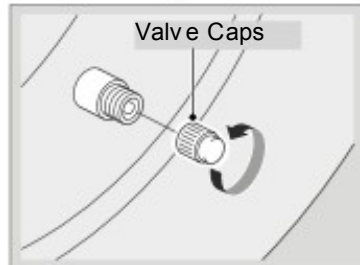

6. I remove the valve cap from the valve.

I continued on next page

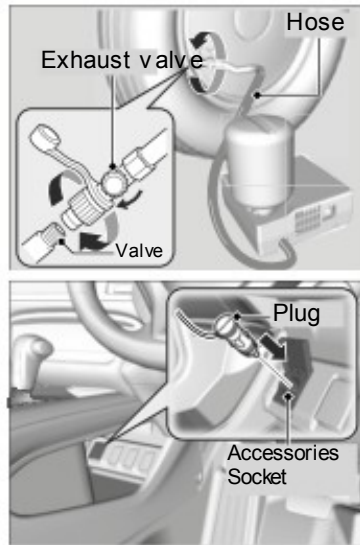

7. I to valve air compressor hose
Komu Flip.

u the exhaust valve is closed, air
Compressors switch OFF is
Please make sure that.

8. plug the power cord of the air compressor
I plugged into the accessory socket, the.

u so as not to pinch the code to doors and windows
Please note.

2 accessory socket P.131

9. I to start the engine.

2 for carbon monoxide and P.56

1 injection of air and emergency repair agent

W

The work at risk of inhaling carbon monoxide
Avoid.

Carbon monoxide is poisonous. Sucking carbon
monoxide the unconscious and writing, you died or
Carry the risk.


And work in a place that has been sealed, the
carbon monoxide there at risk of inhaling
Do not work there

The location of the snow cover and snowfall, and
the engine was left over.

Exhaust gas is retained by the snow around
When coming into the car, in serious injury or
death may lead.

If the engine has been started, the periphery of
Please handle it, such as by removing the snow
range.


When installing the air compressor hose
Is the power of the air compressor OFF in the
Please.

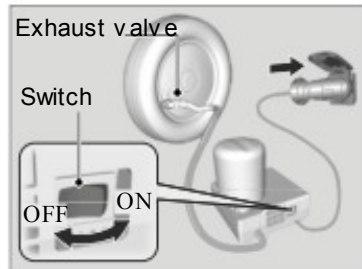

10. switch air compressor ON to injection of air and emergency repair agent
 And then it stuck on the body of the driver's seat next to the air pressure. When you, vibration Or air pressure has been on the label you have you will hear are, but it does not indicate a malfunction. I raise with.
11. the power of the air compressor OFF I want to. 10 When not specified air pressure in minutes, and response
 u air pressure gauge that came with the air compressor. It is not possible to emergency repair due to rapid repair agent.
 At, I will check the air pressure. Honda I will contact the road service and dealer
 Please.
 u When you have too much air, and exhaust valve
 Disconnect the air by loosening the. Emergency repair
 When you check the air pressure gauge tire pressure
 Please note that the boiling over of the agent on the power of the air compressor OFF in the
 Please.
12. plug the power cord of the air compressor Please.
 I removed from the accessory socket, the.
13. Remove the air compressor hose, Honda and tires in road service and dealer
 I attach the hose cap. Or when you request a repair, and tire puncture response
 Please let me know that you have used the rapid repair agent.
 u When removing the air compressor hose
 Be careful to boiling over of emergency repair agent.
 Please.
 The repair agent that is boiling over, wipe with a cloth.
 Please take.
14. The Kagosu the emergency tire puncture repair kit. Is include. Please do not use the power of the other.
 I stored in pace. • During use, the surface of the air compressor is hot
 Will. 15 is not used consecutively minutes
 Please de. Also, if you want to reuse a picture
 Your Kuda A compressor has cooled
 Sai.
 u is removed from the air compressor bottle
 Please do not.

I continued on next page

■ inspection traveling

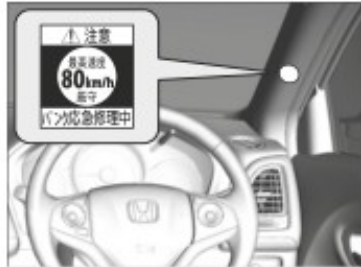

1. I look better the driver, the speed limit seal I put on the position.
2. I will start the inspection run.
 - u Please observe the legal speed. On the highway The 80 km/ h , please adhere to the following
3. 10 minutes or 5 km to a safe place after the vehicle has been fixed. I stop the car.

1 inspection traveling

W

The work at risk of inhaling carbon monoxide. Avoid.

Carbon monoxide is poisonous. Sucking carbon monoxide unconscious and writing, you died or before the vehicle has been fixed.

And work in a place that has been sealed, the carbon monoxide there at risk of inhaling Sai.

The location of the snow cover and snowfall, and the engine has left over.


Exhaust gas is retained by the snow around. When coming into the car, in serious injury or death may lead.

If the engine has been started, the periphery of the Please have it, such as by removing the snow range.

C

It is not affixed a seal pad of the handle. SRS air bag will not function correctly .

Position can not see the speedometer and warning lights not attached to. It will interfere with safe driving.


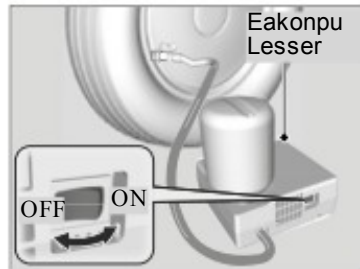


4. pneumatically meter supplied with the air compressor on traveling
- I check the air pressure.
- u the power of the air compressor ON Do not to whether there is forget piling such as compressors, and know
- Please do not. Please check with the hunt.
- Air pressure 130 kP (1.3 kgf/ cm²) less than
- In the case of :
- It is not possible to repair the emergency repair agent.
- It stops driving Honda dealer or
- Please contact the Road Service.
- Air pressure, Oh it stuck on the body of the driver's seat next to
- Place of air pressure that is printed on a label that
- If :
- Emergency repair is complete.
- Air pressure is 130 kP (1.3 kgf/ cm²) or more
- On the label you have stuck on the body of the driver's seat next to
- Field of air below, which are described in Le
- If :
- Specified air using an air compressor
- I raise up to pressure.
- Honda and arrival in professional repair shop or dealer
- Until you wear, step 2 from 4 up to
- Repeat.
- u The highway is 80 km/ h below, legal speed
- Specified observe the degree Honda dealer or
- Repair of the tire, the exchange in the professional repair shop
- Please go.
5. The Kagosupe and air compressor
- I is housed in the nest.

I continued on next page

■ replenishment of tire pressure

Empty tire using an air compressor is equipped, not punctured
It allows you to replenish the atmospheric pressure.

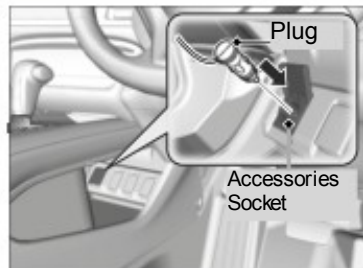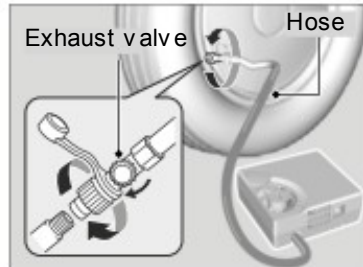


1. I will prepare the air compressor.
2. tires away from the traffic, to replenish the air
I put in a horizontal kit nearby .
3. I remove the valve cap from the valve.
4. hose of the air compressor to the valve
I attach securely .
 - u Check that the exhaust valve is closed
Please do.
5. Pula power cord of the air compressor
The Insert the accessory socket, the Group
Free.
 - u so as not to pinch the code to doors and windows
Please note.
2 accessory socket P.131
6. I to start the engine.
2 for carbon monoxide and P.56

1 replenishment of tire pressure

W

The work at risk of inhaling carbon monoxide
Avoid.
Carbon monoxide is poisonous. Sucking carbon
monoxide unconscious and writing, you died or
Carry the risk.
And work in a place that has been sealed, the
carbon monoxide there at risk of inhaling
Sai.

The location of the snow cover and snowfall, and
the engine was left over.
Exhaust gas is retained by the snow around
When coming into the car, in serious injury or
there may lead.
If the engine has been started, the periphery of
Please check it, such as by removing the snow
range.
The power of the air compressor ON When you, and vibration
You will hear are dynamic, but it is not a failure
You do.



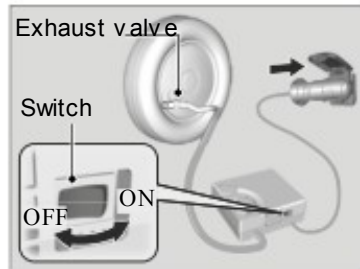


7. switch air compressor ON to
And then it stuck on the body of the driver's seat next to the air pressure
Or air pressure has been on the label you have is air-filled for. At the time of handling, and following
I raise with.
8. the power of the air compressor OFF I want to.
u air pressure gauge that came with the air compressor
At, I will check the air pressure.
u When you have too much air, and exhaust valve
Disconnect the air by loosening the.
9. Stop the engine, the air compressor
And accessories source, the plug of the power cord
I removed from the socket.
10. I remove the air compressor hose.
11. cargo space in the air compressor
For housing.

1 replenishment of tire pressure
compressor is equipped passenger car type
Please note the.
power of air compressor automotive 12V -only
is jodine. Please do not use the power of the other.
• During use, the surface of the air compressor is hot
Will. 15 is not used consecutively minutes
Please de. Also, if you want to reuse a picture
Your Kuda A compressor has cooled
Sai.
When checking pneumatically meter tire pressure,
The power of the air compressor OFF I'm going to
Sai.

Handling of the jack

Kake-kata of jack

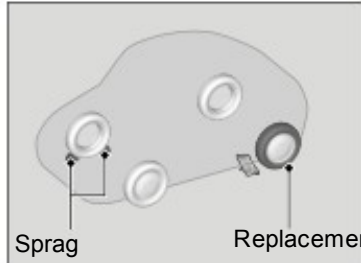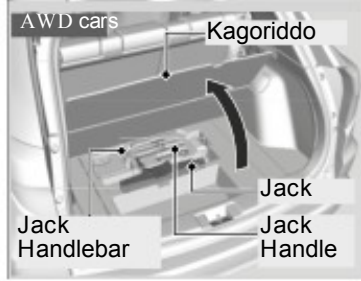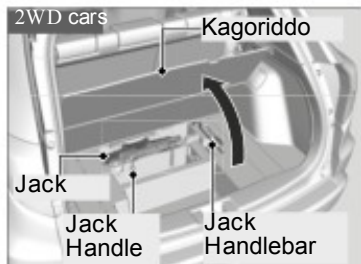



1. ground is hard and non-slip, where a horizontal Kake-kata of jack I stop the car.
2. the select lever P I put on.
3. I bet the parking brake.
4. power mode OFF I to mode.
5. I open the Kagoriddo.
6. di ~Tsu key , di ~Tsu key c tion de le bar over, I take out the jack handle.

7. tire located on the diagonal line of the tire to be replaced. Before and after, I stopped at the wheel, such as stone and 8. Jakkipoi closest to the tire to be replaced I put the jack under the cement.


W
when the car is supported by only a jack
Is, it does not fall under the car.
people the car deviates from the jack, are under
the car, is a risk of injury is serious.

C
Because of safety when using the jack, the next
child
Please always keep the door.
• Do not leave it multiplied by the engine
• Use in a place other than flat ground is hard
Does not
• Do not apply to the jack point other than
• Do not leave it carrying luggage and people
be placed
Please enter the car jack to use
Please do not put things on top of or under the jack
Absent

The more you use the jack that is mounted on the car
Please.
Weight to be supported in the other jack (call load) is
It or missing, the shape does not fit There
Be.

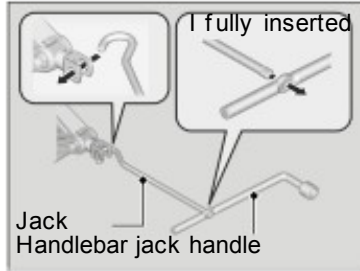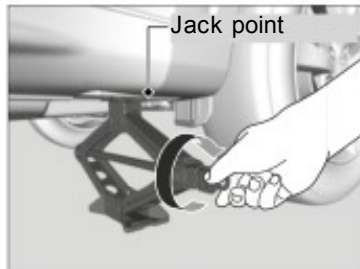

9. the top of the jack against the jack point
 Times in the direction of the arrow part of the figure until you touch
 Be.
 u is jack point into the groove of the jack
 Make sure that you have waiting.

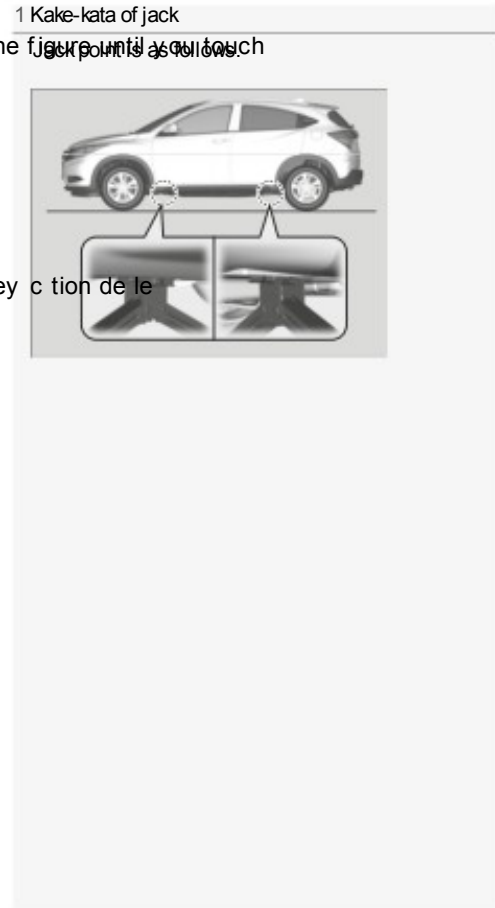

10. di ~Tsu key c tion de le and di ~Tsu key c tion de le
 Use the bar, the tire is off the ground
 I raise the body up.

Engine does not start

Checking the engine state

If the engine does not start, please check the status of the starter.

1 Checking the engine state

If you need to move the car immediately and booth Jump Start by using the battery ter Lets.


2 How Jumpstart P.245

The state of the starter	Confirmation item
Starter does not turn at all ! Rotation of the starter is very slow	Check the brightness of the interior light, such as the lights and interior lights, check the brightness. •such as the interior light is very dark, or if you do not illuminated at all? •If there is no problem with the brightness of the interior lights, such as
I that the battery is rising I will be possible etc.. An item on the fuse To go to the appropriate response by checking Please.	2 exchange and inspection of the ENGINE START / STOP switch P.98 2 ENGINE START / STOP switch P.98 •If the indicator of the key does not light up when you press the button 2 Honda is broken when the battery of the smart key P.243
Starter but turn to normal ...	I perform the steps of the engine start-up Once again, please try to correct the engine start-up operation. 2 start-up of the engine P.147
And that there is a problem with the fuse Is considered. An item on the right To go to the appropriate response by checking Please.	2 fuse I will check the immobilizer system indicator When the immobilizer system indicator light is flashing, you can not start the engine. 2 immobilizer system P.94 I check the amount of fuel Please make sure fuel is entering. 2 fuel gauge P.71 I check the fuse Please check all fuses. 2 inspection and replacement of the fuse P.260

If the engine does not start after you have confirmation of the above, Honda please have it inspected at the dealer.

Honda when the battery of the smart key has expired

ENGINE START / STOP impossible to start the engine and operation of the power mode by
If so, please follow the steps listed below.

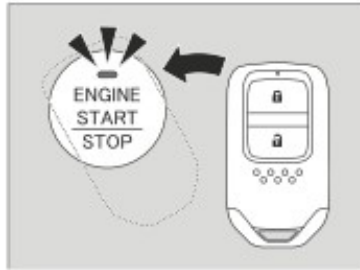

1. **ENGINE START / STOP** press.
 - u buzzer as "Pipipi Pipipi"
 - Sound is about the indicator 30 seconds point
 - Will flash.
2. while the indicator is flashing,
Honda of the smart key Honda emblem
I is brought into contact with the switch.
 - u buzzer sounds and the "beep", the indicator
 - But about 10 I will light seconds.
3. while the indicator is lit, Department
While stepping on Rekipedaru,
ENGINE START / STOP press.
 - u When not step on the brake pedal, and A
 - It becomes a habit Sally mode.

Engine stop event of an emergency

ENGINE START / STOP The stopping of the engine due to no longer possible, the following stop event of an emergency

Please do one.

- **ENGINE START / STOP** About the 2 seconds 1 press.
- **ENGINE START / STOP** Succession 2 press times.

At this time, the steering wheel lock has not been.

The select lever **P** If you are in the power mode OFF will be mode.

The select lever **P** When the non-power mode goes into accessory mode

You.

Except when required, such as an emergency, and during travel

ENGINE START / STOP Please do not press.

Jump-start



How to jump start

■ how to treatment

First, open the hood, check the status of the battery . The battery fluid
Jump Start is not possible until melts battery fluid if you are frozen.

Next, a power source such as a light or audio OFF , please to.

Clip booster cable, ensure that does not protrude in the vibration of the engine
Please be fixed to. Also, please note that the inclusion of cable.

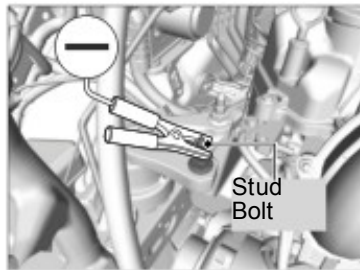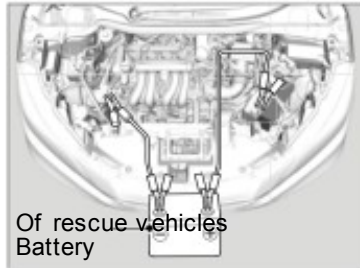

1. the power mode of rescue vehicles and the vehicle is OFF mode I want to do.
2. The battery of the vehicle, a booster cable Lee + I be connected to the terminal.
3. The battery of rescue vehicles, the other end of the cable Lee + I be connected to the terminal.
 - u The rescue vehicles, 12V can be fitted with a battery of Please use the car are.
 - u When using an automotive charger, power The pressure 15V please set below.
4. any more 1 rescue vehicles, the booster cable lines Battery - I connected to the terminal.
5. of the engine of the vehicle, the other end of the cable I connected to the stud bolt.
6. Start the engine of the rescue vehicles, a small number of revolutions will be higher then.
7. I to start the engine of the vehicle.

One way of jump-start

W

Jumpstart, I do carefully with the correct procedure
If you enter the wrong operation of jump start,
Battery exploded, I receive a serious injury
There is a risk.
And far from the battery cigarettes, sparks,
flames, please do the correct procedure.

Advice

temperatures for a long time the battery in place extremely low
When you place over, battery fluid internal freezing
There is a risk of binding.
Jean battery battery acid was frozen
When you start up, that the battery is broken
I There is.

The cold weather, the performance of the battery will decrease.
That it may interfere with engine start
So to check liquid volume, specific gravity, if necessary
Please do the replenishment or electric supply of the liquid.

Metal together, is sure that the connection is secure
Please do.

The stud bolts of the engine other than the cable
Please do not connect.

When the battery fluid is insufficient, it will use
Please do not.

There is a risk of deterioration of the battery internal advances.

I continued on next page

245

Work after the start of the engine

Engine of the vehicle Once started, I remove the booster cables in the following

1. I disconnect the cable from the stud bolts of the engine of the vehicle.
2. relief of battery cars, the other end of the cable - I removed from the jack.
3. the battery of the vehicle + I disconnect the cable from the terminal.
4. Battery rescue vehicles, the other end of the cable + I removed from the jack.

Honda please have it inspected, such as gas stations and nearest dealer.

Work after the start of the engine

W

When handling the battery, do not close the fire Have.

The argument to the flammable gas generated from the battery, battery explosion, serious flaws

There is a risk of death or you can harmed You.

When dealing with batteries, protective clothing, face protection wear, Honda battery dealer Please undergoing maintenance.

I note the handling of the battery fluid.

Battery fluid is a dilute sulfuric acid. Give to the skin or eyes their parts clause so affected

, Please.

- Should, and a large amount of water immediately when it is attached

- When swallowed drinking water immediately with plenty of



The first aid post, and then seek specialist Sai.

Each other terminal of booster cable Na contact Please note that no matter.

Select lever does not move

The select lever, **P** If you no longer locks into place with the position of, in the following manner:
Please cancel.

■ I want to unlock

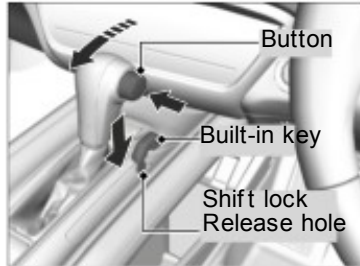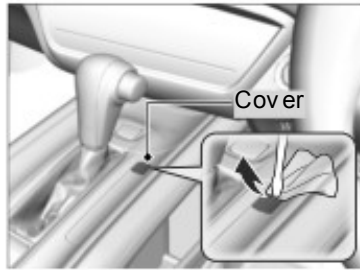

1. I bet the parking brake.
2. power mode OFF I to mode.
3. plated cloth on the tip of a flat head screwdriver thin
It can, and remove the cover of the shift lock release hole.
u and of the figure, the tip of a flat head screwdriver
Remove and put to sea urchin notch cut.
4. Insert the internal key to shift lock release hole
Free.
5. buttons of the select lever while pressing the key
Press the down, the select lever **P** Was placed in a
That.
u lock has been released. Honda sales
At the store, please have it inspected as soon as possible.

Overheat

What to do if you overheat

If any of the following, it is overheating.

- High water temperature warning light (red) or lights, the power of the engine is suddenly fall
- steam has drifted up from the engine room

■ The first thing


1. I stop the car in a safe place immediately .

- u the select lever [P] Put to, and set the parking brake. All evil
Turn off the power to the Sesari to blink hazard flasher.

2 If the vapor is not out : to open the hood while the engine over.

- If steam is coming out : bonnet to stop the engine, steam from no longer out
I open the.

■ be a next

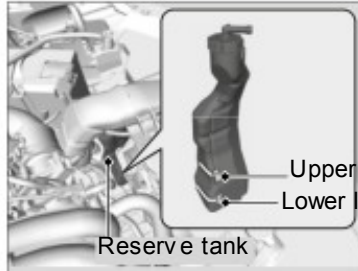

1. Check the operation of the cooling fan, high water temperature warning light goes off.

- u If the cooling fan is not operating,
I will stop the engine immediately .

2. cooling water, hose engine has cooled

- I want to check the leakage of water from such.
- u cooling water when missing, radiator
The supply cooling water to the reserve tank base in
Will. If there is no cooling water, emergency basis
I will supply the water.

■ be the last

- engine had cooled enough, I will check the high water temperature warning light to start the engine. WARNING
If you tell light is off, and then restart the operation. When lit,
Honda Ask dealer for repair.

The one what to do when the overheating

W

If the steam is out, steam is no longer out
You can not open the hood to.

The touch the hot water or steam to spout from the
radiator, there is a risk of sustaining serious injury
You.

The radiator cap to the engine is still hot
Do not remove the-flops.

Contact cooling water spewing, to receive a
serious injury
Please do not have it. Radiator is always enough
water temperature warning
Please remove the cap to cool to.

Advice

When operating in a state of high water temperature warning
light is on, there is a risk of damaging the engine significantly.

If the cooling water is leaking, Honda dealer
please have it serviced.

Lighting of the warning light / flashing

Oil pressure warning light is lit



■ reason for lighting

I will light the oil pressure of the oil that lubricates the engine inside is lowered.

■ be as soon as the lights

1. I stop at a safe location in the horizontal the car immediately.
2. I blink the hazard flasher.

■ be after you stop the car

1. to stop the engine, 3 and allowed to stand for about minutes.
2. to the hood and check the amount of engine oil.
 - u If necessary , please supply the engine oil.
3. Start the engine and check the oil pressure warning lamp.
 - u were off : Please restart the operation.
 - u 10 it does not go off in seconds or less : by stopping the engine, immediately Honda Please ask dealer for repair.

1 hydraulic pressure warning light is lit

Advice

If you rotate the engine with state oil pressure is low, There is a possibility that the engine may be damaged.

Charge warning light is on



■ reason for lighting

I will light the battery has not been charged.

■ be Once lit

Order to reduce the consumption of electricity , air conditioning, etc. Riy ader urosuta and OFF
You have to, as soon as Honda Please ask dealer for repair.

1 charge warning light is on

If you want to temporarily stop, Do not stop the engine Please do not.

When you start the engine, the battery is rapidly

To discharge,

to discharge, please turn the power switch to OFF.

PGM-FI warning lamp lights up / flashes



■ lighting / reason for flashing

Exhaust gas control system of the engine is lit when the abnormal. Engine

This will blink when it detects a misfire state of each of the cylinders down

■ When you lit

To avoid the high-speed running, immediately Honda please have it inspected at the dealer.

■ When you blink

The stop in a safe place free of combustibile materials such as hay, 10 minutes or more the engine

Please wait until it cools to stop.

1 PGM-FI warning lamp lights up / flashes

Advice

PGM-FI When driving the warning light stays on and the

Exhaust to damage the engine and-gas control system

There is a case.

Engine restart after the warning light blinks again

Huang, 50 km / h the nearest at a rate of less than Honda

Please have it inspected dealer to traveling.

Brake warning light (red) is lit



■ reason for lighting

- I will light when the brake fluid has decreased.
- brake distribution feature is turned on at the time of the abnormal.

■ be turns solid running

- by stepping lightly on the brake pedal, to check the pressure of the pedal.
- I will check the brake fluid amount.

1 brake warning light (red) is lit

Immediately, Honda I will ask dealer for repair

Please.

you driving in a state in which the brake fluid has decreased
Rukoto is dangerous.

If there is no resistance on the brake pedal, it immediately

Please stop the car in a safe place to. Required

In response, drop the gear.

ABS If you have turned on at the same time as the warning light,

and, you become unstable vehicle to rake during

You. The Avoid the sudden braking and high-speed driving

Have.

Immediately, Honda I will ask dealer for repair

Please.

(EPS electric power steering) system warning light is lit Was



■ reason for lighting

- EPS is lit at the time of the abnormal.
- The lights would do the rev v ing of the engine parked, I handle heavy
You may take.

■ be Once lit

- The stop in a safe place, to restart the engine

If you want to light up while driving even then, as soon as Honda and inspections at dealer
Please receive.

Electronically controlled parking brake system warning light is on



- reason for lighting

Electronically controlled parking brake lights at the time of the abnormal.

- When you lit

Without using the parking brake, immediately Honda servicing dealer
Please receive.

- lit or electronically controlled parking brake warning light, a point

When lit simultaneously with the flashing

Please release the parking brake manually or automatically. Parkinson
When you are not released ing brake, and stop in a safe place immediately
Te, Honda , please contact the dealer.


Was, when the only electronic control parking brake warning light is off
To immediately Honda please have it inspected at dealer.

If you release the parking brake, an electronic parking brake control operation
Dynamic warning light is lit or together, when it continues to flash, immediately
And parked in a safe place, Honda , please contact the dealer.

The location of the fuse

If an electrical device does not work, the power mode OFF in the mode, fuse switch fuse box in the engine room
I'll make sure you do not have the. Fuse, Hyuzubo~tsu indoor and engine room
I belong to the box.

■ fuse box in the engine room

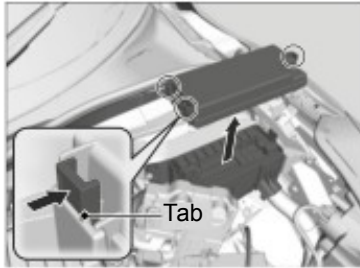

■ fuse box A

I am located in the passenger side of the engine room.
Please open it by pressing the tab.

Fuse box A

The lid of the fuse box, and the location of the fuse
There You will find displays.
In view of the lid and fuse number, I applicable
Please check the location of the fuse.

I continued on next page


■ capacity and equipment of each fuse

Capacity () fuse that is attached to, yes

Fuse is on even if there is no Remarks


There is a case.

Display	Equipment	Capacity	Display	Equipment	Capacity
One	Headlight	20A	21	Backup (main)	10A
Two	Capacitor	(30A)	22	Audio	(10A)
Three	Emergency flashing lights	10A	23	Sub fan	(30A)
Four	Drive-by-wire	15A	24	-	(30A)
Five	Wiper	(30A)	25	Auto Starter	(7.5A)
Six	Brake light	10A	26	-	(7.5A)
Seven	PGM-FI	15A	27 -	-	-
Eight	Ignition carpal	15A	28 -	-	-
Nine	Capacitor	(10A)	29	-	(30A)
Ten	Injection	(20A)	Thirty	PGM-FI sub	(7.5A)
Eleven	Over	(30A)	31	Cooling fan	(7.5A)
Twelve	Cooling fan	30A	32	Right headlight	10A
13	Auto Starter	(30A)		Low beam	
14	MG clutch	7.5A	33	Left headlight	10A
Fifteen	Battery sensor	(7.5A)		Low beam	
Sixteen	Width indicator	10A			
17	-	(10A)			
Eighteen	Horn	10A			
19	Fog lights	(10A)			
Twenty	-	(10A)			

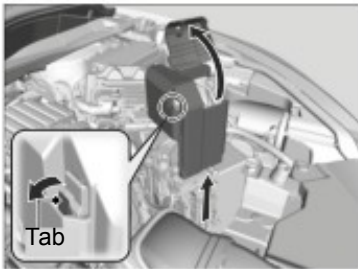


- fuse box B
It comes with the passenger side of the engine room
That, the battery + is located next to the terminal.

 1. + I open the lid of the terminal part.
 2. Remove the cover by pulling the tab.

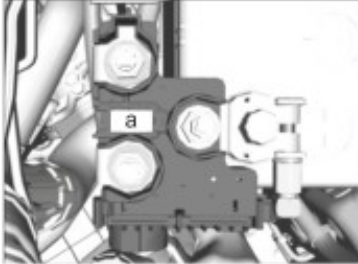


■ capacity and equipment of each fuse

	Display	Equipment	Capacity
a		Battery main	100A
b		RB Main 1	70A
c		RB main 2	80A
d		CAP main	70A

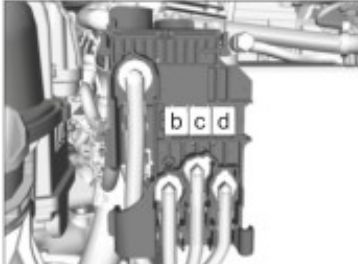

I continued on next page

■ fuse box in the room the driver's side

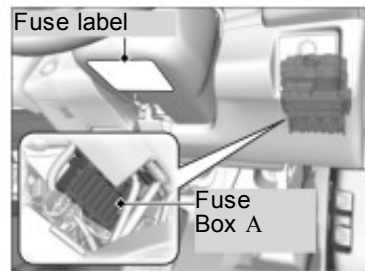

- fuse box A
 - Of the instrument panel of the handle right
 - Located on the back.
 - u I can confirm from under.

1 fuse box in the room the driver's side

Fuse box A

The label on the bottom of the column cover,
You will find and display the location of the fuse.
In the number of labels and fuse number, I applicable
Please check the location of the fuse.

■ capacity and equipment of each fuse
 Capacity () fuse that is attached to, yes
 Fuse is on even if there is no Remarks
 There is a case.



Display	Equipment	Capacity
One	Door lock	20A
Two -	-	-
Three	Honda smart key System	(10A)
Four	Left the door unlocked	10A
Five	Right door unlock	10A
Six	-	(10A)
Seven	-	(10A)
Eight	Driver's seat Power window	20A
Nine	Passenger seat Power window	20A
Ten	Passenger side Rear power window	20A

Display	Equipment	Capacity
Eleven	Driver side Rear power window	20A
Twelve	Left door lock	10A
13	Right door lock	10A
14	-	(10A)
Fifteen	Right headlight High beam	10A
Sixteen	-	(7.5A)
17	-	(20A)
Eighteen	-	(20A)
19	Seat heater	(20A)
Twenty	-	(10A)
21	-	(10A)
22	Washer	15A
23	Rear wiper	(10A)
24	Air conditioner	7.5A
25	-	(7.5A)
26	Starter	(7.5A)
27	ABS / VSA	7.5A
28	SRS air bag system	10A
29	Left headlight High beam	10A
Thirty	Generator	10A

Display	Equipment	Capacity
31	Relay	10A
32	Fuel Pump	15A
33	-	(7.5A)
34	Meter	7.5A
35	Mission solenoid	7.5A
36	Accessory socket (front console)	20A
37	ACC	7.5A
38	-	(7.5A)
39	Option	10A
Forty	Rear wiper	10A
41 -	-	-
42 -	-	-

: by type and options, equipment is different.

I continued on next page 257

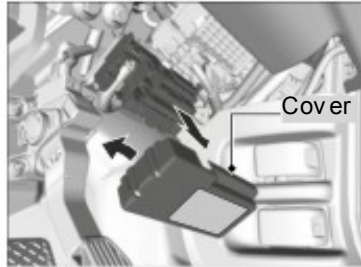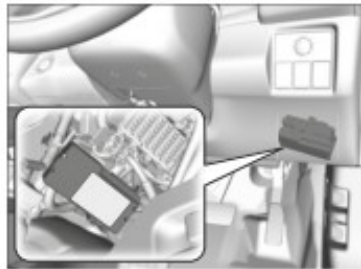

■ fuse box B

Fuse box in the room A can be found under the. Please open the cover.

1 fuse box in the room the driver's side

Fuse box B

The cover of the fuse box, and place of the fuse Where is Yes to display.

In the number of cover and fuse number, I applicable Please check the location of the fuse.




■ capacity and equipment of each fuse
Capacity () fuse that is attached to, yes
Fuse is on even if there is no Remarks
There is a case.

	Display	Equipment	Capacity
		EPS	70A
		Ignition (main)	30A
One		Fuse box (Main 2)	50A
		ABS / VSA	40A
		Fuse box (Main)	30A
		Fuse box (main 3)	40A
		Riyadef urosuta	30A
		Electronic control parking	30A
		Brake	30A
Two		Ignition (main)	30A
		Heater motor	40A
		Electronic control parking	30A
		Brake	30A
		AWD	30A

	Display	Equipment	Capacity
Three-		-	-
Four -		Over	-
Five		+ B ABS / VSA	30A
Six		Windshield heat rays	(10A)
Seven		-	(20A)
Eight -		-	-
Nine		Interior light	7.5A
		Accessory socket	
Ten		(center console Rear box)	(20A)
Eleven-		-	-
Twelve-		-	-
13		Heated door mirrors	(10A)
14		Over	(7.5A)
Fifteen-		Over	-

: by type and options, equipment is different.

Inspection and replacement of the fuse

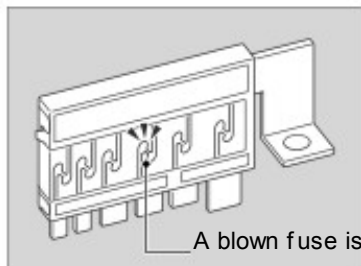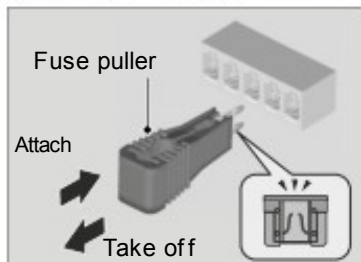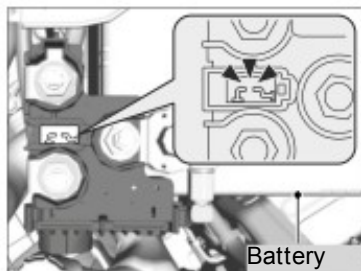

1. power mode OFF and the mode, head
All accessories and light OFF to
To.
2. the battery + the cover next to the terminal
Open.
3. I check the internal fuse.
 - u If you have a fuse that has expired, Honda
Please ask dealer for repair.
4. fuse box in the engine compartment A of
I remove the lid.
5. I check the internal fuse.
 - u If you have a fuse that has expired,
Pull out a fuse puller, even new
Please replace with the.
6. I check the fuse of a large room.
 - u If you have a fuse is blown, plastic
Remove the screw with a screwdriver, and also new
Please replace with the.
7. I check the fuse small room.
 - u If you have a fuse that has expired,
Pull out a fuse puller, even new
Please replace with the.

1 exchange and inspection of the fuse

Advice

If you replace the fuse larger than the specified capacity, Risk of damage to the electrical system will be higher. After replacing, so that it expires fuse immediately In these cases, Honda I will have it inspected by dealer Sai.

It was replaced with a fuse of the same specified capacity fuse , Please.

It has been described in the installation location of the fuse Please be careful that.



Fuse box in the engine room A in the, Fuse puller is attached to the back of the lid. Fuse puller, small Hugh you are off Use when removing the figure.

Traction of emergency

Traction it, ask the professional 2WD cars front wheel or four-wheel, AWD di four-wheel vehicles is
Please follow up blood.

■ If you are forced to tow

When performing the tow rope and grounds the forced four-wheel, it will be performed in the following ways:
Please.

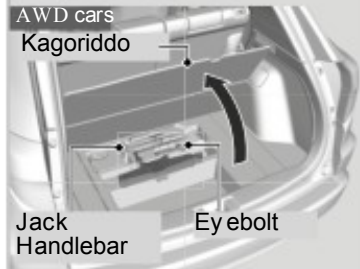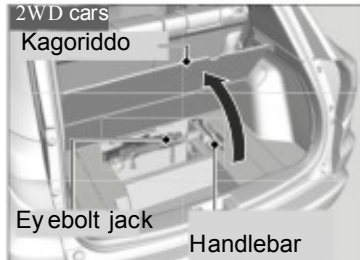


1. transmitter from the bottom of the engine room
Tion fluid (oil) and is leaking
I will confirm that no.
u If there is an abnormality, the front-wheel or Does not have.
The Do not attempt to tow by ground
Sai.
2. opened the Kagoriddo, jack Hand
I take out the eye bolt and bar.

The abnormality in the power transmission device, such as
when the wheel does not work
When you believe that there is, 2WD cars also four-wheel
Front wheels, AWD vehicles towing Lift the four-wheel
Please


Advice

You can lift a car bumper, towing
And, bumper will be damaged significantly.
Bumper is able to support the weight of the car


Does not have.

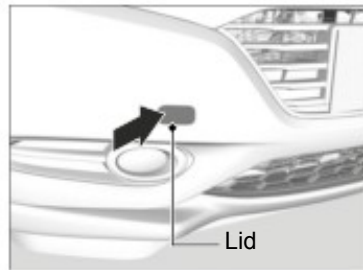

3. Remove by pushing the left side of the lid.

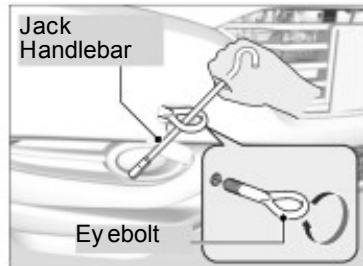

4. by hand to the extent not rattle the eyebolt
After tightening, jack handle bar
At I tighten securely .

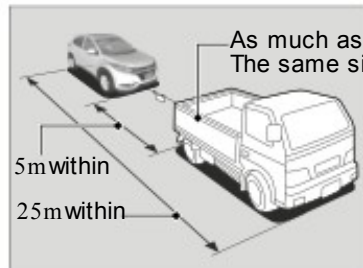

5. was applied to the eye bolt rope, rope center
6. the select lever over the engine To
then, about 5 to hold seconds.

u If the engine does not start, the Power
Or accessories mode mode is ON
I want to mode.

1 tow of emergency

Advice

It is not multiplied by the rope at the other eyebolt
Please de.
There are cases where the body is damaged, it is deformed.

In the long downhill, and Department of the brake temperature
Note there is a possibility that the lake will not work
At, it is sure to ask them to tow the tow truck
Have.

Advice

traction while the engine is stopped,
Please note the following.
• Since the booster of the brake does not work, parts
Effectiveness of the lake is poor
• Power unit of the power steering is activated Na
Fried steering becomes heavy
• there is a risk of transmission may be damaged

7. the select lever **N**(neutral) I want to.

8. I to release the parking brake.


9. tow.

u tow in, so as not to slacken the rope with care to the brake light of the car in front

Please.

u speed 30km/ h or less, mileage 80km Please towing limit.

■ **If you want to tow another vehicle forced**

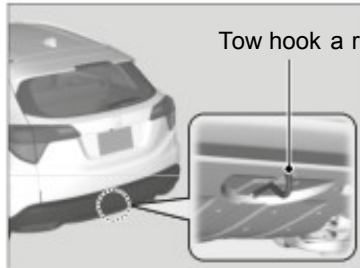

Tow hook a rope to tow hooks on the bumper under

When performing the towing of other vehicles forced rear

Please over.

1 If you are towing another vehicle forced

Advice

Do not put the rope at the tow hook other than

Please do not.

There are cases where the body is damaged, it is deformed.

When you tow with a rope or chain, such as

, Please wrap the cloth in part to hit to the body.

When you tow as it is, be scratched on the body

I There is.

Please avoid towing the car heavier than the vehicle.

The idling stop system OFF in the

Please.


2 idling stop system OFF switch

P.160

when the tail gate does not open

■ What to do if you do not want to open

Event, when it is no longer able to open the tailgate, and next as first aid
Please open way of.

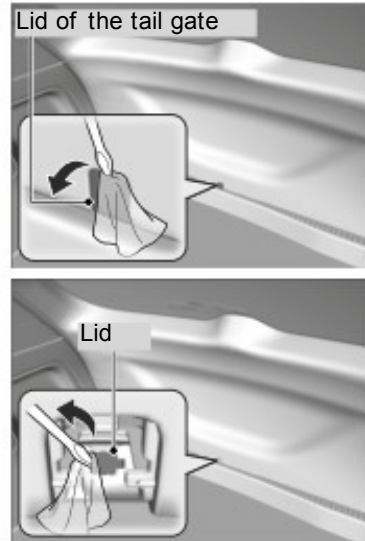


1. to the lid of the tailgate, and minus Dora
Insert the tip of the optic, and remove.
u so that the lid is not scratched, driver
Please wrapped in a cloth.
2. to the lid of the lock part of the tailgate,
Insert the tip of a flat head screwdriver,
I open the lid.
u so that the lid is not scratched, driver
Please wrapped in a cloth.

The one what to do if that does not open

C

When opening from inside the tailgate, oxalic
Enough space in the rear and above the car and
the safety of the range.
Make sure that there is the nest.
The late to the injury which is not likely to run into
trees and people

The first aid post, Honda by receiving inspection dealer
Please.

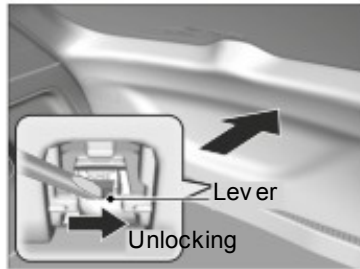

3. Move to the right lever using a screwdriver
In the state of the remains, open it and press the tailgate Kick.

Material

In this chapter, information about the specifications are listed.

Specification

267


266

Specification

■ Specifications

Name	Vu-ezeru
Displacement	1,496 cm ³
Car body shape	4 -door station wagon
Riding capacity	5 people

■ regulation

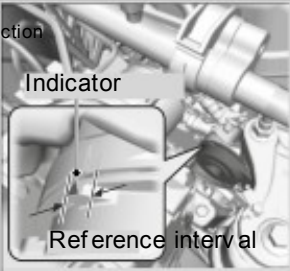Of the belt		
Amount of deflection		
Spark plug	NGK	DILZKAR7C11S
	DENSO	DXE22HCR11S
Gap of the electrode	Reference value	1.0-1.1 mm

Spark plug is using iridium plug.
Please see the "Maintenance Notes" is time to replace.

■ confirmation

Brake pedal	Play	1-5mm
	Gap between the floorboards	125mm or more 124mm or more ※ 2 [about (20kgf) 200N forces]
	With carpet	114mm or more ※ 1
	Gap	113mm or more ※ 2 (reference value about (20kgf) 200N forces)

※ 1: Normal pad type
※ 2: Sports pad type

■ fuel

Fuel type	Unleaded regular gasoline
	Regular Bio-mixed gasoline (E10 / ETBE22)
Fuel tank capacity	47 ℓ

■ air cleaner element

Type	Wet type
------	----------

■ Battery

Capacity / type	36AH (5) / 55B24L
-----------------	-------------------

■ washer fluid

Tank capacity	2.0 ℓ
---------------	-------

■ bulb

Headlight ※ 1	Low beam	LED
	High beam	12V-60W
Headlight ※ 2	12V-60 / 55W	
Front direction indicator / front hazard flasher (orange)	21W-1	
Width indicator	LED ※ 1	
	12V-5W ※ 2	
Fog lights	12V-35W	
Side repeater / aspect hazard flasher	LED	
Brake light / taillight	LED	
Rear direction indicator / rear hazard flasher (orange)	21W-1	
Reversing lights	12V-16W	
High-mount stop lamp	LED	
Number-plate light	LED	
Cargo space lighting	12V-5W	
Map lamp	LED	
Interior light	LED	
Vanity mirror lighting ※ 3	12V-2W	

※ 1: auto light vehicles
※ 2: auto light vehicles without
※ 3: vanity mirror lighting vehicles

Specification

■ brake fluid

Specified liquid Honda genuine brake fluid
DOT3 or DOT4

■ transmission fluid

Specified liquid Honda genuine cars 3.4 (replacement)
Ultra AWD cars 3.9 (replacement)
HCF-2

■ differential oil

AWD cars only

Specified liquid Honda Genuine Ultra DPSF-II
Defined amount 1.2 (replacement)

■ Recommended engine oil

Honda genuine	ULTRA NEX	※ 1
Engine	ULTRA Green	
Oil	ULTRA LEO	API SN grade SAE 0W-20
Oil change time	3.1 l	
Defined amount	Oil, Oil	3.3 l
	Luther simultaneous exchange during	

※ 1: It is the oil that has excellent fuel economy the most.

■ cooling water

Specified liquid Honda genuine Ultra e Coolant
Specified concentration 50%
Defined amount when replacing : the reserve tank and 0.475 l (including)

■ tire

Size	215 / 60R16 95H ※ 1
	215 / 55R17 94V ※ 2
Air pressure (KPa [kgf / cm ²])	Front wheel 210 [2.1] / rear wheel 200 [2.0] ¹ Front wheel 210 [2.1] / rear wheel 190 [1.9] ¹ Front wheel 220 [2.2] / rear wheel 190 [1.9] ※ 2
Rim size	16 × 7J ※ 1 17 × 7J ※ 2

※ 1: 7 -speed manual shift mode vehicles without

※ 2: 7 -speed manual shift mode vehicles

※ 3: 2WD cars

※ 4: AWD cars

Number

7 -speed manual shift mode	156
Shift indicator / M (7 -speed manual Shift mode) indicator	67

A

A / C (air conditioning)	135, 220
ABS (anti-lock brake system)	175
ABS warning light	60, 175
A (automatic transmission) ..	153
AVG (average fuel consumption display)	73

C

CRUISE CONTROL (cruise control)	165
--------------------------------------	-----

E

ECON switch	164
ECON indicator	67
ENGINE START / STOP switch	98
How to switched mode power	98
EPS (electric power steering) system	
Warning light	62, 251
ETC OBE	Separate volume

H

Honda smart key	78, 79
Honda Smart Key system warning light	Sixty
Honda smart key battery warning light	63
Honda warning light taking away the smart key	64
Engine stop event of an emergency	244
Battery replacement procedures	218
Honda warning light taking away the smart key	64

I

ISOFIX	52
--------	----

M

M (7 -speed manual shift mode) indicator ...	155
MIST	105

P

PGM-FI warning light	59, 250
----------------------	---------

R

RANG (cruising distance display)	73
REAL TIME AWD (all-wheel Driving) system	169
AWD system warning light	64

S

SRS air bag	35
Air bag system warning light	42, 60

V

VSA (Vehicle Stability Assist)	168
VSA OFF warning light	61
VSA warning light	61, 168

W

W (watts) number	267
--------------------	-----

A

Armrest	122
Front seat	122
Rear seat	122
Idling stop system	160
Idling stop system warning light	63
Idling stop indicator	68
Eyebolt	229, 262
Aqua Clean mirror	227
Accessories	191
Accessory socket	131
For safe drive	23
View Safety	19
Checklist for safety	23

Anti-lock brake system (ABS)
 ABS warning light
 Ambient meter

60, 175
 Five

Lee

Risk of carbon monoxide
 Immobilizer system
 Immobilizer system indicator
 Illumination control
 Information Display

56
 94
 66
 107
 72

Cormorant

Blinker switch (direction indicator)
 Windshield washer
 Supply of windshield washer fluid
 Windshield washer switch
 Opening and closing of the window
 Wear indicator
 Operation
 Start-up of the engine
 Cruise control
 Shifting operation
 Brake operation

101
 197
 105
 96
 214
 147
 165
 154, 158
 170

Eh

Air cleaner element

267

Air conditioner
 Air clean filter
 How to use automatic air conditioning
 Taking of frost and fogging of the window
 Air-bag
 SRS air bag
 Air bag system warning light
 Airbag system fault diagnosis recording device
 Cleaning the air bag
 Side air bag
 Side curtain air bag
 Eco Assist System
 Emergency stop signal
 Engine oil
 Recommended engine oil
 Oil pressure warning light
 Start-up of the engine
 Engine does not start
 Jump-start
 Maintenance in the engine room
 Supply of windshield washer fluid
 Maintenance items in the engine room ...
 Recommended engine oil
 I open the hood
 Supply and inspection of cooling water
 Engine cooling water

135, 220
 220
 136
 138
 35
 35
 42
 Twenty
 43
 38
 Forty
 Five
 177
 197
 197, 268
 58, 249
 147
 242
 245
 195
 197
 195
 197
 196
 248
 268

Oh

Overtaking signal (passing)
 Emergency repair agent (tire puncture)
 Audio device
 Auto air conditioner
 Auto door lock / auto door unlock
 Customize
 Automatic brake hold
 Automatic brake hold system
 Indicator light
 Automatic brake hold indicator ..
 Auto light control warning light
 Overheat
 All Wheel Driving (AWD)
 System
 Odometer

102
 230
 143
 136
 88
 89
 172
 70
 61
 248
 169
 73

Mosquitoes

Cargo space lighting
 Replacing the light bulb
 Cargo floor box
 Outside temperature display
 Key (key)
 Gasoline

125
 208
 128
 74
 77
 188, 267

Ki

Key

Honda smart key	78, 79
Honda is the battery of the smart key	
When you lose	243
Prevention device confinement key	84
Key number tag	78
Types and functions of key	77
Keyless entry	80
Door does not open in keyless entry	Eighteen
Rear door will not open	17
Battery replacement procedures	218
Built-in key	77
Prevention device confinement key	84
Key number tag	78
Keyless entry	80
Kickdown	153
Refueling	188
How refueling	188
Specified fuel	188, 267
Fuel gauge	71
Fuel level warning light	Sixty

Click

Air pressure	268
Inspect the pneumatic measuring instrument	214
Grab rail	Three
Creep phenomenon	153

Cruise control	165
Cruise control indicator	67
Cruise main indicator light	67
Remodeling of the car	191
Glove box	126

Ke

Instrument	57
Warning light	58
ABS warning light	60, 175
AWD system warning light	64
EPS system warning light	62, 251
Honda Smart Key system warning light	Sixty
Honda smart key battery warning light	63
Honda warning light taking away the smart key	64
PGM-FI warning light	59, 250
VSA OFF warning light	61
VSA warning light	61
Idling stop system warning light	63
Air bag system warning light	Sixty
Auto light control warning light	61
High water temperature warning light	62
Seat belt non-wear warning light	59
Charge warning light	59, 249
Starter system warning light	62
Select position P Move warning light	63
Electronically controlled parking brake warning light	58

Electronic parking brake control system	
Warning light	58, 252
Door / tailgate open warning light	61
Transmission warning light	59
Fuel level warning light	Sixty
Brake warning light (red)	58, 250
Brake system warning light (orange)	58
Oil pressure warning light	58, 249
Lighting of the warning light / flashing	249
Tow	261

Co

Exchange

Cargo space lighting bulbs	208
Reversing light bulb	206
Rear direction indicator / rear hazard flasher	205
Interior light bulb	208
Car width bulbs	202
Brake light / tail light bulb	205
Front direction indicator /	
Front hazard flasher bulbs	201
Side direction indicator /	
Lateral hazard flasher bulbs	204
High-mount stop lamp bulb	207
Vanity mirror lighting bulbs	208
Number bulbs	207
Fog light bulb	203
Headlight bulb	198
Map lamp bulb	208

Wiper blade rubber	209, 211
Tool	229
High water temperature warning light	62
Cruising distance display	73
Reversing lights	206
Rear direction indicator / rear hazard flasher	205
Coat hook	132
Console box	
Center console box	127

Support

For service diagnostic recording device	Twenty
Side air bag	38
Side curtain air bag	Forty
Sun visor	Three

Shea

Adjustment of the seat	113
Armrest	122
Front seat	113
Headrest	120
Rear seat	115
Seat heater	133
Seat belt	25
Anchor point	34
Wearing of seat belts	28
Inspection of the seat belt	34
Seat belt non-wear warning light	59

Seat-belt pretensioner	27
Seat belt reminder	26
Seat belt during pregnancy	
How to wear	33
Time settings	76
Indoor Equipment	126
Interior light	123
Specified fuel	188, 267
City brake active system	178
City brake system active indicator ..	69
Shift indicator	155
Shift indicator / <u>M</u> <input type="checkbox"/>	
(7 -speed manual shift mode)	
Indicator light	67, 155
Shift switch	157
Shifting operation	154, 158
Cleaning the outside of the vehicle	224
Jack	229, 240
Jack handle bar	229
Jack handle	
(wheel nut wrench)	229
Cleaning in the car	222
Width indicator	202
Jump-start	245
Charge warning light	59, 249
Instantaneous fuel consumption display	73
Specification	267
Impact sensing door unlock system	87
Shoulder anchor	Thirty

Graphics

Switch

ECON switch	164
ENGINE START / STOP switch	98
Illumination control	107
Automatic brake hold	
Switch	172
Select / reset knob	72, 76, 107
Parking brake switch	170
Fog light switch	103
Windshield hot wire switch	108
Ring dial all headlight Les	104
Direction indicator (turn signal switch)	101
Light Switch	102
Riyadefurosuta	108
Wiper / washer	105
Starter system warning light	62
Steering	109
Snow tire	217
Spark plug	267
Speedometer	71

Se

Cleaning	222
Brake light	205
Security system	94
Immobilizer system	94
Security Alarm System	94

Select position	154, 158
Select position	
Indicator light	67, 155, 159
Select position	Move warning light 63
Select lever	
Select lever does not move	247
Operation of the select lever	155, 159
Center console box	127
Front direction indicator / front hazard flasher	201

Seo

Side repeater / aspect hazard flasher	204
---------------------------------------	-----

Data

Tire	213
Wear indicator	214
Specified air pressure	268
Inspection of the tire	213
Tire rotation	215
Emergency tire puncture repair kits	230
Winter tires	217
Punk	230
Tire chain	217
Tachometer	71

Chi

Chain	217
Child seat	44
Junior sheet	54
Child seat of infant	45
Infant child seat	46
Childproof	87
Parking or stopping operation	185

Te

Stop display plate holder	134
Low water temperature indicator	65
Disclosure of data	Twenty
Opening and closing of the tailgate	92
when the tail gate does not open	264
Door / tailgate open warning light	23, 61
Defroster	138
Riyadefurosuta	108
Spark plug	267
Electronically controlled parking brake	170
Electronically controlled parking brake warning light	58
Electronic parking brake control system	
Warning light	58, 252
Electronic control brake assist	176
Battery replacement	218

To

Unlocking and locking of the door	77
Prevention device confinement key	84
Key number tag	78
Types and functions of key	77
Keyless entry	80
Door does not open in keyless entry	Eighteen
Rear door will not open	17
Locking of the door outside the vehicle / unlocking	86
Locked in the car / unlocking	85
Impact sensing door unlock system	87
Childproof	87
Door / tailgate open warning light	23, 61
Door mirror	111
Winter tires	217
Tire chain	217
Clock	76
Top Tether Anchorage	53
Top Tether Anchorage symbol	53
Top tether strap	53
Driver	229
Troubleshooting	
The parking is also stepping on the accelerator pedal	
Can not be released in the automatic brake	Eighteen
When you press the parking brake switch	
Can not be released parking brake	Eighteen
Buzzer sounds and opened the driver's door	Eighteen
Engine does not start	242
Overheats	248

Door does not open in keyless entry
 Warning lamp lights up / flashes
 I want to tow
 Rear door will not open
 Want to jump-start
 Select lever does not move
 Buzzer comes to traveling
 You can use the high-octane gasoline ?
 Punctured
 I was blown fuse
 Sound is when stepping on the brake
 It vibrates and hit the brakes
 Transmission warning light
 Transmission fluid
 Tripmeter
 Drink holder

Na

Built-in key
 Navigation system

Ne

Fuel
 Fuel gauge
 Fuel level warning light

Na

Eighteen
 249
 261
 17
 245
 247
 Eighteen
 Eighteen
 230
 253
 Eighteen
 17
 59
 268
 73
 129
 Power mode
 Power mode auto-off function
 Power mode warning buzzer
 How to switched mode power
 Punk
 Number-plate light
 Handle
 Handle position adjustment lever
 Handle operation indicator
 General-purpose ISOFIX child seat

Separate volume

Punk

Number-plate light

Handle

Handle position adjustment lever

Handle operation indicator

Sixty

General-purpose ISOFIX child seat

49

68

109

109

68

68

65

65

68

65

65

65

65

65

65

65

65

65

65

65

65

Arsenate

Heated door mirrors
 Hazard flasher switch
 Taillight
 Fuse
 The location of the fuse
 Inspection and replacement of the fuse
 Indicator light
 ECON indicator
 Idling stop indicator
 Immobilizer system indicator
 Automatic brake hold system
 Indicator light
 Automatic brake hold indicator ..
 Cruise control indicator
 Cruise main indicator light
 City brake active system
 Indicator light
 Shift indicator / M
 (7 -speed manual shift mode)
 Indicator light
 Security Alarm System
 Operating indicator
 Select position
 Indicator light
 Low water temperature indicator
 High beam indicator
 Handle operation indicator
 Fog lights indicator

108

Cover Back

205

253

253

260

65

67

68

66

70

70

67

67

69

67

67

69

69

98

230

207

109

109

68

49

68

68

65

65

65

Brake pedal depression shortage indicator	68	Sound is when stepping on the brake	Eighteen		
Direction indicator / hazard flasher	65	It vibrates and hit the brakes	17	Wheel size	268
Lights indicator	65	Brake system warning light (orange)	58	Wheel nut wrench	
		Brake pedal depression shortage indicator	68	(jack handle)	229
		Brake fluid	268	Direction indicator (turn signal switch)	101
		Brake warning light (red)	58, 250	Direction indicator / hazard flasher	65
		Windshield hot wire switch	108	Horn switch	One
		Front seat	113		
		Armrest	122		
		Headrest	120		
Off				Ma	
Booster cable	245			Flat-blade screwdriver	229
Fog lights	203			Master door lock switch	86
Fog light switch	103			Map lamp	124
Buzzer				Map lamp bulb	208
Buzzer sounds and opened the driver's door	Eighteen				
Buzzer comes to traveling	Eighteen				
Opening the fuel lid	188	F			
Prism under-mirror	112	Average fuel consumption display	73		
Brake warning light (red)	58, 250	Headlight	102, 227		
Brake system	170	Overtaking signal (passing)	102	Mi	
AB (anti-lock brake system) ...	175	Replacing the light bulb	198	Mirror	110
The parking is also stepping on the accelerator pedal		High beam	102	Door mirror	111
Can not be released in the automatic brake	Eighteen	High beam indicator	65	Vanity mirror	Three
Emergency stop signal	177	Lights indicator	65	Prism under-mirror	112
Automatic brake hold	172	Low beam	102	Room mirror	110
City brake active system	178	Headlight auto-off function	102		
Electronically controlled parking brake	170	Ring dial all headlight Les	104		
Electronic control brake assist	176	Headrest	120		
When you press the parking brake switch		Front seat	120	Main	
Can not be released parking brake	Eighteen	Rear seat	120	Meter	8, 71
Foot brake	174			Information Display	72
Brake warning light (red)	58, 250			Speedometer	71
Brake system warning light (orange)	58			Tachometer	71
				Fuel gauge	71

Maintenance	192
Honda smart key	218
Caring for air conditioning	220
Maintenance in the engine room	195
Cleaning	222
Maintenance and inspection of the tire	213
And Maintenance Guidelines	194
For safe maintenance	194
Inspection and maintenance of the lights	198
Maintenance and inspection of the wiper blade	209

Yu

Oil pressure warning light	58, 249
Toll Collection System (ETC) OBE	

La

Light Switch	102
Overtaking signal (passing)	102
High beam	102
High beam indicator	65
Fog lights indicator	65
Lights indicator	65
Low beam	102
Inspection and maintenance of the lights	198
Cargo space lighting bulbs	208
Reversing light bulb	206
Rear direction indicator / rear hazard flasher	205

Interior light bulb	208
Car width bulbs	202
Brake light / tail light bulb	205
Front direction indicator / Front hazard flasher bulbs	201
Side repeater / aspect hazard flasher Light bulb	204
High-mount stop lamp bulb	207
Vanity mirror lighting bulbs	208
Number bulbs	207
Fog light bulb	203
Headlight bulb	198
Map lamp bulb	208
Radiator	248

Re

Reserve tank	248
Rim size	268
Rear seat	115
Armrest	122
Headrest	120
Riyadefurosuta	108
Wide rear camera system	187

Le

Room mirror	110
-------------	-----

Le

Cooling water	248, 268
Overheat	248
High water temperature warning light	62
Low water temperature indicator	65
Refill	248

Russia

Lower Anchorage	52
Low beam	102
Replacing the light bulb	198

Wa

Wiper / washer	105
Wiper blade rubber	209

お車についてのお問い合わせ、ご相談は、まず Honda 販売店にお気軽にご相談ください。
下記アドレスより最新の Honda 販売店を検索することが可能です。

Honda ホームページ <http://www.honda.co.jp/>

(Honda ホームページにある検索ボックスに『販売店』と入力してください)

携帯電話からは、携帯電話用 Honda ホームページをご覧ください。

<http://dream.honda.co.jp/dealerlocator/>

※：QR コード読み取り機能付きの携帯電話をお持ちの場合は、右の QR コードをご利用ください。
ご利用にあたっては、お持ちの携帯電話取扱説明書をご確認ください。
QR コードは (株) デンソーウェブの登録商標です。



お問い合わせ、ご相談は、全国共通のフリーダイヤルで下記のお客様相談センター
でもお受け致します。

本田技研工業株式会社 お客様相談センター

フリーダイヤル 0120-112010 イフレイオ

受付時間 9:00～12:00 13:00～17:00

〒351-0188 埼玉県和光市本町8-1

所在地、電話番号などが変更になることがありますのでご了承ください。

お車に関してお問い合わせいただく際は、お客様へ正確、迅速に対応させていただくために、
あらかじめ、お手元にお車の車検証をご準備いただき、下記の事項をご確認のうえ、ご相談
ください。

- ① 車検証記載事項：車両型式、車台番号、エンジン型式、登録番号、登録年月日
- ② 車種名、タイプ名、走行距離 ③ ご購入年月日 ④ 販売店名